
CLEANING AND CARE

SHADES SHOULD BE KEPT IN THE CLOSED OR UP POSITION WHEN NOT IN USE, TO MAINTAIN PLEAT RETENTION AND MINIMIZE DIRT AND SOIL BUILDUP. DO NOT STORE SHADES IN THE DOWN POSITION. THIS MAY CAUSE SOME LOSS OF PLEAT RETENTION IF SHADES ARE NOT OPERATED ON A CONSISTENT BASIS.

NOTE: IF YOUR RECREATIONAL VEHICLE MUST BE STORED FOR AN EXTENDED PERIOD OF TIME, STORE SHADES IN THE UP POSITION AND COVER YOUR WINDOWS WITH ADDITIONAL PROTECTION (EXAMPLE: CUT OUT CARDBOARD)

SHADES CAN BE EASILY CARED FOR BY SIMPLY DUSTING OR USING A VACUUM CLEANER ATTACHMENT. DO NOT USE SPOT REMOVER, HOUSEHOLD CLEANERS OR DETERGENTS TO REMOVE SOILED SPOTS, AS THESE MAY CAUSE DAMAGE TO FABRIC OR LOSS OF COLOR FROM FADE.