



Wiring Guide For D.C. Power Units



PLEASE REMOVE ALL RINGS, WATCHES AND JEWELRY PRIOR TO DOING ANY ELECTRICAL WORK

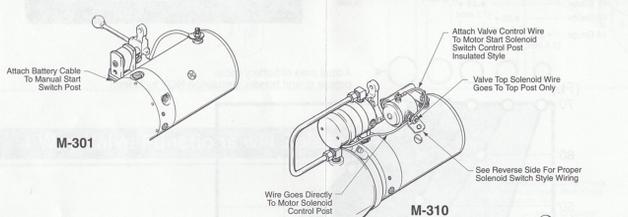


Units w/Manual Valves

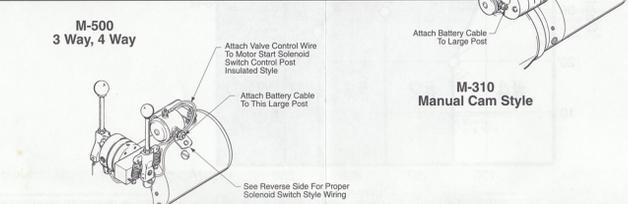


3 Way Units w/1 Solenoid Valve

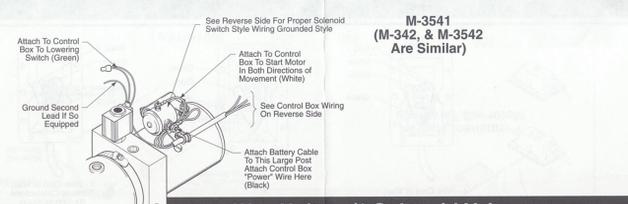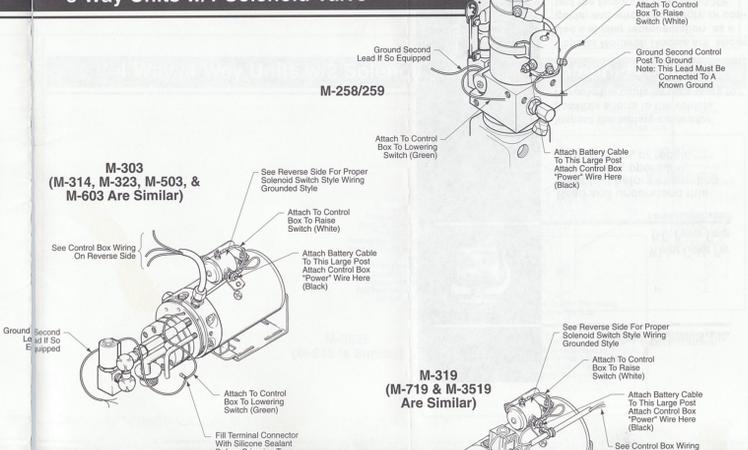


4 Way Units w/1 Solenoid Valve

 


4 Way/3 Way Units w/4 Solenoid Valves

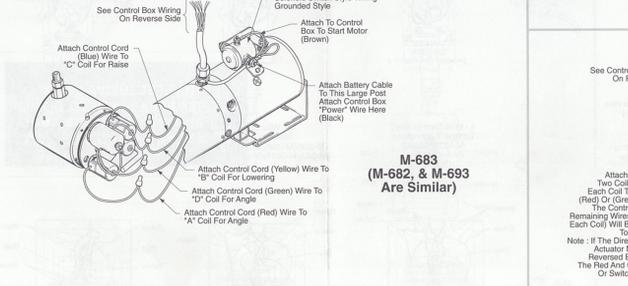


4 Way Valve Functions w/4 Solenoid Valves

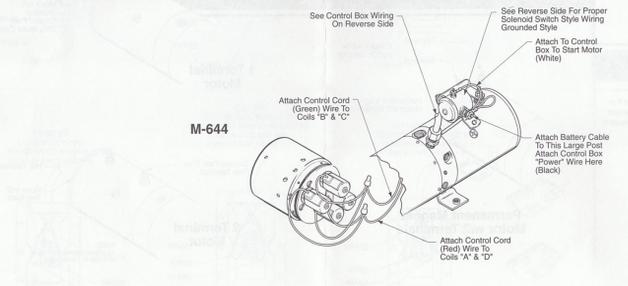

2,3 Way Functions w/4 Solenoid Valves

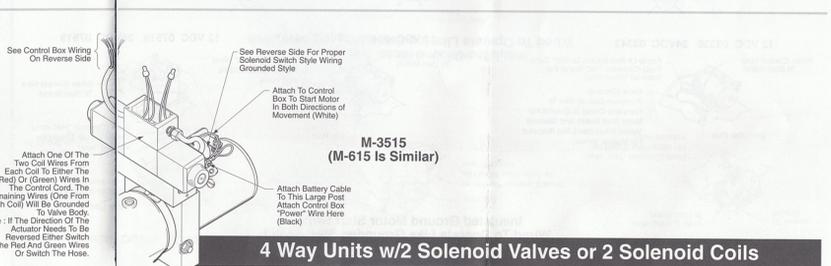

4 Way Units w/2 Solenoid Valves or 2 Solenoid Coils

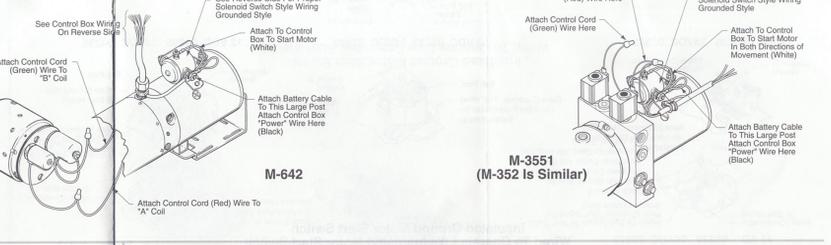


4 Way /4 Way Units w/2 Solenoid Valves or 4 Solenoid Coils



Battery Cable Guide

PLEASE REMOVE ALL RINGS, WATCHES AND JEWELRY PRIOR TO DOING ANY ELECTRICAL WORK

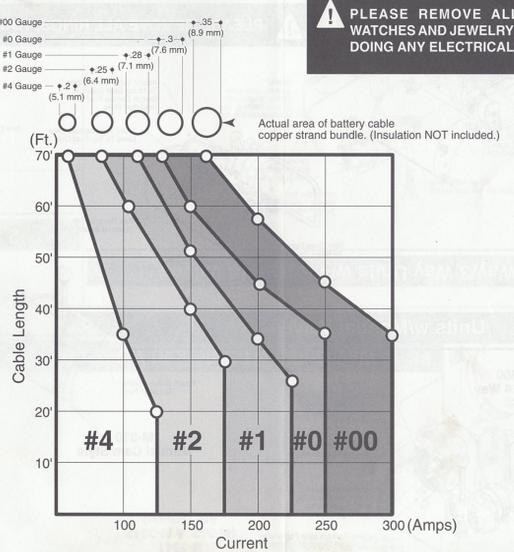

Monarch Hydraulics, Inc.

Wiring Guide For D.C. Power Units

Read and understand this pamphlet before attempting installation, operation, maintenance, or repair.

Inspect the battery cables for possible shorts to the vehicle. Reroute the cable as necessary to eliminate any shorts.


Popular Monarch Models are shown. Use a similar representation as a guide, and wire accordingly, or contact the factory at (616) 458-1306.

A 15 amp fuse is recommended for use in the black/green power wire.


PLEASE REMOVE ALL RINGS, WATCHES AND JEWELRY PRIOR TO DOING ANY ELECTRICAL WORK

This Pamphlet Is To Be Used With Vehicle After Pump Unit Is Installed.

Control Box Wiring

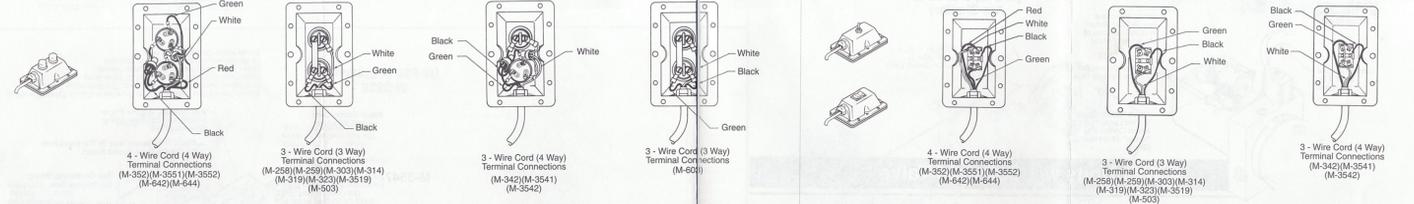

Start Switches

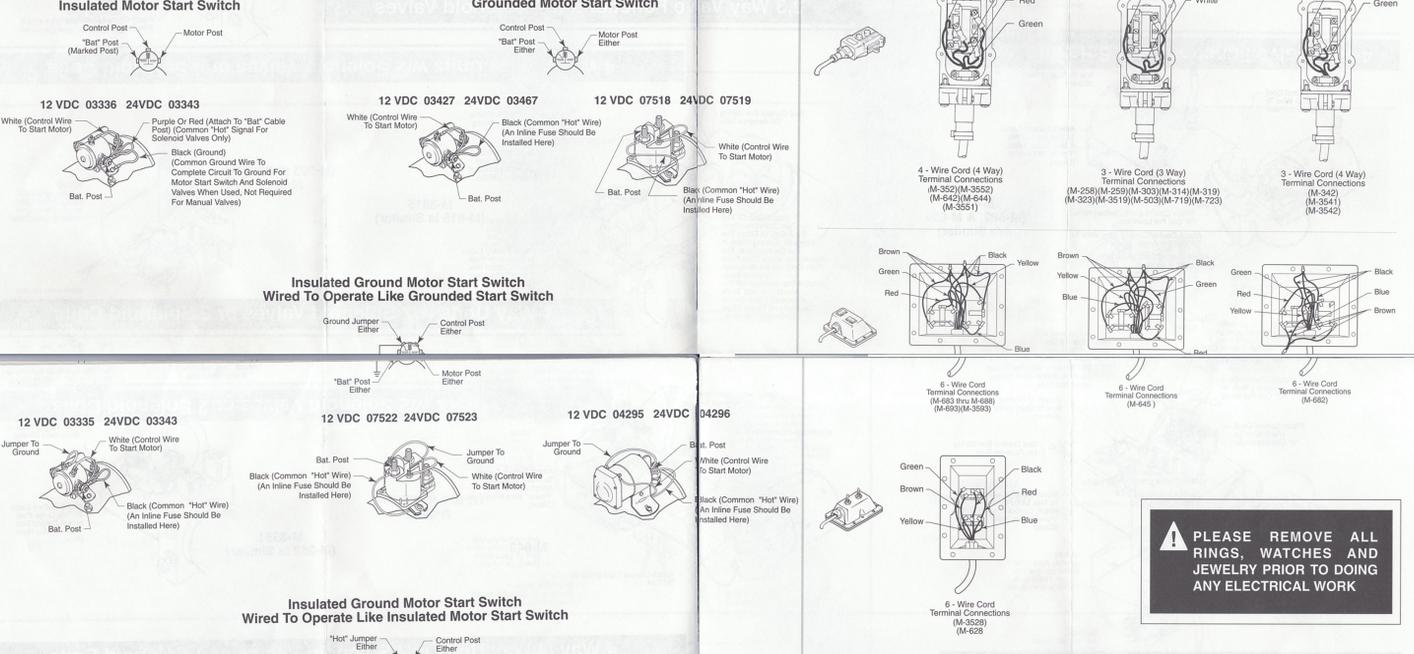

Motors

