

Cunningham Campers, Inc.

5201 Highway 62
Jeffersonville, IN 47130

1-812-284-0276 Option 3



Welcome to our Used Jayco Owners' Group

We Know Jayco Parts!

As a group member you receive **10% OFF** any order for parts, not already on sale. Just call us **with your VIN #** and we will find what you need and ship it directly from Jayco to your front door.

Like Jayco, we are family owned and operated. Our courteous professionals are here to help make your shopping experience as pleasant as humanly possible.

1-812-284-0276


Use Option 3 For Parts

<http://parts.cunninghamcampers.com/jayclub>

Cunningham's – Selling & Servicing Jayco RV's for OVER 38 Years!



FOLD DOWN

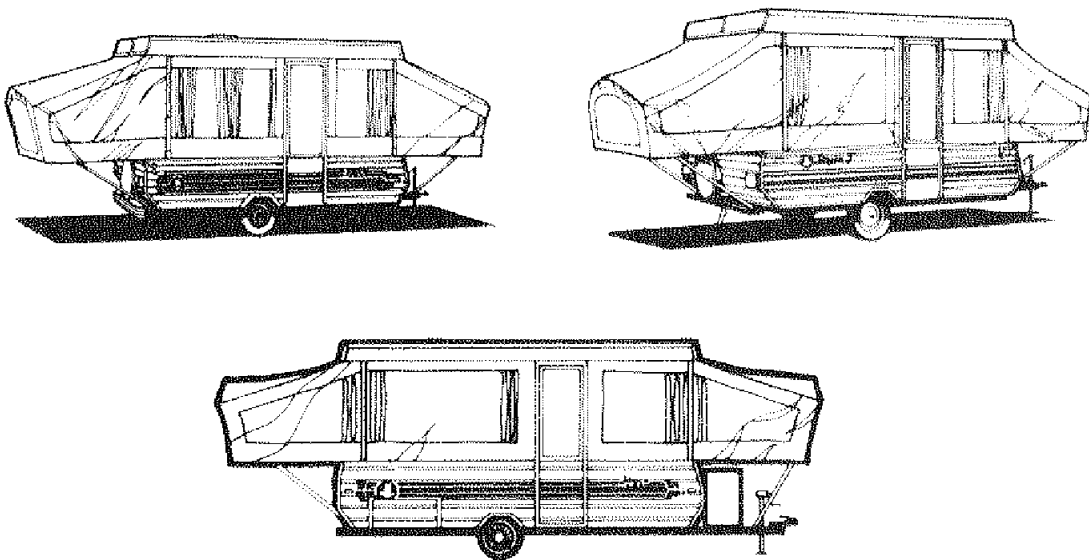

OWNER'S MANUAL

WELCOME

On the behalf of Jayco we thank you for purchasing your new Jayco vehicle. We have carefully engineered and manufactured your R.V. with available quality materials. We believe in quality and we emphasize quality in every way to our employees. For this reason, our company has grown rapidly in our short period of being in business.

As a manufacturer of recreational vehicles we depend on your satisfaction to stay in business. That's why we stand behind our products with our warranty and customer service program to do everything reasonable to keep you satisfied if a problem arises.

We hope you'll enjoy the outdoors as much as we do. Camping is a wonderful way to relax and travel with your family. Remember, dispose of your litter and trash when you break camp so others can enjoy the outdoors and nature as much as you did. Please join our fight for a cleaner world.

The Jayco People

YOUR NEW JAYCO IS YOUR PASSPORT TO A WHOLE WORLD OF NEW FRIENDS,
CAMPING FUN AND TRAVEL ADVENTURE WHEN YOU JOIN THE THOUSANDS OF
JAYCO FAMILIES WHO MAKE UP THE . . .

JAYCO JAFARI INTERNATIONAL TRAVEL CLUB

You will find us enjoying the friendship and fellowship of JAFARI CAMPING as we join our
local area FLIGHTS at hundreds of weekend camp-outs all over North America each month . . .

WE'RE THE FAMILIES OF JAYCO!

There are special STATE, REGIONAL and INTERNATIONAL RALLIES where you can join
with your fellow JAFARIANS and their flights to enjoy a special kind of togetherness . . . fun,
games, and entertainment provide memories to last a lifetime.

And . . . how about the exotic surroundings of NEW ORLEANS, the sounds and color of
NASHVILLE and the GRAND OLE OPRY, the roar and rush of the INDIANAPOLIS 500, the
quiet surroundings of the CANADIAN ROCKIES, the color of the SMOKY MOUNTAINS in
the Fall. These and many other adventures can be yours when you join the. . .

JAYCO JAFARI INTERNATIONAL TRAVEL CLUB

Fill in the blanks on the reverse side, cut along dotted line and mail along with a check to:

JAYCO JAFARI INT'L TRAVEL CLUB

ATTN: Membership Coordinator

P.O. Box 192

Osceola, IN 46561-0192

Yes, it's for everyone with a JAYCO RV; young couples just starting out, families spending quality time together, the young at heart expanding their life experiences. Whether you belong to another camping club, have always traveled alone, or are just starting, don't miss out on one of the most priceless benefits of being an RV family . . . meet new friends and spend a bit of your camping life with some of the finest people you will ever have the opportunity to share a campfire or treasure a moment of golden living with a . . . FIFTH-WHEEL TRAVEL TRAILER. . .SPORT UTILITY TRAILER . . . CONVENTIONAL TRAVEL TRAILER . . . TYPE C MOTORHOME . . . FOLDING CAMPING TRAILER . . . it doesn't matter. If you are a JAYCO RV FAMILY, then you are eligible to become a Jayco Jafari Member.

YOU WILL NEVER BE SORRY YOU MADE THE DECISION!

Your membership entitles you to:

- Special international decals for your unit.
- The Hitch newsletter with schedules of upcoming events and activities.
- A membership roster - containing the names and addresses of current members of the club will be sent bi-yearly.
- Discount Cards for several national theme parks including Six Flags and Busch Corp. Parks.
- A special price is available on Wheeler's Campground Guides.
- Discounts with Hertz Rental Car.
- Discounts with Coach Net, an emergency roadside service.
- Farm & City Insurance has RV insurance available at discounted rates to current Jayco Jafari International Club members.
- All of this, plus the joy of meeting new friends and enjoy Jafari adventures around the country.

Start with the first phase of your camping life...just complete the following application and forward it to the Jayco Jafari International Travel Club office. Your membership application may also be completed online, by visiting our website at www.jaycorvclub.com. If you have further questions, contact the club office direct at the website or by calling 800-262-5178. Local calls can be made to 574-258-0571.



WELCOME TO THE JAFARI FAMILY!



TO: Membership Coordinator for the Jayco Jafari International Travel Club

Please enroll us as members in the Jayco Travel Club. We are ready to roll to where the "friends we just haven't met yet" have the coffee on the fire and are waiting for us to arrive: We are ...

Name: _____ Spouse: _____

Address: _____ Phone: _____

City: _____ State: _____ Zip: _____

Email: _____

Ages of Children at Home: _____

Our JAYCO is a: _____ Our Dealer _____
(type & size)

Membership Dues:

| | | | |
|--------------|---------|---------------------|-------|
| One year | \$25.00 | Amount enclosed. \$ | _____ |
| Two years: | \$45.00 | Check #: | _____ |
| Three years: | \$65.00 | | |

(signature) (date)

TABLE OF CONTENTS

I. INTRODUCTION TO R.V. OWNERSHIP

| | |
|---|---|
| A. WELCOME..... | 1 |
| B. SAFETY CONSIDERATIONS | |
| 1. Safety in Using L.P.-Gas..... | 2 |
| 2. Electrical System Safety..... | 2 |
| 3. Emergency Stopping..... | 3 |
| 4. Additional Safety Tips..... | 3 |
| C. INSURANCE..... | 4 |
| D. CONTINUOUS LIVING IN R.V. COACHES..... | 4 |

II. WARRANTY & SERVICE

| | |
|---------------------------------|---|
| A. WARRANTY COVERAGE..... | 5 |
| B. CUSTOMER DELIVERY FORM..... | 6 |
| C. SERVICE PROCEDURES | |
| 1. Basic Service Procedure..... | 7 |
| 2. Dealer..... | 7 |
| 3. Factory..... | 8 |
| 4. Parts..... | 8 |
| D. OWNER'S RESPONSIBILITY..... | 8 |

III. USAGE OF YOUR R.V.

| | |
|------------------------|----|
| A. HITCHES..... | 9 |
| B. LOADING..... | 9 |
| C. CARGO CAPACITY..... | 9 |
| D. SAFETY CHAINS..... | 11 |
| E. WHEEL LUGS..... | 12 |
| F. TIRES..... | 12 |
| G. BRAKES..... | 12 |
| H. SET-UP..... | 14 |
| I. LIFTER SYSTEM..... | 17 |

IV. THE SYSTEMS

| | |
|--------------------|--------|
| A. PLUMBING..... | 21 |
| B. L.P.-GAS..... | 20, 23 |
| C. ELECTRICAL..... | 26 |

V. APPLIANCES

| | |
|---------------------------------|----|
| A. STOVE..... | 31 |
| B. FURNACE (OPTIONAL)..... | 32 |
| C. REFRIGERATOR (OPTIONAL)..... | 32 |

VI. CARE OF BODY COMPONENTS

| | |
|------------------------|----|
| A. EXTERIOR METAL..... | 33 |
| B. EXTERIOR ROOF..... | 33 |
| C. FRAME..... | 33 |
| D. DRAPES..... | 33 |
| E. CUSHIONS..... | 34 |
| F. TENT..... | 34 |
| G. PANELING..... | 36 |
| H. FLOOR COVERING..... | 36 |

VII. MECHANICAL MAINTENANCE CHART

| | |
|---|----|
| A. REMOVING TIRE & WHEEL FROM TENT CAMPER | 37 |
| B. WHEEL BEARING | 38 |
| C. LUG BOLTS | 39 |
| D. COUPLER | 39 |
| E. TONGUE JACK | 39 |
| F. TIRES | 39 |
| G. BRAKES | 40 |
| H. LIFTER POSTS | 40 |
| I. WINCH | 40 |
| J. CABLES | 40 |
| K. PUSH ROD | 40 |
| L. L.P.-GAS SYSTEM | 41 |
| M. BED SLIDES | 41 |
| N. APPLIANCES | 41 |

CHAPTER I

INTRODUCTION TO R.V. OWNERSHIP

WELCOME

Welcome to the world of recreational vehicle travel. Your purchase of a Jayco R.V. allows you to enter this unique world of camping and leisure in a grand style. Your Jayco R.V. has been designed and engineered to offer you many comforts of home that will make your camping experience as enjoyable as possible.

This owner's manual was prepared to assist you in understanding the proper use and operation of various containment systems, servicing and maintenance of component parts, and explanation of your warranty protection. If you are a newcomer to R.V. travel, you will especially appreciate the suggestions and "shop talk" information to be found throughout this manual to help you obtain the most pleasure from the use of your vehicle.

We have made every effort to make this manual as accurate as possible in order to reflect information available at time of publication. Products are constantly being improved and we endeavor to upgrade our installations accordingly. You should carefully read and understand this owner's manual which is a supplement to various other instructions supplied by the manufacturers of separately warranted products.

Keep this owner's manual in your recreational vehicle for handy reference. Get to know your new vehicle and how it operates. You should carefully read and understand these instructions and information supplied by manufacturers of separately warranted products, since they contain important operating, safety, and maintenance instructions.

Every effort has been made to provide you with a safe, dependable product. Your vehicle complies with applicable requirements of Federal Motor Vehicle Safety Standards, State Regulations, Canadian Standards Associations (CSA) where applicable, and complies with requirements of ANSI Standard A119.2, the nationally recognized "Standard For Recreational Vehicles - Installation of Plumbing, Heating and Electrical Systems." The Recreational Vehicle Industry Association (RVIA) and Canadian Standards Association (CSA) periodically inspect our production line and assist us in maintaining strict compliance with installation and safety standards for those systems. Your follow-up with periodic safety inspections and a program of preventive maintenance is important for the continuation of safe and trouble-free operation. Happy Camping!

SAFETY CONSIDERATIONS

SAFETY IN USING L.P. GAS

You should check for leaks at the connections on the L.P.-gas system soon after purchase and initial filling of L.P.-tanks, and continued periodic checks of the system are recommended. Your vehicle was manufactured to provide you with full access to all gas line connections. Leaks can be found with a soapy water solution applied to the outside of the gas piping connections: the soap will bubble at the leak. **DO NOT USE FLAME OR LIGHTED MATCHES TO TEST FOR LEAKS.** Usually tightening of connections will close leaks. If not, ask your authorized dealer service department to make the necessary repairs.

EVEN THOUGH THE MANUFACTURER AND DEALER HAVE ALREADY MADE TESTS FOR LEAKAGE, THIS CHECK IS ADVISABLE BECAUSE OF THE VIBRATION ENCOUNTERED DURING TRAVEL.

L.P.-gas is heavier than air. Leaking gas tends to flow to low places. It will sometimes pocket in a low area. L.P.-gas can usually be detected by an identifiable odor similar to onions or garlic. Never light a match or allow any open flame in the presence of leaking gas.

It is very important to have L.P.-gas shut off during refueling of tow vehicles. Some states prohibit gas appliances to be operated during travel, especially in any underground tunnels.

Never allow gas containers to be filled above the liquid capacity indicated on the container. If a container is overfilled, liquid gas may flow through the regulator causing it to freeze and/or introduce a dangerous excessive gas pressure into the lines. In addition, an overfilled container placed in hot sunlight may expel excess gas through the relief valve and be susceptible to ignition by any nearby open flame.

ELECTRICAL SYSTEM SAFETY

Circuit breakers and fuses are installed to protect electrical circuits from overloading. Do not make unauthorized changes to circuitry or add on fixed appliance yourself. If you wish changes, consult your dealer and he will assist you in obtaining a safe installation.

An approved power supply cord has been supplied with the vehicle. Always use this cord for hook-up to the 120-volt source. Note that the cord has a three pin plug, which provides proper grounding through the third (round) pin.

Grounding is your personal protection from electrical shock. Do not use any adapter, cheater, or extension cord that will break the continuity of the grounding circuit connected to that third pin. NEVER remove the grounding pin for convenience of being able to connect to a non-ground (only 2-prong) receptacle. Check the polarity of your power source.

SAFETY WHEN EMERGENCY STOPPING

Always carry road flares and/or reflective triangular highway warning devices to be displayed when necessary. Pull off the roadway as far as possible when changing flats or for other emergency situations. Turn on your vehicular hazard warning flashers when parked alongside a roadway, if only for a minute or two.

ADDITIONAL SAFETY CONSIDERATIONS

1. Sanitize the fresh water supply system periodically (see sanitizing instructions).
2. Keep water connection fittings from coming in contact with the ground or drain hose to reduce chance of contamination.
3. Enlist services of a qualified technician to fix gas or electrical appliances.
4. Always have a serviceable fire extinguisher placed in an easily accessible location.
5. Please read carefully the loading section under Chapter III related to your respective trailer.
6. Insure that tires are in good condition and properly inflated. Watch inflation especially closely - under-inflated tires will overheat. Overheated tires are a potential hazard as they may throw rubber and cause a blowout.
7. Check and tighten wheel lugs regularly (every 50 miles when new until 200 miles are reached and then check lugs every 500 miles).
8. Check brakes in a safe area - not while traveling a busy highway.
9. Use seat belts (motor homes) at all times.
10. Disconnect television power cord and antenna lead-in during local thunderstorms and lightning activity.
11. Always solidly block trailer wheels before unhitching.
12. Before leaving a camp area with a trailer in tow, insure that the safety pin or locking lever is seated, breakaway wire is attached to tow vehicle, the jack is raised so that it cannot touch the ground, the dolly wheel removed, 110-volt electrical cord properly stored, safety chains are connected, and all interior lights off.
13. Observe the warning labels attached to your vehicle concerning L.P.-gas, water, electricity, and loading.
14. Observe the maintenance chart in Chapter VII related to your respective unit.

INSURANCE

As with your automobile, it is important that you protect yourself and others with insurance coverages for personal liability, theft, collision, property damage, etc. Your dealer will assist you in obtaining appropriate insurance for your protection or you may check with the company which provides your automobile insurance.

| |
|--|
| CONTINUOUS LIVING IN YOUR JAYCO VEHICLE COULD CAUSE ADVERSE CONDITIONS. |
|--|

Your new Jayco produced R.V. has been built for enjoyment in a recreational manner. While it was not intended to be used as living quarters, it can be by making some special provisions and understanding potential problems.

1. If used in northern states or Canada in the winter, more insulation is desired especially below floor level or as skirting.
2. Proper care needs to be observed in the fresh water and drainage systems to avoid freezing problems.
3. Adequate gas and electrical supply is needed along with protection from possible freeze-ups on gas regulator.
4. A special heavy-duty furnace rated at 40,000 BTU's and 110 volt motor is available: (a) there will be additional cost, (b) providing it will fit into the heater compartment, and (c) it must be ordered prior to building of unit.
5. If more than one person occupies the coach, ventilation or addition of a dehumidifier may be required to reduce possible condensation. See the section regarding this possible problem as follows:

Condensation is the result of warm, moist air coming in contact with cool surfaces such as windows and aluminum framing. Upon contact of these cool surfaces, the warm air loses its ability to hold its moisture. These beads or drops of moisture will remain on the cool surfaces as moisture and it will begin to run down the windows. Weep holes are provided in the lower threshold of the window to drain the water.

CHAPTER II

WARRANTY & SERVICE



LIMITED WARRANTY

SUMMARY OF WARRANTY

Jayco, Inc., (Jayco) warrants to the original purchaser (you) of every Jayco unit that all parts of our manufacture are free from substantial defects in material and workmanship for a period of one (1) year from the date of purchase under normal use and service. This warranty does not apply to any defect in the aesthetics or physical appearance of the unit, nor to normal deterioration of the soft trim and appearance items due to wear and exposure.

HOW TO OBTAIN WARRANTY SERVICE

Any part of our manufactured product proven substantially defective in material or workmanship during the warranty period will be repaired free of charge if the part is returned with transportation charges prepaid to an authorized Jayco dealer or Jayco, Inc., with return transportation at your expense. If a factory or authorized service center is not available in your area, call direct to Jayco, Inc., A.C. (219) 825-5861 to arrange prompt and proper repairs to your unit.

EXCLUSIONS

Jayco assumes no responsibility or liability for defects in workmanship or operation of separately warranted products. These products may be warranted by the individual manufacturers and a copy of their warranty has been included in your owner's packet. Separately warranted products will not be serviced, repaired or replaced by Jayco, Inc. If service or parts are required for these products, refer to the furnished list of factory authorized service centers. If the list is not available for the particular product, write or call the manufacturer concerned to obtain the location of the nearest service center.

Jayco does not warrant components manufactured by others, including, but not limited to engine, drive train, transmission, chassis, tires, and tubes, ranges, ovens, furnaces, batteries, axles, hubs, bearings, power converters, refrigerators, burners, and trailer brake systems. These parts may or may not be warranted by their manufacturers and Jayco, however, assumes no obligations with regard to them.

This warranty shall not apply to normal maintenance, such as, greasing wheel bearings, tightening lug nuts, etc., that the vehicle will require nor to any damages arising from the failure to have such maintenance performed.

Fabric items such as canvas, canopies, window screenings, vinyl windows, cushion and mattress covers, are not warranted against leakage, tears, punctures, shrinkage, fading or soiling but are warranted only as against defective workmanship and material.

The vehicle is not a cargo trailer and the customer is advised to observe the recommended gross weight limit. COMMERCIAL USE OR RENTALS OF THIS VEHICLE AND ABUSE, NEGLIGENCE, OR OPERATION OVER UNIMPROVED ROADS WILL VOID THIS WARRANTY.

DISCLAIMER OF DAMAGES

YOU AND ANY OTHER USER OF JAYCO PRODUCTS SHALL NOT BE ENTITLED TO ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES, including without limitation, loss of use of the unit, inconvenience, lodging, damage to personal property, lost income or earnings. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

DISCLAIMER AND LIMITATIONS OF IMPLIED WARRANTIES

JAYCO LIMITS ALL IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY TO THE WARRANTY PERIOD OF ONE YEAR. NO WARRANTIES, EXPRESS OR IMPLIED, EXTEND BEYOND THE WARRANTY PERIOD. NO PERSON HAS AUTHORITY TO EXTEND, ENLARGE, OR MODIFY THIS WARRANTY. NO ACTION TO ENFORCE THIS WARRANTY MAY BE COMMENCED MORE THAN SIX MONTHS AFTER EXPIRATION OF THE WARRANTY PERIOD.

SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

PARTS AND DESIGN CHANGES

Jayco may make parts and design changes from time to time without notice and repairs or replacements may be made with new or different parts.

WARRANTY REGISTRATIONS

Your warranty registration records should be completed and delivered to the manufacturers of component parts, as they may be a condition of the warranty. THIS JAYCO WARRANTY IS VOID UNLESS YOUR WARRANTY REGISTRATION CARD IS RETURNED TO JAYCO.

JAYCO, INC.
P.O. BOX 460
MIDDLEBURY, INDIANA 46540
(219) 825-5861



CUSTOMER DELIVERY FORM

JAYCO, INC.P.O. BOX 460
58075 S.R. 13
MIDDLEBURY, INDIANA 46540
(219) 825-5861

| | | | | | | |
|--------------------|---|--------------------|---|------------|---|---|
| OWNER'S NAME | | DEALER NAME | | | | |
| ADDRESS | | ADDRESS | | | | |
| CITY | | CITY | | | | |
| STATE | | STATE | | | | |
| PURCHASE DATE | | TRAILER SERIAL NO. | | | | |
| TIRE SERIAL NO. | 1 | 2 | 3 | 4 | 5 | 6 |
| CHASSIS SERIAL NO. | | CHASSIS TYPE: | | ENGINE NO. | | |

ALL ITEMS MUST BE CHECKED OFF BY DEALER AS LABOR IS PERFORMED

- | | | | | |
|---|-----------|------------|-----|----|
| 1. Safety precautions explained to owner on L.P.-Gas system. | YES | NO | | |
| 2. Location of L.P.-Gas connections shown to owner and informed how to make periodic leakage check by use of soapy water. | YES | NO | | |
| 3. Owner shown how to light and/or operate the following appliances by actual operation of them: | | | | |
| Brand | Model No. | Serial No. | | |
| Stove | | | YES | NO |
| Furnace | | | YES | NO |
| Refrigerator | | | YES | NO |
| Water Heater | | | YES | NO |
| 4. Operation of Electrical System explained and demonstrated. | YES | NO | | |
| 5. Operation of Fresh Water System including filling of tank. | YES | NO | | |
| 6. Shown how to operate Drainage System. | YES | NO | | |
| 7. Care and operation of toilet. | YES | NO | | |
| 8. Explained winterization of unit. | YES | NO | | |
| 9. Owner shown how to hook-up and unhook trailer, also removal of dolly wheel for travel. | YES | NO | | |
| 10. Tire pressure checked and importance explained. | YES | NO | | |
| 11. Proper parking and setup procedure of unit in preparation for camping explained. | YES | NO | | |
| 12. Given coach keys and owner's packet. | YES | NO | | |
| 13. General appearance - no visible damages. (Interior and Exterior) | YES | NO | | |
| 14. Operation of trailer brakes explained and periodic adjustment required. | YES | NO | | |
| 15. Check and explain the tightening of lug bolts as in manual. | YES | NO | | |
| 16. Check and explain importance of Warranty Cards as supplied by manufacturers of appliances and component items. Copy of warranty was made available before purchase. | YES | NO | | |

I certify that I have read and been given a full explanation and demonstration of each item listed above.

Dealer's Signature _____

Customer Signature _____

Person Explaining Above: _____

The purchaser should not sign this statement until all items indicated above have been explained to his satisfaction. The dealer is to return this form within 5 days after delivery of this trailer to Service Department.

White Hard Copy - Jayco

Canary Copy - Dealer

Pink Copy - Customer

DO NOT REMOVE this page. Use the regular 3 page forms supplied with each coach.

Some items on this delivery form may not apply to your trailer.

SERVICE PROCEDURES

BASIC SERVICE PROCEDURE

We are particularly interested in maintaining good customer relations. Only by having your complete confidence and satisfaction with our product and its service can we assure our continued success as manufacturers of recreational vehicles. We have found that continuing a pleasant and effective relationship through our dealers is equally as important as maintaining the technical excellence of our product. Your authorized dealer will cordially assist you in providing service, maintenance, selection of options, and instructions concerning the operation of your vehicle.

Should you have a problem with service, please follow the below listed steps in this order.

1. Contact your selling dealer's service department for an appointment. Describe to the best of your knowledge the nature of the problem. Please keep appointments to establish a good, workable relationship and proper attitude.
2. Contact the owner or General Manager of the dealership should the initial attempt fail with the service department.
3. Contact the:

Customer Relations Dept.
Jayco Incorporated
P.O. Box 460
Middlebury, IN 46540
Phone: (219) 825-5861

Give all the above information as requested along with serial number of the coach in question. We will make every reasonable attempt to resolve your problem.

Please bear in mind that most problems arise from misunderstandings concerning warranty coverage and service. Most instances you will be referred to dealer level and will be resolved with dealer's facilities and personnel.

DEALER

Your authorized Jayco dealer has inspected and serviced your new Jayco R.V. unit according to our pre-delivery inspection requirements. He is authorized to service and maintain your coach as need be. All warranty requirements are to be performed by the selling dealer unless Jayco gives prior approval.

Some R.V. dealers may, at the time of need, be authorized service centers for certain manufacturers of separately warranted products,

so it will pay you to check with your dealer first to reduce delays. If the dealer is not an authorized service center for the product in question, he should assist you in obtaining authorized service.

FACTORY

A factory service department is operated at our Middlebury, Indiana, manufacturing facility. Should your Jayco R.V. be in need of repairs and your dealer recommends that the factory repair it, it may be returned to our plant for repairs upon following these procedures.

1. Your dealer **must** make an appointment prior to returning it to the factory service department.
2. Jayco does not accept collect phone calls.
3. Freight costs are the responsibility of the owner.

PARTS

Parts are available at most Jayco dealerships or your dealer will order parts for you as needed. Should you be unable to find a dealer in your local area, contact our Customer Relations Department and we will assist you in providing parts through an authorized dealer or from Jay-Parr Supply, our parts department in Middlebury, Indiana.

OWNER'S RESPONSIBILITY

It is the owner's responsibility to properly maintain his/her new Jayco R.V. and be observant to any possible problems in warranty or otherwise. Negligence is not covered by warranty. Your R.V. coach should be checked visually before leaving on a camping trip, especially an extended trip. Regular maintenance is important and can save frustration in the event of breakdowns.

If warranty service is needed while traveling, contact our Customer Relations Department and you will be directed to proper personnel. To have warranty service provided at a non-Jayco unauthorized service center, it **must have prior approval**. Any unauthorized repairs will void warranty on your Jayco coach.

The return of defective parts is required for warranty coverage should repairs be made at either an authorized or non-authorized service center. The returned parts are subject to approval by Jayco's warranty administrator before reimbursement can be made.

Please keep your owner's manual, service center list for separately warranted products, your copy of "Limited Warranty and Customer Delivery Form", and any other related papers in your trailer.

CHAPTER III

USAGE OF YOUR R.V.

HITCH HEIGHT

The correct hitch ball height is listed on the chart below for your camping trailer. It is measured with the coach in level position, measuring from the top of the ball to ground level.

Jayco Incorporated cannot be responsible for the suspension system of tow vehicle, which could definitely be a factor of ball height after coach is completely hooked up.

| SPECIFICATIONS | | | |
|----------------|--------|----------------------|--------|
| Model | Height | Model | Height |
| Cardinal | 14 " | J-Series 1208 & 1206 | 14 " |
| King 6 | 14 " | J-Series 1008 & 1006 | 16½ " |
| Dove | 14¾ " | J-Series 806 | 15 " |
| Thrush | 14¾ " | J-Series 705 | 15 " |

LOADING

Loading camping gear in your Jayco recreational vehicle should be handled with serious consideration. ALL cargo, supplied equipment that you load should be distributed evenly with the heaviest items being stored in the lower cabinets. Be sure that all heavy items are secured to prevent weight shifts while traveling.

In overhead cabinet on slide bars there is a maximum of 75 pounds on both combined bars. Place only lightweight items in overhead cabinets such as paper plates, cups, etc.

Please remember the heaviest strain on the cabinet bars is when loaded and in the center of cabinet while in transit.

Observe capacity rating to avoid problems.

CARGO CAPACITY

Located on the left front corner of the frame or on the left front tongue member is the Federal Certification Label which gives the maximum weight-carrying capacities of your trailer and each axle, designated by the letters "GVWR" and GAWR," respectively.

The "GVWR" means "Gross Vehicle Weight Rating" and is the maximum your trailer should weigh with water, L.P. Gas, food, clothing, and other camping supplies loaded in the coach when attached to tow vehicle.

Each axle also has a maximum load-rating capacity referred to as the "Gross Axle Weight Rating" (GAWR).

See the Weight Listing & Rating Chart below as to how much actual weight you may carry in your model of tent camper.

WEIGHT SPECIFICATIONS

| Model | Empty Weight* | GVWR | Brakes |
|-----------------|---------------|------|--------|
| Cardinal Deluxe | 2240 | 3330 | Std. |
| Cardinal | 2155 | 3330 | Std. |
| King Deluxe | 1865 | 2625 | Std. |
| King 6 | 1790 | 2625 | Std. |
| King 6 SD | 1800 | 2625 | Std. |
| Thrush | 1525 | 2425 | Opt. |
| Dove 6 | 1535 | 2425 | Opt. |
| Dove 8 | 1530 | 2425 | Opt. |
| J-1206 | 1580 | 2430 | Std. |
| J-1208 | 1560 | 2430 | Std. |
| J-1008 SG | 1220 | 2205 | Opt. |
| J-1008 DD | 1240 | 2205 | Opt. |
| J-1006 | 1265 | 2205 | Opt. |
| J-806 | 990 | 1730 | Opt. |
| J-705 | 890 | 1550 | Opt. |

*Empty weights are with standard equipment.

Note: A. All units are in pounds.

B. All weights may vary 5% ±

C. All weights are subject to change without notice.

OPTION WEIGHT LISTING


| | Card. | King | Thrush | Dove | J-1208 | J-1008 | J-806 | J-705 | J-1206 |
|--------------|-------|------|--------|------|--------|--------|-------|-------|--------|
| Spare | 26 | 27 | 26 | 26 | 26 | 23 | 16 | 15 | 26 |
| Heater | 19 | 19 | 19 | 19 | 19 | 19 | 19 | 19 | 19 |
| Hyd. Brakes | S | S | 50 | 50 | S | 50 | 50 | 50 | 5 |
| Elec. Brakes | — | — | 30 | 30 | — | 30 | 30 | 30 | — |
| L.P. Gas | S | S | S | S | S | S | 20 | 20 | 5 |
| Water | S | S | S | S | S | S | 40 | 40 | 5 |
| Kitchen | S | S | S | S | S | S | 50 | 50 | 5 |
| Awning | 30 | 28 | 26 | 26 | 28 | 26 | 25 | 24 | 28 |
| Screen Room | 16 | 16 | 14 | 14 | 16 | 14 | 10 | 9 | 16 |
| Add-A-Room | 30 | 28 | 25 | 25 | 28 | 25 | 24 | — | 28 |
| Refer RM2190 | 33 | 33 | 33 | 33 | 33 | 33 | 33 | 33 | 33 |
| Refer RM2201 | 50 | 50 | 50 | 50 | 50 | 50 | 50 | 50 | 50 |
| Refer RM2301 | 72 | 72 | — | — | — | — | — | — | 72 |

Note: RM2190 not available in Deluxe units.


RM2301 available only in Cardinal and King 6 & 1206 units.

THE SAFETY CHAIN


There are different safety chain requirements by the various states. As delivered by your dealer, your vehicle is equipped with chains to meet SAE standard requirements for maximum gross trailer weight. Always have the safety chain (s) attached when towing. Install them in a manner so they do not restrict sharp turns of the tow vehicle-trailer combination, but tight enough so they do not drag on the road.

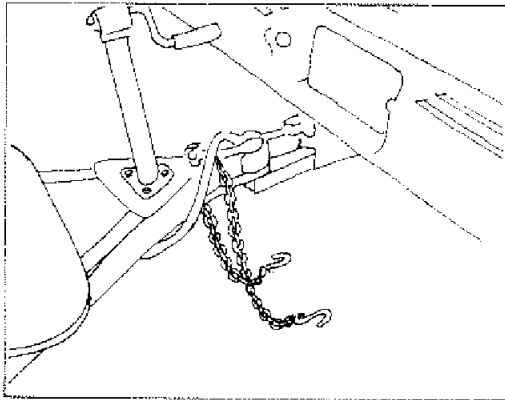


1. Inspect chains to determine that they are properly attached to trailer frame.

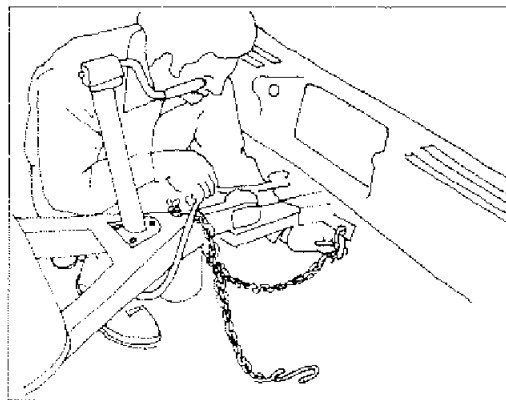

2. Criss-cross left chain and attach to right mounting slot in trailer hitch.

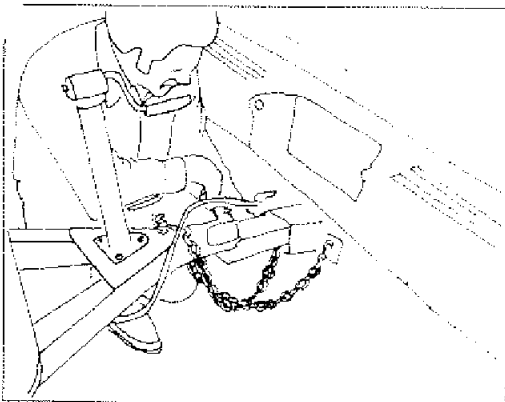

3. Repeat step 2 with right chain. Slack for each length should be the same but not more than necessary to permit the vehicle to turn at their minimum radius.

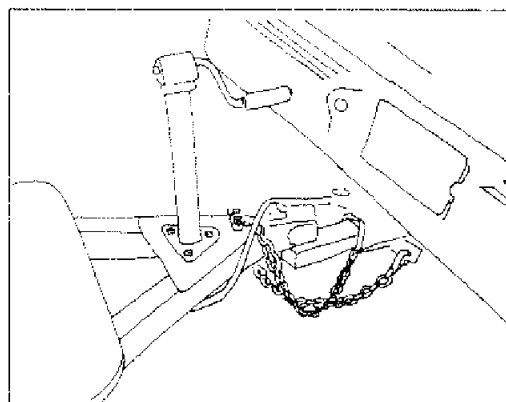

4. Properly mounted safety chain. Note that the jack is fully raised, and dolly wheel removed.

NEVER attempt to raise the trailer by placing a jack under the axle. If lifting the trailer by this method may alter the camber in the axle causing permanent damage.

WHEEL LUGS

When the wheels are installed on your Jayco the lug bolts must be tightened at 85-95 foot pounds of torque. Because of the possibilities that these wheel lugs could work loose, it is recommended that you check your wheel lugs after the first 50 and 200 miles. After your first trip, check the wheel lugs periodically for safety. The wheel lugs should then be checked after winter storage, before starting a trip, or following extensive braking. Over-tightening can distort wheel. Please observe above recommendations.

TIRES

The tires of all Jayco units are supplied by companies with the recreational vehicle in mind and are tested at turnpike speeds. They are made with nylon cord designed to offer strength and extra mileage in all kinds of weather.

The air pressure should be kept at its recommended pressure. Always check the tires when they are cold such as before traveling at the beginning of the day. DO NOT release air pressure as tires become hot. If you do, the tires will then be under inflated when they cool down. It is recommended that the tire pressure be checked at the beginning of each journey to obtain the maximum life of the tires.

TIRE CHART

| Model | Tire Size | Load Range | Maximum Load | Inflation P.S.I. Cold |
|---------------|-----------|------------|--------------|-----------------------|
| Cardinal | 20.5 x 10 | C | 1105 | 50 |
| King | 20.5 x 10 | D | 1330 | 70 |
| Dove | 20.5 x 10 | C | 1105 | 50 |
| Thrush | 20.5 x 10 | C | 1105 | 50 |
| J-1208 & 1206 | 20.5 x 10 | C | 1105 | 50 |
| J-1008 & 1006 | 5.30 x 12 | C | 1045 | 80 |
| J-806 | 5.70 x 8 | C | 910 | 75 |
| J-705 | 5.70 x 8 | B | 715 | 50 |

BRAKES

Several models of fold down units have hydraulic surge brakes as standard and others are optional. (See specification chart.) These brakes operate automatically as the tow vehicle's brakes are applied. As the car or tow vehicle begins to slow down, the trailer will push towards the car. The coupling mechanism at the hitch contains a brake "pressure plate." As the unit continues to press forward, the pressure plate becomes depressed, which activates the brakes.

BRAKES (ELECTRICAL) (OPTIONAL)

The brakes on your new unit are electric and are integrated into your brake system of your truck or car in such a way that equal braking power is distributed to both trailer and towing vehicle. Explained below are several components that make up the brake system.

First of all, the battery of your truck or car is used as the primary source of power. No special source of power is required. From the battery, the power is taken to the controller which will be assembled under the dashboard of your truck or car. In open positions, it breaks the electrical circuit, so no current reaches the brakes. When depressed by hand or by hydraulic pressure (foot pedal) the variable resistor controls the amount of current which in turn varies the braking of your trailer.

Although it is possible to operate the controller by hand, it is designed to operate automatically when the car's brakes are applied. A line for hydraulic fluid from the controller to the master cylinder allows the accelerator bar and coil to make contact when the foot pedal is depressed which in turn sends the current to the brakes. To obtain equality between your car or truck and your Jayco trailer, a front mounted knob on the controller can be turned for more or less braking effort.

The last item in the braking system is the brakes themselves. The brakes are wired in parallel, never in series. Parallel wiring provides each brake with its own individual power supply to give you assurance of safety and protection.

BACKING YOUR TRAILER (HYDRAULIC)

Your brake system may be designed to operate with hydraulic surge brakes. This means that the back-up braking is only 10% of the effectiveness of the forward braking. All backing must be done slowly, however, so not to fully engage the brakes.

If difficulty is experienced in backing, have a qualified mechanic check the brakes at the first opportunity. **UNDER NO CIRCUMSTANCES SHOULD ANY ATTEMPT BE MADE TO BLOCK OUT OR JAM THE HYDRAULIC BRAKE SYSTEM.**

AUTOMATIC BREAK-AWAY PROTECTION

The hydraulic brake system is equipped with a break-away cable or chain. When towing, this cable or chain should be attached loosely to a frame member of the tow vehicle leaving enough clearance so that the trailer can turn freely without actuating the break-away device.


Should the trailer separate from the tow vehicle, the break-away cable will actuate the master cylinder, locking the brakes. This will stop the trailer in the shortest possible distance.

CAUTION: Break-away switch should be fully released during vehicle operation. CHECK BEFORE TOWING.

CAUTION: Do not use sway bars or equalizer bars on the surge brake system.

BRAKE MAINTENANCE & LUBRICATION

1. For best operation of the coupling locking mechanism is best assured by lubricating the ball with standard automotive chassis grease.
2. Remove master cylinder cap and make sure it is full of **DOT 3** automotive brake fluid.
3. Brakes need to be checked and adjusted once per year. Consult your individual brake owner's manual for additional information or consult your dealer regarding this item.

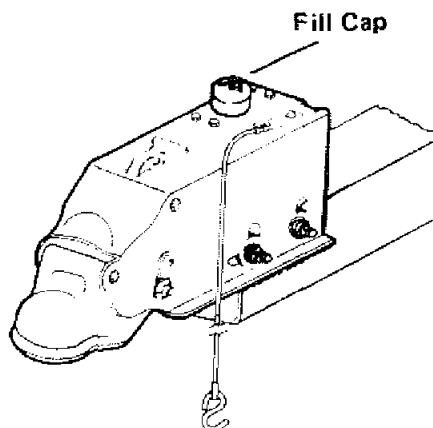

SET-UP

OPENING YOUR JAYCO CAMPER

After parking your new Jayco tent camper, disconnect the coach from the tow vehicle. Have the coach in a level position and tires blocked so the camper will not roll anywhere. You are now ready to set up your tent which is designed to be simple and trouble free.

1. Unfasten each corner latch. **CAUTION: NEVER TRY TO CRANK UP THE ROOF UNTIL ALL FOUR CORNER LATCHES ARE UNLOCKED AND FREE.**
2. Insert the raising crank into position and crank in a clockwise direction to raise.

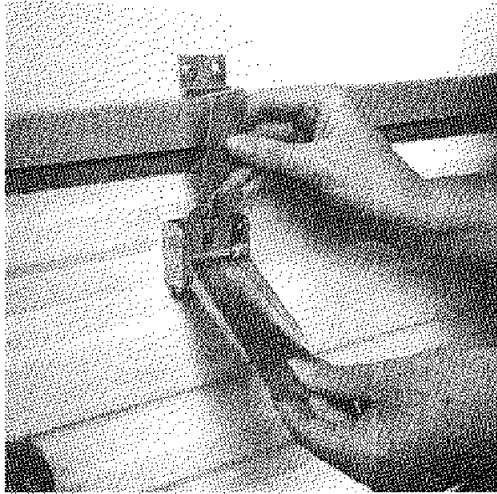


Fig. 1

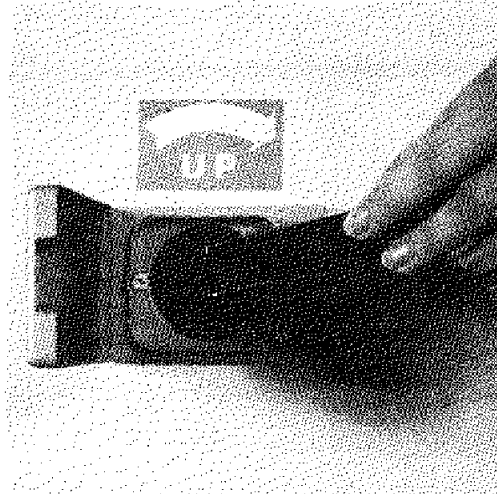


Fig. 2

3. Continue cranking until the gauge cable is almost tight. The red safety gauge cable is located directly above the crank position.
4. Pull end bunks out until bunk hits the bed stops. Pull canvas around bunk corners and hook elastic cord over small nylon pulley on bottom side of bed.

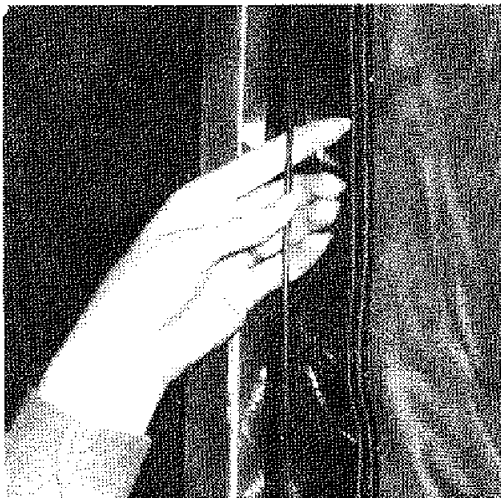


Fig. 3

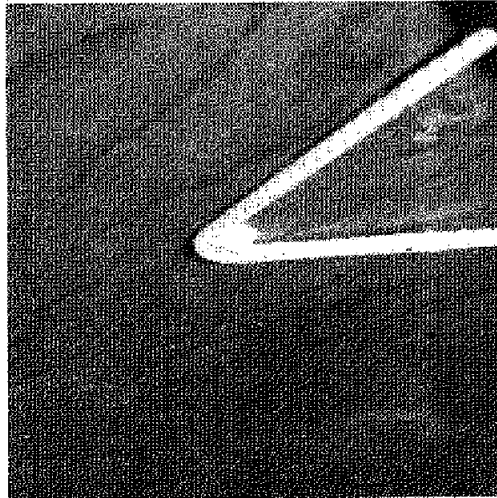


Fig. 4

5. **Be sure beds are extended all the way out.**
6. Place bed support pole in bed bracket and set the other end into slot on frame of camper.



Fig. 5

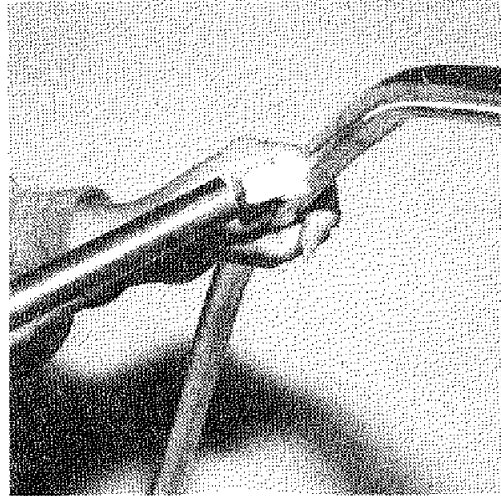


Fig. 6

7. Enter unit and insert bed bow support pole at bow peg. Push bow outward and upward until flat end will slip into bracket mounted onto roof.
8. Swing down the double hinged, self-storing screen door. Drop channel of lower edge of screen door over entrance door, guiding locating pins into door jamb extrusion.
9. Insert canvas by folding the hard edge of tent over 180° and inserting this portion into channel of screen door, starting at the bottom. This assures the best possible fit.
10. Set up any cabinets which are in the folded position such as

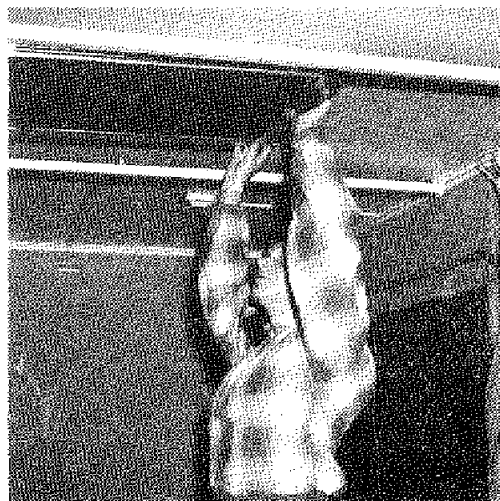


Fig. 7



Fig. 8

- wardrobe and flipover kitchen.
11. The next step is to release self-storing stabilizer jacks and set them as needed. Fold down units have their stabilizer jacks built into the frame. To operate these units which are spring loaded, hold the jack and push to the center of your unit. This

will allow the jack to move out of its traveling position and allow it to drop into place. Now extend the jack "foot" by pushing it to the ground. More tension can be placed on the jack feet by using the long jack handle supplied in each unit. Be sure that not too much force is applied to the jack handle; it will cause the holes in the jack legs to expand by breaking out the dividers. One notch should be sufficient. **DO NOT** place excessive weight on these jacks as they are intended to stabilize, not bear the weight of the camper.

CLOSING YOUR JAYCO CAMPER

To close, simply reverse the above procedure beginning with Step No. 11 and ending with Step No. 1. It is possible, due to an unlevel campsite, that one corner may "hang up" when you crank down your unit. This is not a serious problem and is due to binding of the lifter arm. To solve this problem, shake the camper gently to move the roof back and forth, allowing it to come down. Never force the hung up corner down by grabbing the roof and applying your weight. This could damage the lifter arm. If the roof is persistent in sticking, crank up again and start over.

CAUTION: If stabilizer jacks are down while roof is being cranked up or down it is very possible to have the unit in a bind causing lifter system to hang up.

After roof is totally down and roof latches secured, before removing crank, tighten cable system with a slight tension turning as you were raising camper. This will avoid cables becoming too loose and becoming tangled with each other.


EASY PATENT # 345966 CRANK-UP LIFTER SYSTEM

Jayco's unique raising system has been thoroughly tested and proven to be one of the best on the market and is relatively simple in operation. The system is operated by a manual winch. As the winch turns, the main cable, which is connected to the four secondary cables from each corner, is shortened. As the main cable shortens, it pulls the secondary cables, forcing the flexible steel core to be pushed upward against the last tier of each telescopic arm. Because strong force can be achieved with little effort through a pulley system, the roof can be lifted easily.

EASY PATENT # 345966 CRANK-UP LIFTER SYSTEM

Jayco's unique raising system has been thoroughly tested and proven to be one of the best on the market and is relatively simple in operation. The system is operated by a manual winch. As the winch turns, the main cable, which is connected to the four secondary cables from each corner, is shortened. As the main cable shortens, it pulls the secondary cables, forcing the flexible steel core to be pushed upward against the last tier of each telescopic arm. Because strong force can be achieved with little effort through a pulley system, the roof can be lifted easily.

CAUTION: Never attempt to crank roof up with boat or any item on roof.

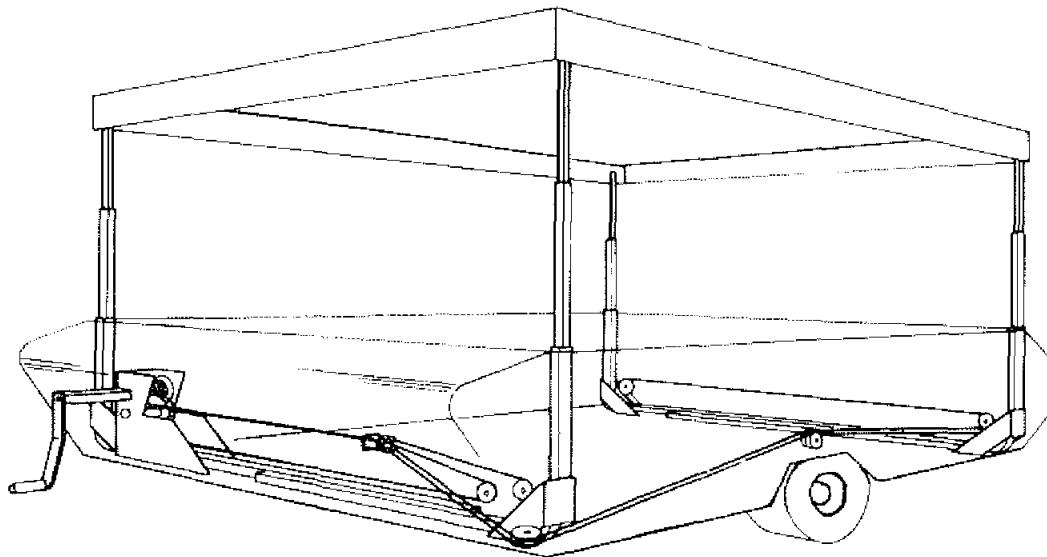



LIMITED WARRANTY

FOLD DOWN CAMPER LIFTER SYSTEM

SUMMARY OF WARRANTY

Jayco Inc. (Jayco) extends to the original retail purchaser (Purchaser) a limited warranty on its Jayco lifter system in Jayco recreational vehicles against defects in material or workmanship for the lifetime of the recreational vehicle.

COMPANY'S OBLIGATIONS

If the lifter system is determined to be defective during the warranty term, Jayco will remedy the defect without charge within a reasonable time after receipt of written notice, either by repair or replacement. Warranty service may be obtained from Jayco or its authorized dealers, or persons designated by Jayco dealers. In the event Purchaser has a defective lifter system repaired by an unauthorized service person and said repairs are covered by this Warranty, Jayco shall be liable only for costs of those repairs up to the amount that Jayco would have incurred if Jayco or an authorized dealer had made the repairs.

Warranty performance will commence within a reasonable time after Jayco's receipt of written notice of the defect and will be completed within a reasonable time, subject to availability of parts and scheduling.

ITEMS EXCLUDED FROM WARRANTY

This warranty does not cover defects caused by:

1. Negligence in operation and maintenance.
2. Misuse of lifter system.
3. Damage not resulting from defect or malfunction (act of God).
4. Any damage whatever if caused by or related to any alternation Jayco lifter system.
5. Claims relating to unauthorized repairs, damage or defects.

PURCHASER'S OBLIGATIONS

Purchaser shall give written notice to Jayco at the address set forth herein within a reasonable time after discovery of the defect. The written notice should contain the following information:

1. Name and mailing address of Purchaser.
2. Proof of date of purchase.
3. Model, year and serial number of the unit.
4. Name and address of dealer from whom unit was purchased.
5. Description of the defect.

All costs incurred by Purchaser in transporting the Jayco lifter system for warranty service shall be borne by Purchaser. No action to enforce this Warranty shall be commenced later than three (3) months after the expiration of the warranty period.

DISCLAIMER OF CONSEQUENTIAL OR INCIDENTAL DAMAGES

Repair or replacement under this Warranty is the exclusive remedy of the Purchaser. JAYCO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY DEFECT IN THE JAYCO LIFTER SYSTEM. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES

JAYCO EXPRESSLY LIMITS ALL IMPLIED WARRANTIES TO THE WARRANTY PERIOD. JAYCO EXPRESSLY DISCLAIMS WITH RESPECT TO THE JAYCO LIFTER SYSTEM ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND ALL IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AFTER EXPIRATION OF THE WARRANTY PERIOD. There is no warranty of any nature made by us beyond that contained in this warranty. No person has authority to enlarge, amend, or modify this warranty.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

PARTS AND DESIGN CHANGES

Jayco may make parts and design changes from time to time without notice and repairs or replacements may be made with new or different parts.

All inquiries regarding this Warranty should be sent to:

JAYCO, INC.
58075 STATE ROAD 13 SOUTH • P.O. BOX 460 • MIDDLEBURY, INDIANA 46540
TELEPHONE: (219) 825-5861

Revised 6/10/86

L.P.-GAS SYSTEM

1. **WARNING:** L.P.-Gas containers shall not be placed or stored inside the vehicle. L.P.-Gas containers are equipped with safety devices which relieve excess pressure by discharging gas into the atmosphere.
2. **WARNING: IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.** Cooking appliances need fresh air for safe operation. Before operation:
 1. Open overhead vent or turn on exhaust fan, and,
 2. Open windowThis warning label has been located in the cooking area to remind you to provide an adequate amount of fresh air for combustion. Unlike homes, the amount of oxygen supply is limited due to the size of the recreational vehicle, and proper ventilation when using the cooking appliance(s) will avoid danger of asphyxiation. It is especially important that cooking appliances not be used for comfort heating, as the danger of asphyxiation is greater when the appliance is used for long periods of time.
3. A warning label has been located near the L.P.-Gas container. This label reads:

DO NOT FILL CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY

Overfilling the L.P.-Gas container can result in uncontrolled gas flow which can cause fire or explosion. A properly filled container will contain approximately 80 percent of its volume as liquid L.P.-Gas.
4. **WARNING:** Portable fuel-burning equipment, including wood and charcoal grills and stoves, shall not be used inside the recreational vehicle. The use of this equipment inside the recreational vehicle may cause fires or asphyxiation.
5. **WARNING:** Do not bring or store L.P.-Gas containers, gasoline or other flammable liquids inside the recreational vehicle. Disregarding this warning may result in fires or explosions.
6. The following label has been placed in the vehicle near the range area:

IF YOU SMELL GAS:

 1. Extinguish any open flames, pilot lights, and all smoking materials.
 2. Do not touch electrical switches.
 3. Shut off the gas supply at the tank valve(s) or gas supply connection.
 4. Open doors and other ventilating openings.
 5. Leave area until odor clears.
 6. Have the gas system checked and leakage source corrected before using again.
7. **Note:** L.P.-Gas regulators must always be installed with the diaphragm vent facing downward. Regulators that are not in compartments have been equipped with a protective cover. Make sure that regulator vent faces downward and that cover is kept in place to minimize vent blockage which could result in excessive gas pressure causing fire or explosion.

CHAPTER IV

THE SYSTEMS

PLUMBING

INSTRUCTIONS FOR SANITIZING POTABLE WATER SYSTEMS OF RECREATIONAL VEHICLES

To assure complete sanitation of your potable water system, it is recommended that the following procedures be followed on a new system, one that has not been used for a period of time, or one that may have become contaminated.

1. Prepare a chlorine solution using one gallon of water and 1/4 cup of Chlorox or Purex household bleach (5% sodium hypochlorite solution). Pour one gallon of solution into tank for each 15 gallons of tank capacity.
2. Complete filling of tank with fresh water. Open each faucet and drain cock until all air has been released from the pipes and entire system is filled.
3. Allow to stand for three hours.
4. Drain and flush with potable fresh water.
5. To remove any excessive chlorine taste or odor which might remain, prepare a solution of one quart vinegar to five gallons water and allow this solution to agitate in tank for several days by vehicle motion.
6. Drain tank and again flush with potable water.

FRESH WATER SYSTEM

Fresh water can be supplied to pump from two methods, either from direct city water hook-up or from a fresh water tank.

A water hose from city water connection to supply faucet needs to be installed. Press handle on hand pump down and hold to receive water. We recommend that a 35 lb. water pressure regulator be used (optional) to control pressure and insure safety of system. Some campgrounds have high water pressure of 100 P.S.I. and over.

A 10 or 15-gallon water supply tank is provided in most models. ("J" series have a 5-gallon jug.) Use a hose to gravity fill the water tank. An overflow hose is supplied and connected to the tank. To pump water, lift handle and down again, repeatedly to obtain a pumping type effect. This will draw water after about 3-5 times. Continue to pump until desired supply has been reached.

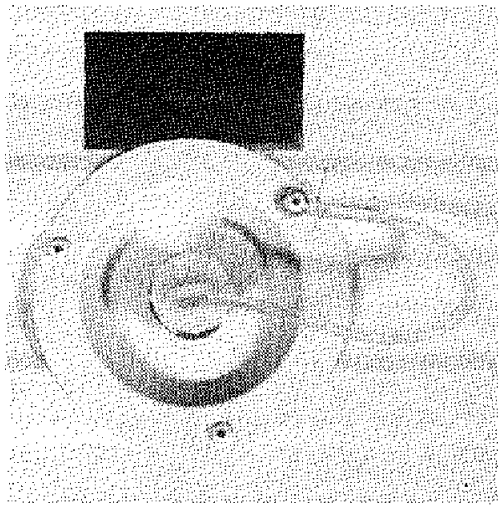


Fig. 9

DRAINAGE SYSTEM

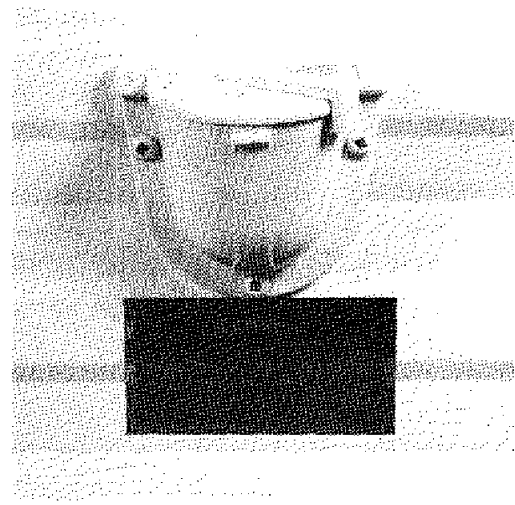


Fig. 10

Figure No. 11 shows the spigot to drain excess water in tank.

Connect a hose to Figure No. 12 outlet and drain sink either to a container to hold waste water or to a direct sewer inlet supplied by some campgrounds. Most campgrounds and some states prohibit sewer water drainage onto the open ground.

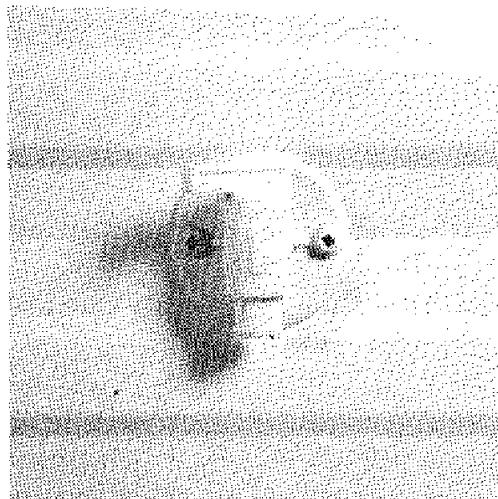


Fig. 11

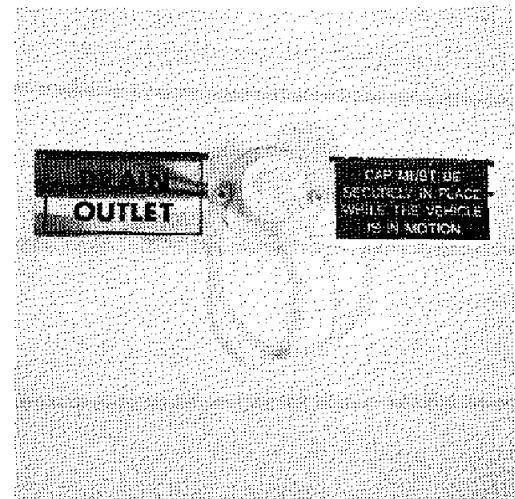



Fig. 12

WINTERIZATION

1. Drain tank entirely. The remaining small quantity of water in a plastic tank will not damage tank by freezing.
2. Be sure that all water has been drained from hand pump. It need not have any anti-freeze put into the pump.
3. If all water cannot be drained or has evaporated from trap under sink it would be advisable to put a small quantity of non-toxic anti-freeze into trap.

L.P.-GAS SYSTEM

L.P.-gas (liquid Petroleum) is a material composed of various hydrocarbons such as propane, propylene, butanes, butylenes, or a mixture of them. In its gaseous form (vaporized) it is colorless and carries an added garlic-like odor for detection. Besides being flammable, it is potentially lethal to inhale. L.P.-gas is compressed into liquid for storage and transportation. L.P.-gas will vaporize during extreme cold (-40°F.).

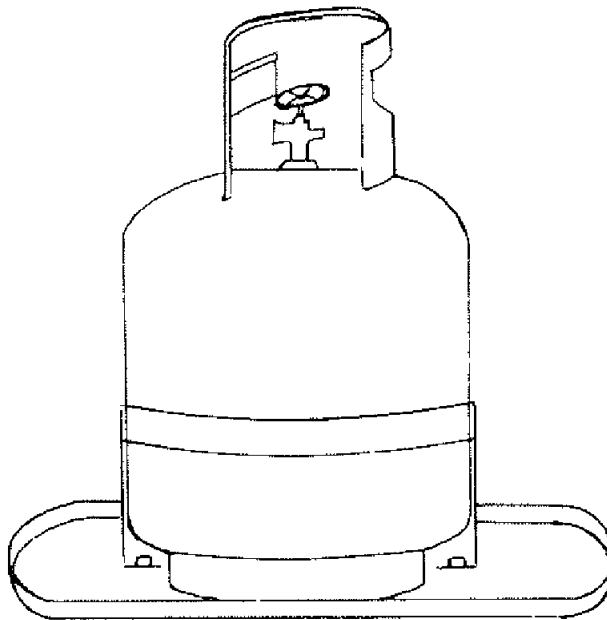

INSTALLATION INSTRUCTION

1. Attach hold-down ring to support plate with bolts provided.
2. Install gas tank into ring and secure with wing nut on rear side of ring.
3. Attach regulator and hose assembly to tank and gas manifold.

L.P.-GAS CONTAINER

The L.P.-gas tank mounted on your vehicle contains L.P.-fuel in liquid form under pressure. As fuel is used, vapor (L.P.-gas) passes from the top of the tank through a dual-stage regulator which reduces the pressure to about 6 1/2 ounces per square inch. Vapor at the low pressure is then transferred through the gas distribution lines for appliance use. You must keep the regulator clean and dry. Its cover should remain in place, and its vent placed according to the manufacturer's instructions.

indicate when the tank is filled to the proper limit by appearance of liquid replacing vapor. At all other times, the overfill valve should be tightly closed by hand only.

The main valve on the L.P.-gas container should be tightened by hand only using caution not to over-tighten. The valve is designed to satisfactorily close with only a reasonable amount of tightening. Continual over-tightening will eventually damage the valve and will require its replacement.

When L.P.-gas containers are filled to the proper level there is available space for safe expansion of the vaporized liquid. If your tank becomes overfilled and is not allowed to "bleed off" before installation with the R.V. system, it may gain pressure due to exposure to hot sun rays and will begin "blowing off" pressure from the relief valve. This can be detected by the strong odor around tanks. Keep open flames away from this area. It is best to remove the bottle, take it to a safe area, and "bleed off" the excess pressure by opening the valve and closing it when discharge has been sufficient.

Handle your L.P.-tanks with care. Note that when disconnecting, you must turn the wrench in a clockwise direction because the connection utilizes left hand threads. When reconnecting, turn wrench counter clockwise. When tightening, only "snug-up" - avoid over-tightening. The tank must be in an upright position at all times.

CAUTION: If you have double bottles on your R.V., use only one at a time. Otherwise the gas supply will be drawn equally from both bottles until supply has been totally exhausted. Using the one bottle until it is empty, then using the second bottle will allow you to fill the empty bottle at your convenience without being totally out of propane.

If you travel alternately on wet roads and in freezing weather, be sure your L.P.-gas regulator is protected from road spray. If water enters the vent in the regulator it may freeze the pressure controlling diaphragm in the open position so that the container pressure is applied to the appliances - a hazardous condition. Follow the instructions given by the manufacturer of the regulator.

CAUTION: Never smoke during filling of L.P.-tanks. Keep the R.V. away from immediate filling area when possible or extinguish all gas pilot lights.

When a L.P.-tank gets low, sometimes there is a concentration of garlic-like odor which may be mistaken for a gas leak. After a changeover to a full tank, the odor usually will soon disappear.

CHECKING FOR LEAKS

Upon delivery and periodically thereafter, check your gas system for possible leaks. Although the entire distribution system and its attached appliances have undergone factory testing for leaks, with normal use being subject to road vibrations, connections, and fittings can develop leaks. If you do encounter this odor, turn off all open flames immediately and commence a systematic search for leaks throughout the gas system. Use a bubble solution or soapy water - NEVER A MATCH - on connections and fittings. Bubbles will appear at the leaky points. When tightening connections, use two wrenches with opposing torque to prevent twisting of copper tubing. If the leak doesn't show up in the manifold or copper tubing distribution system, then check the appliances.

L.P.-GAS REGULATOR SETTING

Never attempt to reset the gas regulator yourself. Have an authorized service agency make any regulator adjustments. Even a little amount of pressure over the recommended setting can cause damage to appliances and regulators. This pressure setting must be performed with a gas pressure gauge or monometer.

Present Codes & Standards require the use of a "Dual-stage" L.P.-gas regulator with an "excess flow" P.O.L. adaptor. The "excess flow" adaptor is built to restrict the flow of escaping gas in the event of a break in the gas supply line.

The "Dual-stage" regulator performs the act of reducing gas pressure in the first stage 10-13 P.S.I. The second stage then reduces it to eleven inches of W.C. (Water Column).

It is important to turn your gas bottle valve slowly to eliminate a chance of a fast rush of gas from the tank. This would possibly "freeze" the excess flow valve and shut off your gas supply. Should this happen, turn off your gas valve at the tank. Wait about 15 minutes and try again.

SERVICING AND FILLING L.P.-CONTAINERS

WARNING: Your vehicle has exterior combustion air inlets. Appliance pilot lights should be turned off during gasoline or L.P.-gas refueling. (Required by law in some states.)

Local regulations sometimes require cylinders be removed from the R.V. for refilling. A relief valve is incorporated on all tanks for safety. This valve is normally opened during fillings and will

L.P.-GAS CONSUMPTION

Most gas appliances are only operated intermittently. Unless there is heavy use of hot water, water heater consumption is not too great. During freezing weather and high wind conditions, furnace consumption can be extremely heavy.

L.P.-gas consumption depends upon individual use of appliances and the length of time operated. Each gallon of L.P.-gas produces about 91,500 BTU's of heat energy. Following is a list of typical appliance consumption when turned full on for one hour of operation:

| APPLIANCE | AVERAGE BTU CONSUMPTION PER HOUR |
|-----------------------------|-------------------------------------|
| Stove: Burner Top - Each | 5,200 |
| Oven Burner - Each | 7,100 |
| Heater (Opt.) | 12,000 - 16,000 |
| Refrigerator: RM2201 (Opt.) | 600 |
| RM2190 (Opt.) | 565 |
| RM2301 (Opt.) | 1000 |
| Water Heater (Deluxe Only) | 9,000 |

Note: The above is an example of a typical system and may not represent the exact system in your particular unit.

USING THE AUTOMATIC CHANGEOVER REGULATOR (For Optional Double Bottles Only)

A useful accessory is an automatic change over regulator. This apparatus allows both gas bottles to be turned on simultaneously. The arrow on the regulator handle indicates which bottle is in service. When the indicated bottle in service becomes empty, changeover is automatically accomplished to commence drawing fuel from the other bottle. At this point, the plastic window will display a red signal or flag to indicate the condition. You should then flip the lever over to indicate service on the other bottle. The first bottle which was depleted can then be turned off, uncoupled and taken to be refilled without disturbing the R.V. gas supply. After refilling, it can be remounted and again turned to the "On" position. When the other bottle is depleted, the L.P.-gas supply will again be automatically changed over.

ELECTRICAL SYSTEM & OPERATION


CONNECTION TO 120-VOLT AC

Your electrical system of 120-volts AC and 12 volts DC has been designed and installed in accordance with the safety requirements

of ANSI Standard A119.2, The National Electrical Code and Canadian Standards Association.

Your new Jayco tent camper is equipped with a 15-amp power cord to connect from the campground outlet to your camper, the power cord is pre-wired into the distribution panel with a 15-amp overcurrent protection breaker and then supplies 120-volt AC to the 12-volt DC power convertor.

To prevent accidental electrical shock, insure that the ground pin on the attachment plug cap is intact to the earth ground through the R.V. park receptacle. When plugged into a receptacle with no provision for the third pin, use an adapter with a pigtail that can be connected to the receptacle box, with the grounding circuit completed through the ground pin or R.V. park receptacle box, any accidental short of a live circuit conductor will trip the circuit breaker indicating a shorted circuit. You should be certain that the polarity of the external power is not reversed, in order to avoid harm to appliances and personal electrical shock. Polarity indicators may be purchased in many electrical and hardware stores.

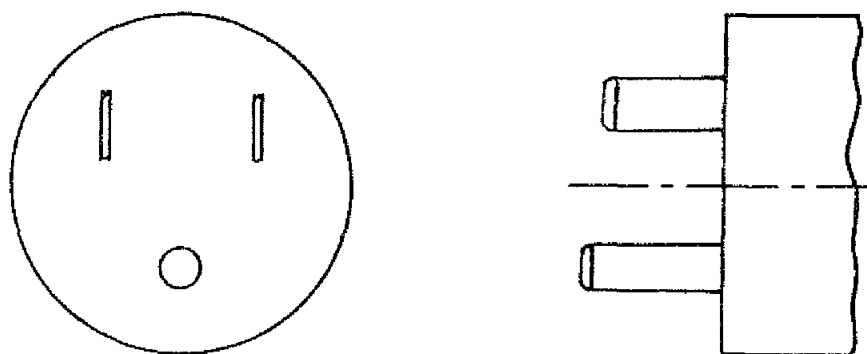

Plug --- ANSI C73.13 --- 120V, 15 Amps, 2 Pole, 3 Wire Grounding Type

CHANGES, MODIFICATIONS, AND ADDITIONS

Any changes or additions made after delivery may develop a hazardous condition. Be sure to consult your local authorized dealer. Only qualified electrical technicians should attempt to make changes, or additions to our electrical system, using only approved materials and components and employing approved methods of installations.

Extension cords should always be a heavy gauge of wire equal to the power cord. Usage of too small a cord will result in overheating and possibly burning of the cord. **DO NOT** leave an unused portion of an extension cord in a coil as it will overheat and short out wires.

12 VOLT DC SYSTEM

The exterior vehicular lights are 12-volt DC and are wired in accordance with an accepted color code.

| | | |
|-------|---|------------------|
| WHITE | - | GROUND |
| GREEN | - | RUNNING LIGHTS |
| RED | - | LEFT TURN, STOP |
| BROWN | - | RIGHT TURN, STOP |
| BLACK | - | 12-VOLT HOT |

J-SERIES YELLOW MAY BE USED FOR STOP CIRCUIT FOR
FOREIGN CAR WIRING ON J-SERIES ONLY
DELUXE JAYCO YELLOW - BACK-UP LIGHT

The connector between tow vehicle and trailer will build up corrosion over a period of time and should be cleaned occasionally to insure good electrical contact.

BULB REPLACEMENT SIZE

| | | |
|------------|---|-------|
| Tail Light | - | #1157 |
| Back Up | - | #1156 |
| Clearance | - | # 194 |
| Entrance | - | #1003 |

The interior lights are 12-volt DC and will operate either from the tow vehicle or from the power convertor. See instruction for convertor operations.

| | | |
|-----------------------|---|------|
| BULB REPLACEMENT SIZE | - | 1141 |
| BLADE TYPE - FUSES | | 7.5A |
| BLADE TYPE - FUSES | | 20A |
| BLADE TYPE - FUSES | | 15A |

The heater blower (optional) will also operate from a 12-volt DC power source.

| |
|--|
| <p>CAUTION: Be sure to turn off all interior lights before folding the camper for transit as the bulbs may cause a fire hazard in the folded position and burn holes into tent.</p> |
|--|

CONVERTOR

Your interior light(s) and heater (optional) will operate from the 12-volt power source. If 110-volt AC is available, the convertor will transform this current to 12-volt. This needs to be switched manually. The **TRANS** position is used when the 110-volt current needs to be transformed to 12-volt. The **BATTERY** position is used when all current is to be received from battery either in tow vehicle or optional auxiliary if used. The **OFF** position is used for traveling or storage.

**A 6 and 10 AMP convertor DOES NOT have a built-in battery charger.
A 20 AMP convertor in Deluxe Series has a battery charger.**

Convertors are standard in Jayco Series 1208, 1206, 1006 & 1008 J-Series.
They are optional in all other J-Series.

BATTERY (OPTIONAL)

All Jayco units are pre-wired so that all interior 12-volt appliances can be operated when the tow vehicle and coach are connected via the wiring harness. This is possible only if the dealer connects the black wire of the wire harness to a "hot" supply. An auxiliary battery may be installed to avoid discharging the vehicle battery. Caution should be used when drawing current from your tow vehicle to avoid draining the battery to a point that the tow vehicle will not start.

FUSES

For the 806 & 705 "J" series without convertor, an in-line fuse for interior circuit is installed, located under the dinette seat, on left front side. The replacement fuse size is 8A.

Other Jayco model tent campers have the interior circuit directed through the convertor.

WARNING: Do not replace circuit breakers or fuses with those of a higher current rating than those supplied with the new camper. Over-fusing can cause a fire hazard by overheating above the temperature rating of the electrical wiring.

In 1988 models, an outside recept equipped with a "G.F.C.I." breaker will be standard on Designer Series campers. On J-Series, this recept will be part of the Deluxe package.

G.F.C.I. BREAKER

These initials mean "Ground Fault Current Interrupter." This special breaker has been designed to reduce the possible injury caused by an electrical shock.

An example of ground fault current is the current which would flow through a person who is using or touching an appliance with faulty insulation and, at the same time, is in contact with an electrical ground such as a plumbing fixture, wet floor, or earth.

This G.F.C.I. Breaker will not protect against short circuits or overloads. The circuit breaker or fuse in the electrical panel which supplies power to the circuit provides this protection.

When this G.F.C.I. Breaker is tripped, it has interrupted ground fault current caused by such things as faulty insulation or wet wiring inside some appliance or equipment connected to the circuit. The faulty equipment should be repaired before it is used again.

This special breaker should be tested monthly. See the small instruction booklet as supplied in your trailer. This G.F.C.I. Breaker is a code requirement.

ROOF VENT

Your new fold-down camper is equipped with a standard 14" roof vent. By turning the crank on the inside, the dome will raise.

An optional 12-volt power fan is available for this vent. The fan will operate on Converter or Battery power. Fresh air is circulated thru the coach for full ventilation. A thermostat is also available to start/stop the fan.

SPECS:

| Speed | AMP Draw | C.F.M. |
|--------------|-----------------|---------------|
| Lo | 3.3 | 577 |
| Med | 5.7 | 782 |
| Hi | 8.3 | 942 |

CHAPTER V


APPLIANCES

STOVE (OPTIONAL IN SOME MODELS)

The 2 or 3-burner stove in your new Jayco has been installed to help make each of your camping trips complete. This appliance works on L.P.-gas and should never be hooked up to a natural gas source. To operate the stove, push in on a particular knob to a designated burner and turn. At the same time, hold a match next to the burner. If there is air in the gas line, it may take a few seconds.

On some models you will have the oven and stove combination. The upper stove portion operates as the above hot plate. The oven has a pilot light and can be easily lit by following these steps:

1. Push dial in, turn right to "OVEN OFF" position.

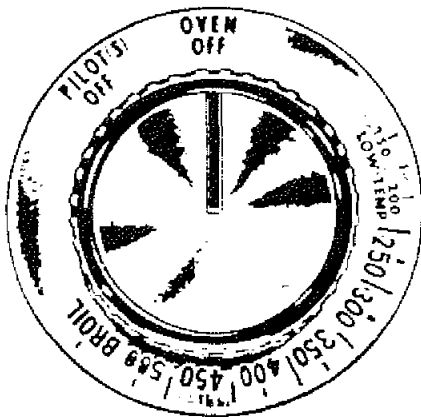

NOTE: BEFORE MOVING VEHICLE, BE SURE OVEN CONTROL DIAL IS TURNED COUNTER-CLOCKWISE TO "PILOT-OFF" POSITION.

2. Light the pilot on the under side on the broiler pan.
3. After the pilot is burning, turn oven dial to desired temperature setting.

The control should be in the "PILOT OFF" position whenever you move your recreational vehicle. This will help conserve fuel. When it is in this position, you will notice the special locking feature which prevents any accidental turning of the dial to an operative position. Whenever the control dial is in the normal "OFF" position the pilot **MUST** be lighted.

CAUTION: Whenever operating stove, oven or other air gas appliance, be sure the appliances get enough fresh air for ventilation.

FURNACE (OPTIONAL)

The furnace utilizes a combustion system which is completely sealed from the interior of the R.V. Combustion air is drawn from the outside and combustion products are expelled outside through the vent.

Initially, the pilot may not light immediately due to air in the gas line. If this is the case, it may be necessary to hold the control in for a minute or more before the pilot lights.

New appliances sometimes emit some smoke when first used due to paint burning off the heating chamber. Do not mistake this smoke for an out-of-adjustment appliance which will emit an acrid odor and cause sooting of flue or vent. During initial burn-off of the furnace, it is recommended that you open windows to exhaust smoke from the interior of the coach.

For additional information and lighting procedures please see manual supplied by the heater manufacture.

REFRIGERATORS (BOTH OPTIONAL)

There are two refrigerators available to be installed in your Jayco tent camper. One model operates on L.P. gas and 110-volt on general operation. Twelve-volt is also available on this model.

The second model is a L.P. gas and 12-volt unit only. It is designed to operate on L.P. gas in the campground and 12-volt is to be used only during travel to maintain coldness.

Operating instructions are supplied by the manufacturer of these units.

If the refrigerator is not level, the cooling process will be partially or totally stopped. For best cooling, level the vehicle and this should level the refrigerator. Remember, it's the refrigerator that must be leveled, so check the freezer shelf of the refrigerator with a bubble level. Installation of small levels on the outside of th trailer make the leveling operation easier.

NOTES: Separate Owner's manuals are supplied from manufacturer of the appliance to assist you in the operation of the various appliances.

See inside of back cover for information on RM361 Refrigerator available in some units.

CHAPTER VI

CARE OF BODY COMPONENTS

EXTERIOR ALUMINUM (SMOOTH FINISH)

Your new Jayco coach has an improved smooth metal with a new polyester automotive paint finish. This metal surface may be cleaned and polished as you would your automobile.

EXTERIOR ALUMINUM (CEDAR EMBOSSED)

The aluminum on the outside of your Jayco can be cleaned and washed the same as an automobile finish. It is suggested that a spray wax, or wash and wax combination, be used for waxing due to the texture of the aluminum. The textured aluminum siding will reduce excess scratching.

EXTERIOR ROOF

The roof on your tent camper needs little maintenance, however, the seams should be examined periodically to insure good continued sealing. Side edges are usually covered with extrusions with a putty sealant. To reseal these edges, especially where it will show, A SILICONE SEALANT OR TEN-X will insure a neat application.

FRAME

The frame on your new Jayco coach has been primed and painted to resist rust and corrosion. It is recommended to periodically inspect the exterior exposed areas, clean and repaint the steel members to insure long life.

DRAPES

The fabrics used throughout your new Jayco tent camper add the final touches of decor. Follow the instructions to maintain the rich beauty they offer.

Your drapes are manufactured from 100% polyester material with a self-liner woven into the fabric. These drapes must be dry cleaned for best results.

| |
|---|
| <p>Care must be taken to follow above instructions or results may not be satisfactory.</p> |
|---|

CUSHIONS

CAUTION: DO NOT DRY CLEAN

If the cushions are dry cleaned, the vinyl on the reverse side of the cushion will shrink, become hard, and crack.

DO NOT REMOVE COVERS

If covers are removed it may be difficult to reinstall covers due to possible shrinking.

To clean your cushion and bed mat covers it is recommended to frequent vacuuming or light brushing to remove dust and grime for prevention of overall soiling.

Spot clean using the foam only from a water-based cleaning agent such as a mild detergent. Apply foam with soft brush in a circular motion. Vacuum when dry. Pretest a small area before proceeding. Use a professional cleaning service when an overall soiled condition has been reached.

TENT (CANVAS MATERIAL)

The canvas used on all Jayco camping trailers is made of 10.10 ounce army duck cotton. It is treated to pass the required Federal Fire Retardant Standards.

If a dirty spot needs to be cleaned, use a damp cloth or sponge with water.

The canvas should not be washed with a detergent as it will remove the waterproof repellence and the fire retardant. Hair spray or insect spray will also remove water repellence.

If the canvas is properly taken care of it should last indefinitely. Be sure your canvas and trailer has good ventilation whenever possible, especially after a rainy period. The largest cause of

damaged canvas is mildew, which is the result of storing your unit for any short period of time with a damp or wet canvas. This is even more important in coastal states which have a damp atmosphere.

THE CARE & REPAIR OF EVOLUTION 3 TENT FABRIC

EVOLUTION 3 tent fabric is a strong, durable three-layer polypropylene laminate which resists common stains, soil, mildew and rot. When soiling does occur, the problem can usually be corrected by the following procedures:

Light brushing with a soft rag will remove most dirt.

For persistent soils:

1. Wet soiled fabric with water;
2. Wash with non-detergent Ivory soap, work into a lather and with a sponge, lightly work the lather into the soiled area;
3. Rinse **thoroughly** with copius amounts of water to remove all residue soap. Residual soap can cause fabric leakage.
4. Air dry completely.

If slight fabric leaking persists due to presence of residual soap, the area may be treated with water repellent such as 3M Scotch Guard Fabric Protector.

The above procedure may also be used to correct spot fabric leaking caused by accidental contact with insect repellents and sprays.

Products containing surfactants, eg. insect repellents, suntan oils can cause a loss of water repellency. This can easily be corrected by following the washing instructions outlined above.

CAUTION: Always be sure the canvas is completely dry before storing. Mildew can start within 24-48 hours after closing camper in a wet condition.

CONDENSATION IN TENTS

Condensation can be a problem in tent campers if proper ventilation is not used. It is recommended that you leave a small opening in each bunk zipper to permit air to flow through and allow the tent to "breathe". This will help eliminate moisture gathering above bunk area on the vinyl.

| |
|---|
| Condensation can be a problem whether a heater is used or not. |
|---|

PANELING

The wall paneling in your new Jayco is a vinyl covered wood panel. If deep scratches occur, they can be covered by using a thin film of shoe polish or stain, followed by a coating of furniture wax. There may be putty sticks available to cover scratches.

To clean, use a mild solution of soap and lukewarm water with a soft sponge or cloth. Refrain from the use of abrasive cleaners. It could cause the vinyl to scratch and turn dull. Grease spots and stubborn dirt can be cleaned off with an all-purpose spray cleaner.

FLOOR

To care for the decorative cushioned linoleum floor covering, wash and wax as you would in your home.

Avoid excessive application of water on new floor as it may cause lifting and curling of the tile. It is best to establish a good coating of wax around edges.

CHAPTER VII

MAINTENANCE

REMOVING TIRE & WHEEL FROM TENT CAMPER

1. Unhook trailer from car.
2. Lower tongue as low as possible.
3. Swing down rear corner stabilizer jack and extend as far as possible.
4. Loosen lug bolts.
5. Raise front end with tongue jack until wheel clears from ground.
6. Remove lug bolts.
7. Remove tire and wheel.

On Flight Series 1982 and older (closed wheel well trailers):

- A. To remove tire it is easier to push bottom side of tire to the center of the trailer and then tip the top side outward until the tire and wheel lays flat on the ground. This is to clear the wheel hub.
- B. It may be necessary to loosen two (2) lug bolts, drive forward, and loosen the other two (2) lug bolts before unhooking from the car and raising up the camper.
- C. On the Flight 6 with the 8-inch wheels, you may not have enough clearance to swing down the stabilizer jack for support. Extra clearance can be achieved by:
 1. Using a separate jack to raise the trailer, preferably hydraulic, screw jack, or scissor jack, etc.
 2. Driving the trailer onto several pieces of wood blocking you may be carrying for using in campgrounds. They should be preferably 2 x 6 wood blocks.

NOTE: There may be situations where the unhooking of the trailer may not be necessary. This instruction sheet is intended to recommend definite workable methods.

CHAPTER VII

MAINTENANCE

Your new Jayco coach is designed to hold maintenance as low as possible. However, maintenance is important to retain its original production as nearly new as possible.

| COMPENENT | MAINTENANCE | AVOID |
|-----------------------|--|--|
| Wheel Bearings | <p>The wheel bearings in your new Jayco tent camper are pregreased. It is recommended that you repack these bearings at 5,000 miles or at the end of each season's camping to prepare for winter months ahead.</p> <p>Be sure to use only a multi-purpose No. 1 or 2 good quality wheel bearing grease.</p> <p>If bearing or cone (race) become pitted, please replace any damaged part.</p> <p>Note: Should you be concerned about heat in wheel bearings, check them occasionally while traveling by placing hand on hub. You will be able to hold your hand momentarily on the hub.</p> <p>Should it be extremely hot, it is recommended to have the bearings inspected by a qualified service center.</p> <p>Note: During break-in period (first 500 miles) your hubs may feel extra warm due to brake shoes setting in with the brake drum.</p> | <p>(a.) Exposure to any water or condensation will cause bearings to rust and be damaged.</p> <p>(b.) Never let bearings run dry.</p> <p>(c.) Never overpack wheel bearings, especially in the middle of hub. It will trap heat if overpacked.</p> |

| COMPONENT | MAINTENANCE | AVOID |
|--------------------|---|--|
| Lug Bolts | <p>Lug bolts must be checked at 50 and 200 miles when your coach is new. After this, lug bolts should be periodically checked for safety, especially before any long trip and extensive braking.</p> <p>Tighten lug bolts to 85-95 ft. pounds torque using a cross tighten sequence of 1-3-2-4.</p> | <p>DO NOT ignore checking wheel lug bolts.</p> |
| Coupler | <p>Use a small quantity of grease on moving mechanism to insure ease of operation.</p> <p>On coaches with surge hydraulic brakes, there is no lubrication needed on coupler assembly.</p> <p>We recommended that you use conventional grease on the ball of hitch for ease of operation.</p> | |
| Tongue Jack | <p>Lubricate the jack by extending to full down position and insert SAE 30 oil through oil hole in top of jack. Do this several times per season.</p> | |
| Tires | <p>It is very important to check tires often as noted on page 12 of Chapter III.</p> | <p>DO NOT ignore checking tire P.S.I. pressures often.</p> |

| COMPONENT | MAINTENANCE | AVOID |
|---------------------|--|--|
| Brakes | <p>It is important to have brakes adjusted by selling dealer between 200-500 miles after initial break-in period. This operation may not be included by selling dealer as part of selling price.</p> <p>After initial break-in it is recommended to adjust the brakes following each 5,000 miles or at beginning of each season's camping trips.</p> | It is very important to keep brakes adjusted as poorly adjusted brakes will not function correctly. |
| Lifter Posts | Your telescoping posts should be lubricated semi-annually with a light coat of silicone spray to insure smooth, trouble-free operation. Do not permit spray to reach tent. | DO NOT use grease or oil on posts as this lubricant will attract dirt and cause tent to become dirty. |
| Winch | The winch should be lubricated once per year, preferably at the season's beginning. Use a small quantity of light oil on two upper shaft bearings and also at each end of main drum which cable rolls on. | |
| Cables | Pulleys and cables need no lubricant at any time. | |
| Push Rod | We suggest you grease the flexible push rod in each corner at the beginning of each season with regular chassis lube. | |

| | | |
|------------------------|---|--|
| L.P. Gas System | <p>At the beginning of each season:</p> <ol style="list-style-type: none"> 1. Inspect all gas lines for crimps and road damage. 2. Check all lines and connections for leakage with soapy water or leak detector. 3. We recommended that you have the regulator checked and adjusted to proper pressure once per year. | <p>DO NOT smoke while changing bottles or any lines.</p> <p>DO NOT allow any connection to be loose.</p> |
| Bed Slides | <p>Be sure to lubricate bed slides twice per year with silicone spray as you do the lifter posts.</p> | |
| Appliances | <p>To care for brushed chrome we recommend you clean with a mild soap and water, wipe dry with soft cloth. Apply a light coat of oil such as "Johnson's Baby Oil" periodically.</p> <p>Various items on these appliances need to be cleaned periodically as need be, such as burner orifices, etc. See individual booklets for directions or see your dealer.</p> <p>On any appliance with porcelain covering, use caution to avoid chipping. Be careful not to drop items on porcelain surfaces.</p> | <p>DO NOT use steel wool, ammonia, acids, or abrasives on chrome surfaces.</p> |

NOTES

OPTIONAL RM2300 REFRIGERATOR

This optional refrigerator is available only to the following fold-down tent camper models:

- JAYKING 6
- JAYCARDINAL 8
- JAYKING 6 SD
- JAYCARDINAL DELUXE
- JAYKING 6 DELUXE


**This option was not available until February 1, 1985.

NOTE: In order to have this refrigerator to function properly, it is extremely important that the installation be completed as per installation instructions. Failure to follow complete instructions will prevent this refrigerator from cooling down correctly and will void all warranties.

Venting is the most critical. Operating instructions for this refrigerator are included with each unit.

TRAVELING POSITION


When folding camper into traveling position, it is **VERY IMPORTANT** to attach the 48" special bungee cord into the loops provided to insure tent material from blocking the upper vents while traveling. If overhead cabinets are removed, you must use a 36" bungee cord in order to maintain tension on canvas. See Figure 1.

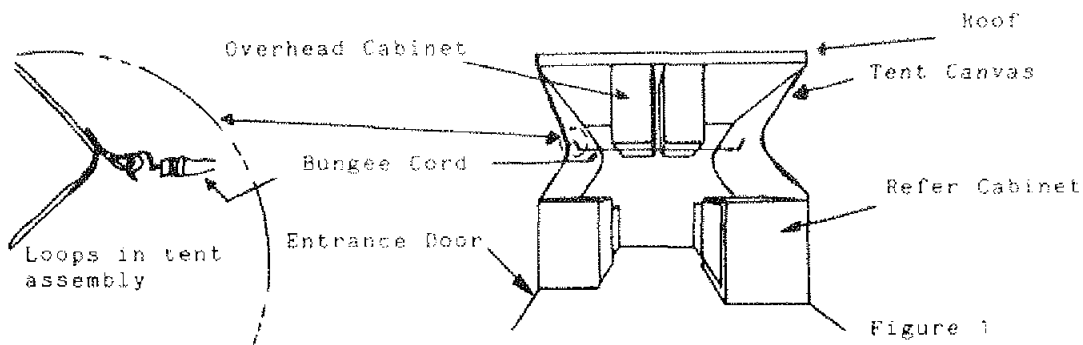

CAMPING POSITION

When raising camper into camping position, remove the 48" special bungee cord from the loops which are located above refrigerator counter top and beside the left side of the entrance door.

Jayco has an RV just for *you!*

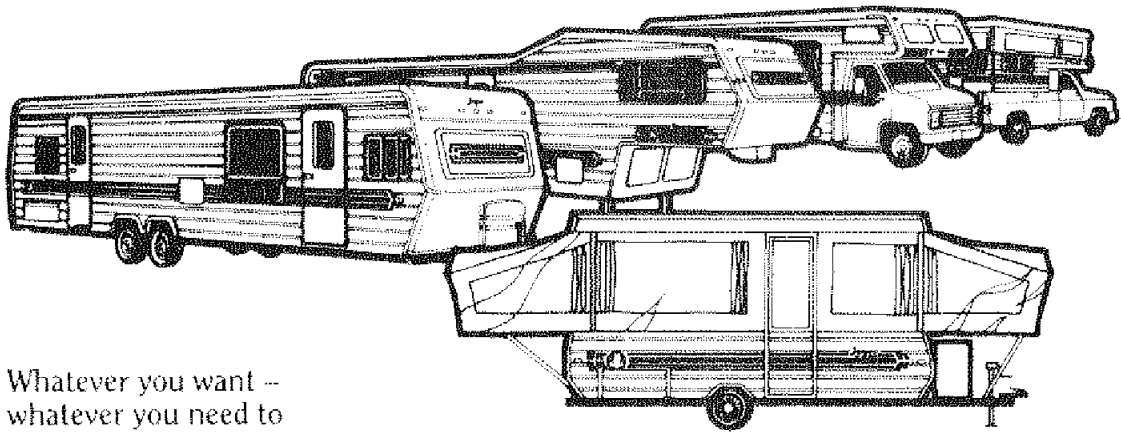

Whatever you want --
whatever you need to
get the most out of
your recreational time,
Jayco has an RV to meet
your requirements: fold-
downs, truck campers,
travel trailers, fifth wheels,
mini motorhomes. In a variety
of sizes and prices. They're all
beautifully designed, ruggedly
built, and loaded with features
that let you live life to the fullest.
Visit us today and we'll show you
what we mean.



Incorporated, 58075 S.R. 13 South, P.O. Box 460
Middlebury, Indiana 46540