

GREYHAWK™ & GRANITE RIDGE™



MOTORHOMES BY JAYCO



OWNER'S MANUAL



WARNING: Read all instructions in this manual and component part manufacturer supplied information before using your RV.

This manual has been provided by Jayco, Inc. for the sole purpose of providing instructions concerning the operation and maintenance of this vehicle and its component parts. Nothing in this manual creates any warranty, either expressed or implied. The only warranty offered by Jayco, Inc. is the limited, express warranty applicable to this vehicle.

The owner's failure to provide required service and/or maintenance results in the loss of warranty. The owner should review Jayco's limited, express warranty and the warranties that apply to specific component parts that are offered with this vehicle.

Instructions are included in the manual for operating various component parts which are optional on some vehicles. In addition, the owner should refer to individual manufacturer's operating instructions contained in the owner's packet.

YOUR NEW JAYCO IS YOUR PASSPORT TO A WHOLE WORLD OF NEW FRIENDS,
CAMPING FUN AND TRAVEL ADVENTURE WHEN YOU JOIN THE THOUSANDS OF
JAYCO FAMILIES WHO MAKE UP THE . . .

JAYCO JAFARI INTERNATIONAL TRAVEL CLUB

You will find us enjoying the friendship and fellowship of JAFARI CAMPING as we join our
local area FLIGHTS at hundreds of weekend camp-outs all over North America each month . . .

WE'RE THE FAMILIES OF JAYCO!

There are special STATE, REGIONAL and INTERNATIONAL RALLIES where you can join
with your fellow JAFARIANS and their flights to enjoy a special kind of togetherness . . . fun,
games, and entertainment provide memories to last a lifetime.

And . . . how about the exotic surroundings of NEW ORLEANS, the sounds and color of
NASHVILLE and the GRAND OLE OPRY, the roar and rush of the INDIANAPOLIS 500, the
quiet surroundings of the CANADIAN ROCKIES, the color of the SMOKY MOUNTAINS in
the Fall. These and many other adventures can be yours when you join the. . .

JAYCO JAFARI INTERNATIONAL TRAVEL CLUB

Fill in the blanks on the reverse side, cut along dotted line and mail along with a check to:

JAYCO JAFARI INT'L TRAVEL CLUB

ATTN: Membership Coordinator

P.O. Box 192

Osceola, IN 46561-0192

Yes, it's for everyone with a JAYCO RV; young couples just starting out, families spending quality time together, the young at heart expanding their life experiences. Whether you belong to another camping club, have always traveled alone, or are just starting, don't miss out on one of the most priceless benefits of being an RV family . . . meet new friends and spend a bit of your camping life with some of the finest people you will ever have the opportunity to share a campfire or treasure a moment of golden living with a . . . FIFTH-WHEEL TRAVEL TRAILER. . . SPORT UTILITY TRAILER . . . TYPE A MOTORHOME. . . CONVENTIONAL TRAVEL TRAILER . . . TYPE C MOTORHOME . . . FOLDING CAMPING TRAILER . . . it doesn't matter. If you are a JAYCO RV FAMILY, then you are eligible to become a Jayco Jafari Member.

YOU WILL NEVER BE SORRY YOU MADE THE DECISION!

In addition to the special international decals for your unit, the Hitch newsletter with schedules of upcoming events and activities, your membership entitles you to the following special benefits. A membership roster - containing the names and addresses of current members of the club will be sent bi-yearly. Discount Cards for several national theme parks including Six Flags and Busch Corp. Parks. A special price is available on Wheeler's Campground Guides. Discounts with Hertz Rental Car are offered, as well as discounts with Coach Net, and emergency roadside service. Farm & City Insurance has RV insurance available at discounted rates to current Jayco Jafari International Club members. All of this, plus the joy of meeting new friends and enjoying Jafari adventures around the country. Start with the first phase of your camping life...just complete the application and forward it to the Jayco Jafari International Travel Club office.

WELCOME TO THE JAFARI FAMILY!



TO: Membership Coordinator for the Jayco Jafari International Travel Club

Please enroll us as members in the Jayco Travel Club. We are ready to roll to where the "friends we just haven't met yet" have the coffee on the fire and are waiting for us to arrive: We are ...

Name: _____ Spouse: _____

Address: _____ Phone: _____

City: _____ State: _____ Zip: _____

Email: _____

Ages of Children at Home: _____

Our JAYCO is a: _____ Our Dealer _____
(type & size)

Membership Dues:

One year \$25.00

Two years: \$40.00

Three years: \$55.00

Amount enclosed. \$ _____

Check #: _____

(signature)

(date)

TABLE OF CONTENTS

Welcome	1
Safety	3
Safety Considerations.	3
Reporting Safety Defects	3
Safety in Using LP Gas	4
Checking for Leaks	4
To Leak Test the LP Gas System:.	4
If a Leak is Detected:	5
Electrical System Safety	5
Fire Extinguisher	5
Inspection and Maintenance	5
Carbon Monoxide Detector	6
Emergency Exit Window	7
Safety When Emergency Stopping	7
Smoke Detector	7
Additional Safety Considerations	8
Cold Weather/Extended Use	8
Condensation	9
Insurance	9
Before you travel...	11
Weights and Cargo Capacity	11
Loading Cargo.	12
Holding Tank(s) and Motorhome Weight	13
Rear Bumper	14
Hitch	14
Trailer Brakes	14
Weighing Instructions	15
Tires	16
Wheel Lugs	17
Seat Belts	17
Driving	17
Back Up Camera.	18
Power Mirrors	18
To Operate:	18
Electric Door Step (Standard on some models)	18
Pre-Travel Checklist.	19
Setting up Camp...	23
Selecting your Campsite.	23
Setting Up Your Motorhome	24
Leveling Your Motorhome	24
Additional Set Up	24
Stabilizer Jacks	24
Television	24

Antenna	24
Cable	25
Satellite	25
Slideout Room Option	25
Components	25
Important Slideout Instructions	26
Extending Room	26
Retracting Room	26
Awning Set Up	27
Utility Hookups	27
Electricity	27
Water	27
Utility Center Label Definitions.	28
Utility Center Operation.	29
12 Volt DC Demand Pump	30
Safety	30
Water Pressure Regulator	30
LP Gas Connections and Start Up	30
Waste Disposal	31
To Connect the Motorhome for Waste Disposal:.	31
No-Fuss Flush System	31
At Camp...	33
Appliances.	33
Kitchen	33
Range	33
Microwave	33
Refrigerator	33
Furnace.	33
Water Heater	34
Bathroom	34
Toilet	34
Faucets	34
Water Purification System	35
To Replace the Filter:	35
Air Conditioner	35
Generator	36
Entertainment	36
Monitor Panel	36
Operation	37
BBQ Grill (Option)	37
Utilities & Systems	39
Plumbing System	39
Utility Center (Manifold) Operation	39
Sanitizing Units with Utility Center.	39

To Remove Excess Chlorine Odor and Taste:	40
Drainage	40
Sanitation System	41
Using Toilet and Tank System	41
Vents	41
Holding Tanks	41
Waste (Black) Tank Preparation	41
Gray Water Holding Tank.	41
Heated Holding Tanks	42
LP Gas System.	42
Servicing and Filling LP Gas Tank	45
Fuel Distribution Components	46
POL Adapter and Low Pressure	46
Regulator	46
Main Supply Hose – Low Pressure	46
LP Gas Consumption	46
LP Detector.	47
Electrical System	48
General	48
120-Volt AC System	48
Power Cord	48
Power Center	49
AC Distribution Center	49
GFCI	49
Testing Instructions	49
30-amp Service	50
Consumption of 120-Volt AC Power	50
12-Volt DC (Direct Current) System	51
Batteries, Chassis and Auxiliary	51
To Recharge the Auxiliary Battery:	51
Isolators	52
Master Battery Switch.	52
Auxiliary Start System	52
To Start the Unit When the Chassis Battery Has Been Discharged:	52
Inverter (Option)	52
Generator (Option)	52
Lights.	53
Dome	53
Exterior	53
Light Bulbs	53
Fuse Chart	53
Changes, Modifications and Additions.	54
Preparing to Travel Home....	55
Departing Camp Checklist.	55

Draining the Holding Tanks	56
To empty holding tank:.	57
Maintaining Your Investment....	59
Maintenance	59
Exterior	59
Fiberglass Sidewalls	59
Rubber Roof	59
Roof Ladder	59
Sealing	60
Chassis	60
Spare Tire Carrier	61
Front Axle Alignment	61
Wheel Liners	62
Clearance Lights.	62
Doors, Extrusions, Windows & Vents	62
Entrance Door	62
LP Gas System.	63
Furnace Maintenance	63
Air Conditioner	64
Battery.	64
Carbon Monoxide Detector	64
TV Antenna	64
ABS Plastics.	65
For Cleaning:	65
Bathroom Tub, Lavatory Sink	65
Hardware and Sink or Shower Fixtures	65
Toilet	65
Furniture.	65
Cloth Furniture	65
Synthetic Leather.	65
To Operate Sofa/Recliner Footrest:	65
Cushions.	66
Bedspread	66
Window Treatments	66
Paneling	66
Vinyl Floor	66
Carpeting	67
Countertops	67
High Pressure Laminate	67
Slideout	67
Troubleshooting Electric Slideout	67
Overriding the Electric Slideout System	68
Electrical Wiring Information.	69
Maintenance Checklist	70

Storing your unit...	73
Winterizing	73
Air Pressure (all models)	73
Utility Center with Antifreeze	74
Battery	74
Warranty/Service	77
Warranty Registration and Customer Delivery Form	78
Informal Dispute Resolution	79
Motorized Transferable Limited Warranty	80
Limited Warranty Transfer	82
Service Procedures	84
Basic Service Procedures	84
Independent, Authorized Dealer	85
Parts	85
Owner's Responsibility	85
Manufacturer's Customer Support Directory	86
Index	87

NOTES

[illegible]

WELCOME

Thank you for purchasing your Jayco Recreation Vehicle (RV) and welcome to the world of recreation vehicle travel. Your purchase of a Jayco RV allows you to enter this unique world of camping and leisure in a grand style. Your Jayco RV has been designed and engineered to offer many comforts of home to make your camping experience as enjoyable as possible. Jayco RVs are designed, constructed and intended to be used as temporary living quarters for recreational, camping and travel uses, as defined in the bylaws of the Recreation Vehicle Industry Association. Our recreation vehicles are not intended for hauling of cargo.

This owner's manual will assist you in understanding the RV's proper use and operation. If you are a newcomer to RV travel, you will appreciate the suggestions and "shop talk" information found throughout this manual.

Keep this manual in your recreation vehicle for handy reference. Get to know your new vehicle and how it operates. The information in this manual reflects the most current available to us at the time of publication. This manual is a supplement to various other instructions supplied by the manufacturers of separately warranted products. Carefully read, understand and follow this owner's manual and all information supplied by manufacturers of components. This information contains important operating, safety, and maintenance instructions. Direct questions that are not answered by the owner's manual or other booklets, to your independent, authorized dealer. If they cannot satisfactorily answer your questions, they will call or refer you to the component part manufacturer or Jayco.

Your vehicle was manufactured based on the applicable requirements of:

- Federal Motor Vehicle Safety Standards
- State Regulations
- Canadian Standards Associations (CSA) (where applicable)
- Requirements of ANSI Standard A119.2, the nationally recognized "Standard For Recreation Vehicles – Installation of Plumbing, Heating and Electrical Systems."

The Recreation Vehicle Industry Association (RVIA) and Canadian Standards Association (CSA) periodically inspect our production line and assist us in maintaining strict compliance with installation and safety standards for those systems.

Periodic safety inspections and a program of preventive maintenance are necessary for the continuation of safe and trouble-free operation.

Camping is a great way to relax and enjoy the outdoors with your friends and family. Please remember to tread lightly on our beautiful land and leave only your footprints so that others may enjoy nature as much as you did.

The Jayco Family


Jayco, Inc.

[illegible]

SAFETY


SAFETY CONSIDERATIONS


The safe operation of your motorhome requires that you use common sense and follow safety procedures as defined in this manual and all supplied information from specific component part manufacturers. In this manual, there are specific terms and symbols to indicate areas of potential hazards, which are based on the ANSI Z535 series of safety information. Make sure you understand the use of these terms and symbols as defined here.

 **NOTE** provides additional information to make a step or procedure easier or clearer. Disregarding a NOTE could cause inconvenience, and would not be likely to cause damage or personal injury.

Caution is an area that mechanical or property damage is likely to happen if the instructions are not followed. However, in the case of a caution **without the safety alert symbol**, the damage will only occur to the property and should not cause personal injury. **See below for the definition of injury related cautions.**

 - **This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages to avoid possible injury or death.**

 **CAUTION** is an indication of areas where minor or moderate injury may occur if instructions are not followed. Mechanical or property damage may also occur.

 **WARNING** emphasizes areas where there is potential for personal injury or even death if you fail to follow the instructions. Mechanical or property damage may also occur.

 **DANGER** indicates an immediate hazard situation where death or serious injury will result if instructions are not followed. Mechanical or property damage may also occur.

Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a crash, injury or death, immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Jayco, Inc. If NHTSA receives similar complaints, they may open an investigation. If they find a safety defect exists in a group of vehicles, a recall and remedy campaign may be ordered. NHTSA cannot become involved in individual problems between you, your independent, authorized dealer or Jayco, Inc.

NHTSA	Customer Relations Dept.
U.S. Department of Transportation	Jayco Incorporated
Washington, D.C. 20590	P.O. Box 460, Middlebury, IN 46540
Phone: 1-800-424-9393	Email: service@jayco.com
Washington, D.C. Area: 368-0123	Business Hours: 8:00-5:00 Mon.–Fri.

You can obtain other information about motor vehicle safety from the NHTSA Hotline.

Safety in Using LP Gas

We recommend that all work on the LP gas system be performed by your independent, authorized dealer. The following information is provided to give a basic understanding of LP gas.

Your recreation vehicle is equipped with an LP gas system to help provide some of the comforts of home. This system is very dangerous. Proper handling of LP Gas, knowledge of your system and routine maintenance are key factors to your safety and that of others around you. The following list provides basic information for LP gas safety:

- LP gas is heavier than air. Leaking gas tends to flow to and pocket in low areas, such as the motorhome floor.
- LP gas is colorless and odorless. A chemical odorant, smelling similar to rotten eggs, is added by the gas manufacturer to make sure leaks are identifiable, which can normally be smelled if there is a leak.
- Never light a match or allow any open flame in the presence of leaking gas or the smell of LP gas.
- Turn off LP gas while refueling the tow vehicle.
- Some states prohibit gas appliances to be operated during travel, especially in tunnels. Make sure you know the laws for the areas where you travel.
- Never allow LP gas tanks to be filled above the liquid capacity as indicated on the tank. If a tank is overfilled, liquid gas may flow through the regulator causing it to freeze and/or create dangerously excessive pressure in the lines. Make sure that an overfilled tank is taken care of by an LP gas professional before it is put into service.
- An overfilled tank placed in sunlight may expel excess gas through the relief valve. This causes susceptibility to ignition by nearby open flame.

Taking time to become educated about LP gas and how it should be handled are critical to your camping experience. If you have questions, consult with your independent, authorized dealer or LP gas professional.

Checking for Leaks

LP gas is both colorless and odorless. For your safety, a chemical agent is added by the gas manufacturer which smells similar to rotten eggs. If you are not accustomed to the smell of LP gas, ask your independent, authorized dealer or LP gas service personnel to help you and your family become familiar with it.

Vibration from travel can cause connections to loosen. This requires that the LP gas system be checked periodically for leaks. The system has been tested by the manufacturer and Jayco recommends that the independent, authorized dealer test the system as well. However, continued maintenance is recommended for safe operation.

TO LEAK TEST THE LP GAS SYSTEM:

- Use an appropriate LP detector solution or create a soapy water solution. **If soapy water is used, make sure that the soap used does not contain ammonia or chlorine.**
- Apply the solution to all gas piping connections.
- If a leak is present, the soap will bubble at the connections.



WARNING: DO NOT USE A FLAME OR LIGHTED MATCH TO TEST FOR LEAKS.

IF A LEAK IS DETECTED:

- Turn off all appliances that utilize LP gas.
- Make sure that everyone is out of the RV, including pets.
- Turn off the LP gas at the tank(s).
- Take your RV to your independent, authorized dealer and have the system repaired before using it again.



WARNING: WE STRONGLY RECOMMEND THAT YOU HAVE A PROFESSIONAL TEST YOUR LP GAS SYSTEM FOR LEAKS ONE TIME EACH YEAR AS PART OF NORMAL MAINTENANCE.

Electrical System Safety

Circuit breakers and fuses are installed to protect electrical circuits from overloading. Do not make unauthorized changes to circuitry or add fixed appliances. If you wish to make changes, consult your independent, authorized dealer and they will assist you in obtaining a safe installation.

An approved power cord has been supplied with the vehicle. Always use this cord for hook-up to 120-volt shoreline power. The cord has a three pin plug, which provides proper grounding through the third (round) pin. Grounding is personal protection from electrical shock.



WARNING: Do not use an adapter, cheater, or extension cord that will break the continuity of the grounding circuit connected to the third pin. NEVER remove the grounding pin to connect a non-grounded, two-prong receptacle. Any deviation from this will potentially cause a fire from overheating.

Fire Extinguisher

A fire extinguisher is installed in each vehicle and is located near the entrance door in the motorhome. Be familiar with its location and operating instructions as printed on the extinguisher and any materials from the extinguisher supplier or manufacturer. It is too late to become familiar with an extinguisher when an emergency is at hand.


The fire extinguisher is a dry chemical, nonrefillable extinguisher. Do not test this extinguisher by partially discharging. Doing so will cause loss of pressure making the extinguisher unusable. The extinguisher must be discarded and replaced by a new one if any use has occurred.


INSPECTION AND MAINTENANCE

To insure that your fire extinguisher will be ready when needed:

- Read and follow all instructions on label and in owner's manual.
- Inspect the extinguisher AT LEAST once a month - more frequently if exposed to weather or possible tampering.
- Check pressure by pressing in white indicator button. If button does not spring back, extinguisher will not work properly and must be discarded.
- Be sure the yellow lock pin is firmly in place.

- Keep the extinguisher clean. Check for dents, scratches, corrosion or any other damage.
- Check the discharge nozzle. Make sure it is clean and free of obstructions.


 **CAUTION:** Under certain fire and heat conditions, the dry chemical powder in this extinguisher (and similar units) will cause damage or prove extremely difficult to remove from oven surfaces, including self-cleaning models. Do not use self-cleaning feature to remove ABC Powder.

 **CAUTION:** Avoid inhaling the dry chemical agent contained in the extinguisher. It is not toxic, but may cause skin irritation. In case of contact, flush affected area with clean, cool water. If irritation persists, contact a physician immediately. Chemical name of agent is printed on extinguisher label.

Carbon Monoxide Detector

Carbon monoxide (CO) is an odorless, colorless, tasteless gas that is extremely dangerous to humans and animals. The following table contains symptoms indicative of individuals exposed to carbon monoxide:

Symptoms of Carbon Monoxide Exposure		
Headache	Fatigue (often described as “flu” like symptoms)	Unconsciousness
Running nose	Dizziness	Convulsions
Sore eyes	Drowsiness	Brain damage
Nausea	Confusion	Cardio respiratory failure
Vomiting	Fast heart rate	Death

 **DANGER:** Any amount of exposure to CO is dangerous and must be taken care of before reentering the RV. If anyone develops symptoms as listed, make sure that everyone gets to an area of fresh air. Failure to do so could result in death or serious illness.

A UL listed carbon monoxide detector has been installed in your motorhome. It is designed to detect toxic CO fumes. It is not a substitute for other combustible gas, fire or smoke alarms. Information has been supplied by the carbon monoxide detector manufacturer for operation, safety and maintenance. Make sure that you read, understand and follow all information supplied by the CO detector manufacturer with your RV.


Emergency Exit Window

An emergency exit window is installed in your motorhome, typically on the rear wall or sidewall opposite the entry door. The window is identified by red snap latches and a white label with red letters indicating "EXIT."

If access to the main door is not available, this window provides an exit from the vehicle during an emergency. An emergency exit may also be available through the driver's side cab door. Practice opening the window BEFORE an emergency occurs, and make sure all occupants know how it operates.

Safety When Emergency Stopping

Pull off the roadway as far as possible for emergency situations and turn on the tow vehicle's warning flashers. If necessary, display your road flags and/or reflective triangles.

 **NOTE:** Always carry road flags and/or reflective triangles to be displayed when necessary.

Smoke Detector

A smoke detector is supplied with your motorhome. This safety device must be correctly maintained to work properly and warn you of smoke in your motorhome. Make sure that you read, understand and follow all warnings, cautions, operating and maintenance instructions supplied by the smoke detector manufacturer.



WARNING: Improper maintenance of the smoke alarm as instructed by the smoke alarm manufacturer creates the potential for death, personal injury and/or property damage. Make sure that everyone knows and understands the procedures to follow if the alarm is sounded.

Also, you need to read, understand and follow the warning label that has been affixed in your motorhome adjacent to the smoke detector. The label reads as follows:



WARNING

**TEST SMOKE ALARM OPERATION AFTER VEHICLE
HAS BEEN IN STORAGE, BEFORE EACH TRIP, AND AT
LEAST ONCE PER WEEK DURING USE.
FAILURE TO COMPLY MAY RESULT IN
SERIOUS INJURY.**

Additional Safety Considerations



WARNING: For traveling safety, it is extremely important to read, understand and follow the towing, hitching and loading cargo information provided in the Travel Chapter. If you do not understand the information provided, please consult your independent, authorized dealer.

- Sanitize the fresh water supply system periodically (see sanitizing instructions).
- Prevent water connections from coming in contact with the ground or drain hose to reduce chance of contamination.
- Have a certified RV technician repair and maintain the gas or electrical appliances.
- Carefully read the loading section in the Travel Chapter related to your motorhome.
- Ensure that the tires are in good condition and properly inflated. Monitor the tire pressure closely for proper inflation. Neglecting to do so could result in overheating of a tire, which could result in a blowout.
- Check and tighten the wheel lugs regularly, according to your chassis owner's manual recommendations.
- Check the brakes in a safe area - not while traveling on a busy highway.
- Before leaving a camp area, refer to the "Preparing to Travel Home..." chapter and read, understand and follow all applicable instructions.
- Observe the warning labels attached to your vehicle concerning LP gas, water, electricity and loading.
- Observe the maintenance chart in this manual and all applicable information supplied by component part manufacturers related to your respective unit.

COLD WEATHER/EXTENDED USE

Your motorhome has been built for enjoyment in a recreational manner. It is not intended to be used as full-time living quarters.

Caution: Continuous living in your motorhome could cause accelerated wear and damage to component parts. It also voids the warranty.

- Use of this motorhome during cold weather will require more protection. Using skirting or insulation below floor level will provide additional protection if you are camped in one area for an extended period.
- Proper care should be taken with the fresh water and drainage systems to avoid freezing problems. Consult with your independent, authorized dealer or RV supply house for advice on heat tapes, etc.
- Adequate gas and electrical supply is needed along with protection from possible freeze-ups on gas regulator. The furnace will substantially increase battery draw and LP gas use.
- During cool weather usage, ventilation or the addition of a may be required to reduce condensation. See the next section for important information on controlling condensation.

CONDENSATION

Condensation is a natural phenomenon. The amount of condensation will vary with the climate conditions, particularly the relative humidity. Condensation occurs because there is water vapor present in the air, which is added by breathing, bathing and cooking. The water vapor collects where there is available air space, and when the temperature reaches the 'dew point' the water vapor in the air condenses and changes to liquid form. Most people have experienced a similar phenomenon when moisture forms on kitchen windows and bathroom mirrors during cool weather.

Proper ventilation and, if needed, the use of a dehumidifier will assist in controlling the condensation. Many RV and marine dealers carry small dehumidifiers especially sized for recreation use. Condensation causes dampness, mildew, staining and if allowed to continue at high levels, damage to the paneling and wood structures. It is the owner's responsibility to make sure that condensation is properly removed from the air.

INSURANCE

As with your automobile, it is important that you protect yourself and others with insurance coverages for personal liability, theft, collision, property damage, etc. Your independent, authorized dealer can assist you in obtaining appropriate insurance for your protection or you may check with the company which provides your automobile insurance or other insurance companies.

NOTES

[illegible]

BEFORE YOU TRAVEL...

WEIGHTS AND CARGO CAPACITY

The safety of your travel will be affected by your understanding of weights and cargo distribution for your motorhome. Read, understand and follow all information related to the weight of your motorhome. We provide the following labels on your motorhome (copies are printed here):

- The “Federal Certification” (Fig. 1) label is affixed to the post of the driver’s door. It lists the vehicle weights as well as the tire and axle rating information.
- The “Motorhome Weight Information” (Fig. 2) label is typically located inside the base kitchen cupboard on the cabinet door. This label is critical in understanding motorhome weight definitions. Please read, understand and follow all of these definitions. In addition to the label information, the GAWR is the maximum weight rating that components of each axle are designed to support (i.e. tires, brakes, springs, axle). Information that seems unclear should be discussed with your independent, authorized dealer.

The weights of your unit are the model’s dry weights with standard equipment. **It is critical that you do not exceed the gross vehicle weight rating (GVWR) of your motorhome.** As you begin to load your personal cargo, remember that what you load as well as options that have been added will affect the overall weight. **Never exceed the gross vehicle weight rating of your unit.**



WARNING: Do not add accessories or component parts that are not safe and appropriate for this product. These changes will effect weight specifications, void the warranty and adversely effect handling and stability of the unit, as well as accelerate wear to other component parts. Jayco, Inc. DOES NOT provide warranty coverage for equipment installed by the independent, authorized dealer or owner.

MANUFACTURED BY: FABRIQUÉ PAR:		JAYCO, INC.		DATE _____	
INC. VEHICLE MFG. BY: VÉHICULE FABRIQUÉ PAR:		V.I.N./N.I.V.		PRESS./COLD INFL. PRESS. DE GONFL. À FROID	
GVWR/PNBV: KG		SIZE/DIMENSION		PSI/LPC KPA	
GAWR/PNBE: KG		TIRE/PNEU		RIMS/JANTE	
FRONT/DEVANT		INT/CENTRAL		REAR/ARRIÈRE	
TYPE OF VEHICLE/TYPE DE VÉHICULE: MOTOR HOME/AUTOCARAVANE MULTIPURPOSE PASSENGER VEHICLE/VÉHICULE DE TOURISME À USAGES MULTIPLES					
THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS AND STANDARDS PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY REGULATIONS EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE.			CE VÉHICULE CONFORME À TOUTES LES NORMES QUI LUI SONT APPLICABLES EN VERTU DU RÈGLEMENT SUR LA SÉCURITÉ DES VÉHICULES AUTOMOBILE DU CANADA EN VIGUEUR À LA DATE SA FABRICATION CI-DESSUS.		

Fig. 1

MOTORHOME WEIGHT INFORMATION			
SERIAL # _____		MODEL _____	
GVWR	(GROSS VEHICLE WEIGHT RATING) MEANS THE MAXIMUM PERMISSIBLE WEIGH OF THIS FULLY LOADED MOTORHOME.		
UVW	(UNLOADED VEHICLE WEIGHT) MEANS THE WEIGHT OF THIS MOTORHOME AS MANUFACTURED AT THE FACTORY WITH FUEL ENGINE OIL, AND COOLANTS.		
SCWR	(SLEEPING CAPACITY WEIGHT RATING) MEANS THE DESIGNATED NUMBER OF SLEEPING POSITIONS MULTIPLIED BY 154 LBS (70 KG).		
GCC	(GROSS CARRYING CAPACITY) MEANS THE MAXIMUM CARRYING CAPACITY OF THIS MOTORHOME. THE GCC IS EQUAL TO THE GVWR MINUS UVW. THE GCC WILL BE REDUCED BY THE WEIGHT OF FRESH WATER, OR OTHER TANKS, LP-GAS, OCCUPANTS, PERSONAL ITEMS, OR DEALER INSTALLED ACCESSORIES.		
CCC	(CARGO CARRYING CAPACITY) IS EQUAL TO GVWR MINUS EACH OF THE FOLLOWING: UVW, FULL FRESH WATER (POTABLE), WATER WEIGHT (INCLUDING THE WATER HEATER), FULL LP-GAS WEIGHT AND SCWR.		
GCWR	(GROSS COMBINATION WEIGHT RATING) MEANS THE VALUE SPECIFIED BY THE MOTORHOME MANUFACTURER AS THE MAXIMUM ALLOWABLE WEIGHT OF THIS MOTORHOME WITH ITS TOWED TRAILER OR TOWED VEHICLE. THE GCWR IS NOT AN INDICATION OF BRAKING CAPACITY FOR THIS MOTORHOME.		
The GCWR of this motorhome is		Lbs. (kg.)
The maximum allowable hitch weight is		Lbs. (kg.)
CARGO CARRYING CAPACITY (CCC) COMPUTATION			
GVWR		LBS.	(KG)
MINUS UVW (APPROXIMATE)			
GCC OF THIS MOTORHOME			
		ADDED WEIGHT	ADJUSTED CCC
		LBS. (KG)	LBS. (KG)
GCC			
MINUS FRESH WATER WEIGHT OF			
46 GAL. @ 8.33 LBS./GAL.			
MINUS LP-GAS WEIGHT OF			
13 GAL. @ 4.24 LBS./GAL.			
MINUS OCCUPANTS @			
154 LBS./PERSON = SCWR			
MINUS OCCUPANTS @ 154 LBS./PERSON			
MINUS OCCUPANTS @ 154 LBS./PERSON			
MINUS OCCUPANTS @ 154 LBS./PERSON			
*DEALER INSTALLED EQUIPMENT AND TOWED VEHICLE TONGUE WEIGHT WILL REDUCE THE CCC.			
CONSULT OWNER MANUAL(S) FOR SPECIFIC WEIGHING INSTRUCTIONS AND TOWING GUIDELINES.			

Fig. 2



WARNING: Do not exceed your GVWR. Your recreation vehicle's load capacity is designed by weight, not by volume. You can not necessarily use all available space when loading the vehicle.

LOADING CARGO

After you have read and understand the overall weight definitions and limits to your motorhome, you are ready to load it for travel. With the excitement of awaiting adventures, everyone will want to take along everything they might possibly need. This is where careful planning and preparation will help to insure a safe trip. As you develop a routine for loading your cargo, it may be helpful to utilize checklists and other resources. You will find a list of items which are often used at campsites at the end of this chapter. This list will give you a place to start when preparing your motorhome for travel. Keep in mind that your preferences and specific camping situation will determine items you would eliminate or add to this list.

Of most importance, above personal preferences, is the overall amount of cargo packed and the way it is placed in the motorhome. As cargo is placed in the unit, pay particular attention to where you place it. Follow these rules of thumb:

- Observe ALL capacity ratings to avoid problems, and make sure that you never load your motorhome in a manner that causes the weight to exceed the GVWR, GCWR, GAWR (of any axle) or the weight ratings of individual tires.
- Heaviest items must be stored in lower cabinets and storage areas.
- Keep the majority of the cargo weight over the axles and toward the front of the unit.
- Always pack items evenly from side to side to maintain motorhome balance.
- Make sure that all items are secured in place to prevent shifting during travel.




WARNING: Ensure you are loading the unit as evenly as you can for the best possible handling. All items must be secured to avoid shifting during travel.



WARNING: If your unit is equipped with a roof ladder, do not leave items attached to it while traveling. The ladder has a weight limit of 350# when using it to access the top of the unit. Do not exceed this limit.

The following label (Fig. 3) is attached to your motorhome as a reminder of loading rules when loading your unit. Please read, understand and follow all guidelines and weight ratings when loading your motorhome.



WARNING:
PROPER ATTENTION MUST BE TAKEN FOR CARGO LOADING AND DISTRIBUTION TO ASSURE TRAVELING SAFETY.

- 1. LOAD ALL CARGO EVENLY FROM SIDE TO SIDE.**
- 2. SECURE ALL ITEMS TO PREVENT LOAD SHIFTS DURING TRANSIT.**
- 3. AFTER LOADING, WEIGH THE MOTORHOME AT EACH AXLE AND EACH WHEEL. OBSERVE ALL MOTORHOME GROSS, AXLE AND TIRE RATINGS.**
- 4. IF THE WEIGHT OF THE LOADED MOTORHOME EXCEEDS ANY OF THE RATINGS AS LISTED ON THE CERTIFICATION LABEL, LOCATED ON THE WALL AT THE LEFT END OF THE DASH PANEL OR ON THE DOOR JAM OF THE DRIVERS DOOR, THEN REMOVE OR REDISTRIBUTE THE CARGO LOAD UNTIL THE WEIGHT(S) ARE EQUAL TO OR LESS THAN THE MAXIMUM RATINGS.**
- 5. IF ADDITIONAL ASSISTANCE IS NEEDED, CONTACT YOUR DEALER.**

FAILURE TO COMPLY COULD RESULT IN AN ACCIDENT OR LOSS OF CONTROL RESULTING IN DEATH OR SERIOUS INJURY.

Fig. 3

Holding Tank(s) and Motorhome Weight



WARNING: We recommend that you DO NOT travel with waste in your holding tanks. With one or more full or nearly full holding tank(s), the towing characteristics of your motorhome could change and may result in property damage or personal injury.

The weight of holding tank contents are not calculated into the cargo carrying capacity of the motorhome. The extra weight will diminish the cargo capacity available to you. Traveling with full holding tank(s) could cause you to exceed the gross axle weight rating(s), individual tire ratings and/or the gross vehicle weight rating (GVWR) of the unit. Potential damage to suspension components, such as springs, tires and axles, could result.

If you are dry camping and cannot immediately empty the tank(s), reduce your speed until you reach the nearest dumping station.

Rear Bumper

The rear bumper of your unit is not designed to carry cargo. Items that extend beyond the bumper or weigh over 100# (45kg) will place undue strain on the bumper. The 100# capacity of your bumper includes the weight of the spare tire that may have been attached at the factory. Some items may fall within the given weight range, however, may still cause damage. Over time, weight added to your bumper will cause damage from the motion created while traveling.

In addition, extra weight behind the axle may affect steering conditions. This could lead to adverse handling from wind gusts and/or passing traffic.

Caution: Do not add items to the motorhome's rear bumper. Add-on items will eventually damage your bumper. Damage from add-on equipment or improper loading voids the Limited Warranty of your motorhome.

Hitch

Your motorhome is designed to be a recreation vehicle, however it does have towing capabilities as well as limitations. A class III hitch receiver is available with a 3,500# (1588 kilograms) gross weight capacity. A variety of extender bars of different ratings are available. Remember the limit of weight on the hitch and chassis.

The following warning label (Fig. 4) is attached to the exterior of your motorhome near the hitch receiver bar and in the interior adjacent to or immediately below the RVIA Weight Information Label. (The weight labels are typically placed on the back of an interior cabinet door in the kitchen.) For your safety, please read, understand and follow this label and all towing and braking capacities of your vehicle found in the chassis owner's manual and all applicable information. For added information, consult with the chassis manufacturer and/or your independent, authorized dealer.

! WARNING

YOUR MOTORHOME CHASSIS IS RATED FOR TOWING OPERATION AT GVWR NOT GCWR. CONSULT YOUR CHASSIS OWNER'S MANUAL(S) FOR SPECIFIC WEIGHING INSTRUCTIONS AND TOWING GUIDELINES. THE BRAKING CAPACITY OF YOUR MOTORHOME IS NOT NECESSARILY AS GREAT AS THE TOWING CAPACITY. SEPARATE BRAKING SYSTEMS SHOULD BE USED FOR CONTROL OF A TOWED VEHICLE, (AUTO, TRAILER, BOAT, ETC.), BEHIND THE MOTORHOME. IF THE TOWED VEHICLE MEETS OR EXCEEDS THE MINIMUM WEIGHT AS DETERMINED BY THE CHASSIS MANUFACTURER, (THIS MINIMUM WEIGHT RATING WILL VARY BY CHASSIS AND CHASSIS MANUFACTURER), CONTACT YOUR CHASSIS DEALER OR MANUFACTURER FOR ASSISTANCE IN DETERMINING WHETHER A SEPARATE BRAKING SYSTEM IS RECOMMENDED AND WHAT LIMITS THERE ARE FOR YOUR TOWING COMBINATION AND TRAVELING SAFETY.

Fig. 4

Trailer Brakes

If you choose to tow behind your motorhome, the unit is pre-wired for connection to electric trailer brakes. The seven (7) way electrical connector at the motorhome hitch interfaces with the original equipment manufacturer (OEM) chassis wiring terminating near the base of the steering column or parking brake mechanism area. These wires on your motorhome are provided for ease of installation of an optional electric trailer brake controller.




WARNING: Electric trailer brakes will not operate without the proper installation of an optional electric trailer brake controller.

See your independent, authorized dealer for assistance in selecting and installing an electric trailer brake controller to meet your needs.

The following diagram (Fig. 5) indicates the layout of the seven (7) pin connector supplied with your motorhome. The connector between the motorhome and trailer may build up corrosion with extended use and should be cleaned periodically to insure good electrical contact.

Fig. 5

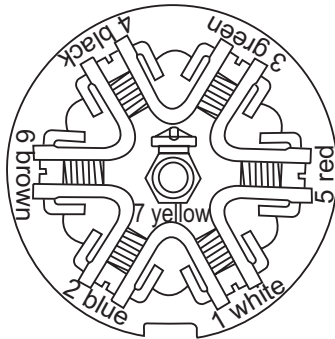

White	1	Ground
Blue	2	Brakes
Green	3	Running Lights
Black	4	Interior 12-volt lighting
Red	5	Stop & left turn
Brown	6	Stop & right turn
Yellow	7	Back up

WEIGHING INSTRUCTIONS

As your packing and loading routine becomes more familiar from experience, physically weighing your motorhome may not be necessary before each trip. While you are developing a process, it is imperative that you verify compliance within the weight ratings. Overloading your RV voids the Jayco limited, express warranty and the warranties of many component part manufacturers. The following process will aid with weighing your motorhome. Keep in mind that each individual scales and the surroundings will vary in usability.

Your recreation vehicle must be weighed fully loaded, that is, with passengers, food, clothing, fuel, water, propane, supplies, etc. Any towed vehicle (car/pickup, boat or trailer) or item loaded on brackets on the back of the recreation vehicle, such as bikes or motorcycles, must also be included when weighing your motorhome.

There are three types of scales:

1. **PLATFORM** - This scale is long enough to weigh the complete vehicle. The following steps are suggested:
 - a. Pull onto the scale so that only the front axle is on the platform (with the end of the scale midway between the front and rear axles), and record the scaled weight.
 - b. Pull forward until the full unit is on the scale, and record the scaled weight.
 - c. Pull forward so that only the rear axle is on the scale (again with the edge of the scale midway between the front and drive axles), and record the scaled weight.
 - d. If a boat, trailer or other vehicle is being towed, it should be weighed and combined with the towing vehicle's GVWR to ensure the total weight does not exceed the GCWR.

Axle Indicator

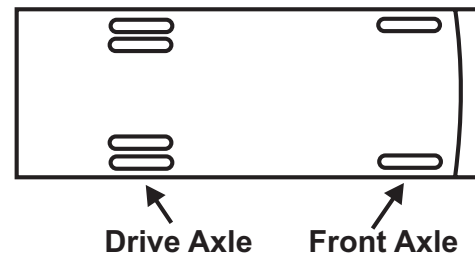


Fig. 6

2. **SEGMENTED PLATFORM** - Platform scales with segmented sections can provide individual axle weights and total vehicle weights simultaneously, when the vehicle is positioned properly.
Position the vehicle on the scales so that each axle is centered as much as possible on separate segments, and record the weight. Reposition the vehicle so that only one side is on the scale, again centered on the segment as much as possible. Subtract the weighed wheel positions from the total axle weights to determine the unweighed wheel positions' weights.
3. **SINGLE AXLE** - This scale weighs one axle at a time. Drive your front axle onto the scale and stop long enough for the weight to be recorded. Pull vehicle forward until the rear axle is on the scale. To obtain the gross vehicle weight, add the two axle loads together. To obtain the individual wheel position weights, repeat this process with only one side of the recreation vehicle on the scale.

NOTE: Even though the weight of the total axle may be within the axle's rating, it may be overloaded on one side. This causes one wheel position to be overloaded. Therefore, side-to-side weighing should also be done.

- a. To determine individual wheel position weights, it is necessary to repeat the previous three steps (1a, 1b, and 1c), but this time, use only one side of the scale.
- b. To calculate the opposite side of the vehicle wheel position weight, subtract this side's weights from the weights recorded in steps 1a, 1b, and 1c.

Your recreation vehicle must remain as level as possible on the scale (even though an axle or side is not physically on the scale). Obviously, to obtain the side-to-side weights, there must be enough space on either side of the scale to accommodate the recreation vehicle being partially off the scale.

If there is a difference in the weights on one side of the vehicle as compared to weights on the other side, components (tires, wheels, brakes, springs, etc.) on the heavier side could be overloaded, even though the total axle load is within the GAWR. It is important to redistribute the load to avoid component failure, to improve the handling characteristics of the vehicle and to not void the warranty.

With these actual weights, it is now possible to compare them against the GAWR, GVWR and tire capacities. These weights are also what should be used to help determine the proper air pressure for the tires.

TIRES

The chassis manufacturer has equipped your motorhome with name brand tires. Recommended air pressure (PSI) is stamped on each tire and can also be found on the Federal Certification Label. Always check air pressure and adjust accordingly while tires are cold. During travel, tires heat up and pressure increases. **DO NOT** release air pressure when tires are hot or your tires may then be under inflated.

Any service or warranty coverage on tires will be handled by the tire store representing the specific brand on your motorhome.



WARNING: It is recommended that the tire pressure be checked at the beginning of each journey to obtain the maximum life and proper performance of the tires. Follow the instructions of the tire manufacturer to determine the correct tire pressure. Underinflation or overinflation may cause tire failure and loss of control, resulting in injury, death or property damage.

WHEEL LUGS

Ensure that wheel lugs are tight as specified in the chassis manual. When your vehicle is new or a tire has been removed for any reason, re-torque the lug nuts at 10, 25 and 50 miles (15, 40 and 100 kilometers) and every 3,000 miles (5000 kilometers) thereafter.

SEAT BELTS

Three-point shoulder harnesses and lap belts are provided at the front driver and passenger seats by the chassis manufacturer. See the chassis manual for operating instructions and warnings.

For the recreation vehicle section, the dinette, sofa, and barrel chairs have two-point lap seat belts installed. Swivel chairs must be locked facing forward or toward the rear while traveling.

To operate:

- Slide the loose end of the seat belt into the buckle until it "clicks" in place.
- Adjust by pulling the loose strap end until it fits snugly on your upper lap.
- To release the seat belt, push the button on the buckle and pull apart.



WARNING: Your motorhome is equipped with seatbelts at all seat locations. Having seatbelts at all seat locations does not necessarily mean that all seats can be occupied at one time, because you cannot exceed the GVWR of your vehicle. When calculating the loaded weight of the vehicle, make sure to include all people who will be riding in the unit. The GVWR of your unit is located on the Motorhome Weight Information label.



NOTE: Pregnant women should consult a physician for seat belt use.

DRIVING

Driving a motorhome is similar to an automobile, however the size of the motorhome requires different handling. If you are not familiar with handling a large vehicle, become familiar with all controls and the unit's handling ability. The following list of items provides information to keep in mind during travel:

- Motorhomes are built on a larger chassis than cars, and you will sit higher off the road.
- The chassis wheel base is longer and the "house" portion of the RV is longer. This requires more space to turn and change lanes during travel.
- The motorhome is heavier than a passenger vehicle. The additional weight requires a longer distance to pass another vehicle and to stop the motorhome.
- Always use your turn signals when changing lanes.

BACK UP CAMERA

Your motorhome may have a camera mounted on it to view directly behind the unit when backing. A monitor is installed on the back of the driver's seat sun visor. The monitor is operational whenever the motorhome engine is running. To use the monitor, flip the switch from stand-by to on. (Fig. 7) Make sure you turn the monitor to stand-by while driving to avoid being distracted.



Fig. 7

POWER MIRRORS

A control panel is placed in the mounting panel of the mirror on the driver's side. The system is powered by 12-volt DC with fuse located under the dash, 1-amp in line.

TO OPERATE:

1. Center switch is "OFF" when you can observe both letters (R/L).
2. Move the center tab to the extreme right or left, viewing only one letter.
3. Power is now on.
4. Press any arrow in the direction you wish to move the mirror.
5. Place the tab in the center to turn the switch off.

ELECTRIC DOOR STEP (STANDARD ON SOME MODELS)

The electric door step opens automatically when the screen door is opened. The power is supplied by 12-volt DC through a 30-amp breaker located by the engine. A yellow wire supplies power to the electric step.



CAUTION: When opening the door from the outside, ensure that you are not in the path of the step.

PRE-TRAVEL CHECKLIST

WARNING: For traveling safety, it is important to make sure that tie down straps are secured on all appliances such as the television, coffee maker, etc. Vibration caused during travel will move the appliances creating the potential for them to fall out of their cabinets possibly causing injury.

In order to enjoy your travel, having all the right tools and supplies will help. A checklist may be beneficial to avoid forgetting something essential. This list is meant to be a starting point, while realizing that personal preference will also play a large roll in your packing. There are items here which may not apply for you and items which could trigger other ideas. As you expand your camping experience, you may wish to develop your own list of needs.

Motorhome Operation

- ☐ Check fluids
 - oil
 - coolant
 - transmission fluid
 - washer fluid
 - power steering fluid
 - brake fluid
 - battery terminal
- ☐ Check belts
- ☐ Check wheel lugs
- ☐ Check tire pressure (include inner wheel and spare, if applicable)
- ☐ Check tire wear (uneven wear pattern)
- ☐ Check lights
 - headlights
 - brake lights
 - clearance lights
 - turn signals
- ☐ Retract stabilizer jacks
- ☐ Retract steps (if applicable)
- ☐ Wheel chocks removed
- ☐ Test brakes for proper operation
- ☐ Tools
 - jack
 - torque wrench
 - tire pressure gauge
 - jumper cables
 - duct tape
 - fuses and light bulbs (compatible with your RV)
 - shovel (small folding)
 - axe
 - saw (bow or folding)
 - work gloves
 - AC voltage tester
 - tool kit (screws, hammer, pliers, etc.)
 - rope, cord, bungee cord(s) or wire

- ☐ Electrical cord
- ☐ Water hose
- ☐ Disposable rubber gloves
- ☐ Sewer hose
- ☐ Surge protector
- ☐ Telephone and/or cable wire (if applicable)

Supplies

- ☐ First aid kit
- ☐ Flashlight(s)
- ☐ Toilet paper
- ☐ Bug spray
- ☐ Sun screen

Recreation

- ☐ Games - cards, board, dice
- ☐ Outdoor activity equipment (fishing poles, tennis rackets, etc.)
- ☐ Lawn chairs
- ☐ Campfire supplies
 - smores - marshmallows, chocolate, graham crackers
 - skewers, pie irons, etc.
 - fire grate for cooking
 - firewood, newspapers and/or kindling
 - matches in waterproof container and/or utility lighter

Bedding

- ☐ Sheets
- ☐ Blankets
- ☐ Comforters
- ☐ Pillows
- ☐ Sleeping bags

Kitchen

- ☐ Pots & pans
- ☐ Cooking utensils
- ☐ Trash bags and/or paper sacks
- ☐ Aluminum foil, plastic wrap, etc.
- ☐ Paper plates, towels, napkins, coffee filters, etc.
- ☐ Dish towels and rags
- ☐ Dish soap
- ☐ Food supplies
- ☐ Charcoal and lighter fluid

Personal Supplies

- ☐ Clothing
- ☐ Toiletries
- ☐ Towels - beach and bath
- ☐ Laundry detergent

Before leaving home

- ☐ All list items packed in motorhome
- ☐ Refrigerator door locked
- ☐ Loose items secured
- ☐ Membership cards
- ☐ Keys (spare ignition, baggage door, etc.)
- ☐ Vehicle registration
- ☐ Proof of insurance
- ☐ Roadside assistance phone number, membership card and/or policy
- ☐ Road flares
- ☐ Map/road atlas/campground directory
- ☐ Owner's manual for the RV
- ☐ Owner's manual and information regarding component parts
- ☐ Arrange for pet care, mail/newspaper pickup
- ☐ Leave itinerary with neighbor/family/friend
- ☐ Security watch for house (neighbor/family/friend)
- ☐ Weigh fully loaded motorhome (people, cargo and liquids included) and maintain proper weight distribution (redistribute as necessary)

NOTES

[illegible]

SETTING UP CAMP...

SELECTING YOUR CAMPSITE

In some cases, searching for the right campground prior to traveling might be the first step in selecting your site. Some campgrounds will allow reservations made in advance. Depending on the area you are headed to and the time of year (i.e. around a holiday), reservations may limit your frustration upon arrival.

Your trip experience will be affected by the site you choose to park your RV. With time, you will know what you are looking for and what best fits your needs. A few items to keep in mind when selecting your campsite are:

- Arrive before dark, if possible, to make the site selection easier.
- Is the ground level? This will help with leveling your RV and making your stay more comfortable.
- Is there plenty of space?
 - › Will it accommodate slideouts, awnings, etc.? (if applicable)
 - › Is there room for picnic tables, lawn chairs, campfire, etc.?
 - › Is it void of hanging limbs that may damage your unit?
- Is it located in a convenient area?
 - › Will you be able to park close enough to hookups (water, sewer, electric)?
 - › Are you away from noisy areas or things that might detract from a positive experience?
 - › Is there plenty of shade?
 - › Is there good drainage in case of bad weather?

Beyond finding a site that best suits your needs, it is also helpful to keep in mind how you are affecting your camping neighbors' experience. Some etiquette items to keep in mind are:

- Observe the quiet times as posted and abide by the rules of the campground.
- Don't play loud music or make noise which is going to be disturbing to others around you.
- If pets are allowed, keep them restrained.
- Show respect to others, don't make shortcuts through occupied campsites.
- Keep your campsite clean and pick up all trash before departing from the campground.

SETTING UP YOUR MOTORHOME

Leveling Your Motorhome

Leveling your RV is critical for several reasons. Your camping experience will be more pleasant in a level unit. It is important for your RV to be level for proper operation of items such as the refrigerator, the slideout system and draining tanks.

Using blocks under the RV tires is a common way to level the unit. Blocks for this purpose can be purchased from various RV resources or made out of wood. The proper size of blocks are required to prevent causing damage to the tires. Make sure the blocks used cover the entire footprint of the RV tire. Refer to Fig. 8 for proper tire blocking.

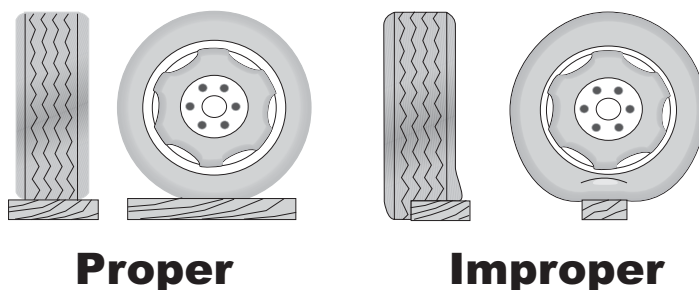


Fig. 8

Additional Set Up

STABILIZER JACKS

1. Insert the crank onto the stabilizer jack shaft.
2. Turn it clockwise to lower the jack. Continue lowering the jack until the frame of the motorhome begins to rise slightly.
3. Equalize the jacks for best support. This may require that you adjust each jack several times. When not parked on cement, you may wish to place a wood or hard plastic block under the jack for convenience.



WARNING: DO NOT USE THE STABILIZER JACKS TO LEVEL THE UNIT. It is important to remember that the stabilizer jacks are to be used only for support while occupying and moving around the motorhome. They are not designed to bear the weight of the motorhome.

TELEVISION

Antenna

Your motorhome is equipped with a crank up antenna for better television reception. Information is supplied with your unit from the manufacturer, Winegard. Refer to this literature for operation and maintenance instructions and/or visit their website at www.winegard.com. If you have further questions, consult with your independent, authorized dealer.

Cable

Some campgrounds provide hook ups to the local cable TV system. If this is available, connect to the motorhome from the campground supplied connection. Your RV system will operate as it would in your home.

Satellite

If your unit has the satellite option, information was supplied from the manufacturer, Winegard and included with your unit. Refer to this literature and/or visit their website at www.winegard.com.

SLIDEOUT ROOM OPTION

The slideout room is designed for additional floor space and comfort. Mechanical components are gear driven. Read ALL slideout instructions before operation.



CAUTION: Do not place excessive weight in the slideout room. It can cause the slideout room to malfunction and cause damage to the slideout.

Components

The slideout system has numerous major components and are as follows:

- One inner rail drive assembly to support the room weight.
- For electric systems, a 12-volt DC motor and drive shaft will operate the room using energy from an on-board recreation vehicle battery.
- For electric systems, a specially designed auto reset fuse has a load sensing capability that stops the motor when the room reaches its fully extended or retracted position.
- A manual override system that allows you to move the room in or out in the event of a power loss.

**WARNING:**

- **Ensure that the motorhome is level before operating the slideout room. Water leaks and other problems could result if the slideout is operated without leveling the motorhome.**
- **Ensure there are no people or obstructions blocking the path of the room when it is moving.**
- **Keep away from the slide rails when the room is in motion.**
- **The gear assembly may pinch or catch on loose clothing causing personal injury.**
- **Always install travel bars for storage and transportation.**

Failure to follow these instructions could result in serious injury or death.

Caution: After the slideout is extended, verify that the corners of the black rubber seal are set up correctly. The corners of this seal are cut at a 45 degree angle. The top of the seal must overlap the side of the seal to avoid the possibility of water penetration. (Fig. 9)



Fig. 9

Important Slideout Instructions

- Remove the travel bars (Fig. 10) from the top of the slideout before operating the slideout. When the slideout is in, insert the travel on top of the slideout before traveling.
- Models with a slideout front facing dinette seat are equipped with a tie down strap. Make sure this strap is removed when opening the slideout. It is also critical to reinstall the strap prior to travel once the slideout is retracted.

Fig. 10



Extending Room

1. The battery(ies) must be fully charged and connected. The motorhome should be hooked up to 120-volt AC power, if possible.
2. Turn the motorhome master battery switch on.
3. The motorhome must be level and if the unit has stabilizer jacks, they must be in the down position.



CAUTION: Additional support jacks are not needed under the slideout. Damage can occur to your slideout room from improper use of support jacks.

4. Remove the travel bars from behind the top fascia board located above the slideout room.
5. For models with a slideout front facing dinette seat, remove the tie down strap on the aft end of the rear dinette seat.
6. Ensure that there are no items obstructing the room's movement.
7. Locate the slideout master control switch.
8. To move the room out, press the "out" button on the switch (Fig. 11) and hold it until the motor stops.
9. Release the button. Travel time - approximately twenty seconds.



Fig. 11

Retracting Room

1. Remove all objects from in front of the room.
2. Press the "IN" button (Fig. 11) to bring the room in and hold it until the motor stops.
3. Release the button.
4. Install the travel bars in the proper location as indicated on the wall.
5. Install the rear dinette seat tie down strap, if applicable.



WARNING: For models with a slideout front facing dinette seat, confirm that the tie down strap is installed correctly prior to travel.

AWNING SET UP

Your RV may be equipped with awnings for the slideout, windows, and over the entrance area. Provided with your unit are instructions from the manufacturer which supply the operation and maintenance instructions for your awnings. If you have questions, consult with your independent, authorized dealer, review the materials from the awning manufacturer and/or visit their website at www.carefreeofcolorado.com.

UTILITY HOOKUPS

To complete the unit set-up, the utilities should be hooked to the proper sources as supplied by the campground. Make sure that you read, understand and follow all information provided for complete operation of the utility systems.

Electricity

By connecting the RV electric system to the campground electric source, or “shoreline” power, electricity will be supplied to operate the 120-volt AC and 12-volt DC electrical systems. When hooking up to electricity, follow these steps:

1. Make sure that all circuit breakers are turned off in the RV.
2. Locate the power cord and pull it from the RV to the length required.
3. Plug into the campground power source



WARNING: Do not use an adapter, cheater or extension cord that will break the continuity of the grounding circuit. NEVER remove the grounding pin to connect to a non-grounded receptacle. Any deviation from this will potentially cause a fire from overheating.

Caution: Power surges experienced while plugged in at a campground could potentially damage electronic component parts in your recreation vehicle. Damage from power surges are not covered by your Jayco warranty. Consult the component part manufacturer’s owner’s manual and/or your independent, authorized dealer for recommendations on power surge protection.

Water

A complete fresh water system is included in your RV. Fresh water is supplied to the system from two sources:

- City fill connection hooked to an exterior water source.
- Gravity fill tank installed on the RV.

UTILITY CENTER LABEL DEFINITIONS

The following information defines the function of the utility center settings as indicated on the utility center label (Fig. 12)

Normal - This setting allows you to pump water from the fresh water tank to all faucets when you are not hooked up to city water. Turn on your 12-volt demand pump to accomplish this.

City Water - This setting allows you to have access to water at all faucets on demand. Connect a garden hose from an outside water source to the city water connection inlet at the utility center and turn on your outside water.

City Tank Fill - This setting allows you to fill your fresh water tank. Connect a garden hose from an outside water source to the city water connection inlet at the utility center. Turn on your outside water.

Sanitize Tank - (See the instructions in the following section.) This setting may also be used to fill the fresh water tank from an external container.

Antifreeze/Sanitize Lines - (See the instructions in the “Winterizing Units with Utility Centers” in this manual.)


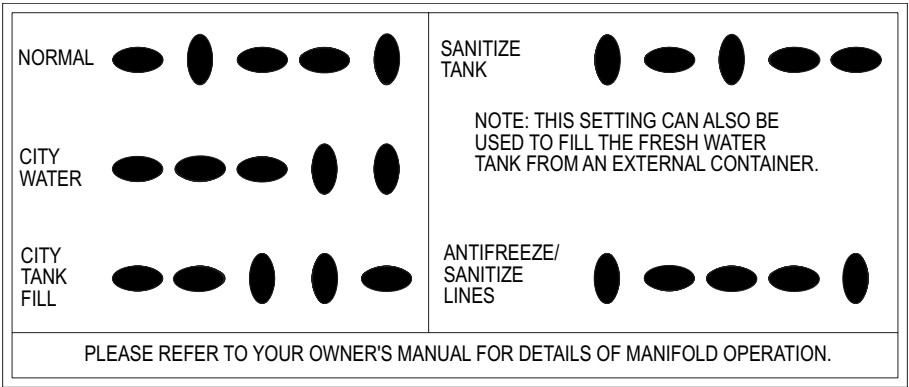


Fig. 12

UTILITY CENTER OPERATION

The utility center components consist of:

Fig. 13

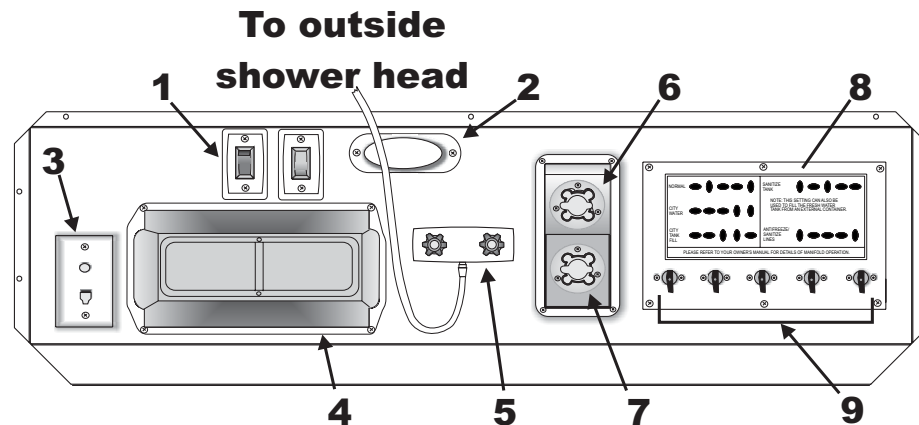

- | | |
|----------------------------------|-----------------------------|
| 1. Water Pump and Light Switches | 6. City Water Connection |
| 2. Light | 7. No Fuss Flush Connection |
| 3. TV/Phone Jack | 8. Utility Center Label |
| 4. Paper Towel Holder | 9. Valves |
| 5. Outside Shower Controls | |

Located inside the unit utility center is the city water connection. Connect a hose from the campground water source to the city water connection. We recommend that you keep a hose available that is dedicated only to supplying the water system with fresh water. Depending on what your intentions are, follow these instructions:

1. To utilize the campground water direct to your system:
 - a. Place the utility center valves as indicated for city water operation.
 - b. Turn on the water.
 - c. Water will be supplied to all faucets.
2. To fill the on board fresh water tank:
 - a. Place the utility center valves as indicated for city tank fill operation.
 - b. Turn on the water.
 - c. Water will go to the fresh water tank.

Caution: *Be careful not to overfill the tank. It can pressurize the tank, causing leakage and water damage and void the warranty. DO NOT leave the tank unattended while filling.*


3. To utilize water from the fresh water tank:
 - a. Place the utility center valves as indicated for NORMAL operation.
 - b. Turn on the water.
 - c. Turn on the demand pump.
 - d. Water will be pumped from the fresh water tank to all faucets.

Refer to the Plumbing Section of the Utility & Systems chapter for complete instructions on sanitizing and winterizing the plumbing system.

12 VOLT DC DEMAND PUMP

To utilize water from your water tank, you need have 12 volt DC power to operate the demand pump. Energy for the pump is supplied by the auxiliary battery or converter. Depending on your motorhome model, the demand pump will be located under the bed, in a cupboard, under the unit or under the sink. The switch to operate the pump is located on the monitor panel or a wall near the pump.

Refer to instructions supplied by the pump manufacturer with your . If you have questions, consult with your independent, authorized dealer and/or visit the manufacturer's website at www.shurflo.com.

 **NOTE:** The water pump switch should be in the off position when the camper is left unattended for any amount of time. If something would happen to the water system, this will help limit water damage to a smaller area.

SAFETY

The following warning label is placed on the exterior of your trailer at each water tank inlet. Make sure you read, understand and follow this label and all applicable instructions.


 **WARNING: POTABLE WATER ONLY. SANITIZE, FLUSH AND DRAIN BEFORE USING. SEE INSTRUCTION MANUAL. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.**

WATER PRESSURE REGULATOR

Excessive pressure from water supply systems may be encountered in some parks, especially in mountain regions. Water pressure regulators are available to protect your system against such high pressure. A regulator of this type is recommended to prevent damage to the plumbing system or components.

Caution: Not using a water pressure regulator when using city water may cause the o-rings to blow. It is advisable to always use a water pressure regulator when using the city water connection.

LP Gas Connections and Start Up

 **WARNING: LP gas can be extremely dangerous. Make sure that you read, understand and follow all information supplied in this manual and all component part manufacturers before operating your LP gas system.**

After the camper is completely set up and you are prepared for camping enjoyment, follow these steps for LP gas operation.

1. Close all the burner valves, controls and pilot light valves.
2. Open the main valve on the LP gas tank slowly to avoid a fast rush through the excess flow valve causing a "gas freeze." If you experience a gas "freeze-up," close the main valve and wait fifteen (15) minutes before trying again.
3. Listen carefully as the gas begins to flow. If "hissing" is heard for more than one or two seconds, this may indicate a leak. Immediately close the valve and search for the leak.

4. Light the appliances as needed and directed in the appliance manufacturer's instructions.

Make sure that you read, understand and follow ALL safety requirements for handling and operation of the LP gas system. Literature is supplied with your unit from the manufacturer of the various appliances hooked to your LP gas system. The LP gas system provides added benefits to your camping enjoyment, however, it must be handled with care. If you have any questions or concerns, consult with your independent, authorized dealer and/or the specific appliance manufacturer.

Waste Disposal

Proper care of the sanitation system is critical to efficient operation. Make sure that you have reviewed and understand the operation of your system.

Some campgrounds provide sewer hook up right at the individual campsite. This convenience can save a great deal of energy if utilized properly. If hook up is not provided at your site, the motorhome will need to be moved to an approved dump station.

The termination valves for your holding tanks are located in the utility panel of the motorhome.

When hooked up to the sewer drain line at a campsite, keep the termination valve on the waste tank CLOSED until the tank is at least 3/4 full. This will provide sufficient water to assist in complete draining of the tank. At this time, open the termination valve to empty the tank (see directions for draining above) and close the valve when the tank is empty. Repeat this process as needed, but NEVER leave the termination valve open when hooked up to the park's sewer system.

To Connect the Motorhome for Waste Disposal:

1. Make sure the unit is as level as possible to aid with drainage.
2. Attach the adapter to the flexible sewer hose and secure it with a clamp.
3. Remove the dust cap and attach the adapter onto the drain pipe.
4. Turn the adapter 10° to lock it onto the pegs on the drain pipe.
5. Place the other end of the hose into an approved sewer system.
6. Open the black tank termination valve to empty the black tank.
7. Open the gray tank termination valve to empty the gray tank, utilizing the water to rinse the flexible hose.

No-Fuss Flush System

Your motorhome is equipped with a no-fuss flush tank spray system. This feature provides hook up for cleaning the interior of the black holding tank. Refer to the manufacturer's instructions supplied with your motorhome for complete operating instructions.

NOTES

[illegible]

AT CAMP...

APPLIANCES

All appliances in your motorhome are name brand quality built equipment, guided by current codes and standards. For gas operation, the appliances in your motorhome will operate on LP gas only, not on natural gas. All safety precautions for LP gas, found in this manual and additional information supplied by the appliance manufacturer with your unit, must be followed during operation of the appliances. Please familiarize yourself with this information before proceeding.

Kitchen

The kitchen of your RV is equipped with many of the conveniences of home. However, special consideration needs to be taken when utilizing this equipment because there is limited space and available electricity in your RV. Make sure you understand what is available to you while operating these appliances. Follow all safety precautions supplied by the appliance manufacturers with your RV.

RANGE

Your range is designed to operate with LP gas. Make sure you read, understand and follow all information supplied by the range manufacturer and in this manual about the use of LP gas. This oven will operate similar to a gas range in your home. If you have questions or concerns, consult with your independent, authorized dealer and/or visit the manufacturer's at www.atwoodmobile.com.

MICROWAVE

Your microwave has been installed above the range and operates similar to your microwave at home. Make sure you read, understand and follow all information supplied with your unit from the microwave manufacturer. Contact your independent, authorized dealer if you have more questions, or consult with a Samsung appliance dealer.

REFRIGERATOR

Your RV refrigerator will provide the same functions as a home refrigerator, but will operate differently. Make sure that you read, understand and follow all the information supplied by the manufacturer, Norcold. Consult with your independent, authorized dealer for further information and/or visit their website at www.norcold.com/norcold_home.cfm.

Furnace

Your motorhome is equipped with an LP gas furnace. Make sure you understand the properties of LP gas and follow all safety instructions to operate this appliance. The manufacturer, Atwood, has supplied an operation manual to guide you with understanding how to operate your furnace. Refer to the furnace manufacturer's manual for instructions. If you have further questions, consult with your independent, authorized dealer and/or visit the manufacturer's website at www.atwoodmobile.com.

Water Heater

Your water heater is manufactured by Atwood Mobile Products. Complete safety, operating and maintenance instructions are supplied by Atwood with your motorhome. Make sure you read, understand and follow all instructions before operating the water heater. If you have further questions, consult with your independent, authorized dealer and/or visit the manufacturer's website at www.atwoodmobile.com.

BATHROOM

Your bathroom facilities function similar to those in a home. Ensure the water heater is operating before bathing. Adjust the faucets for desired temperature before entering the tub or shower.

Used water will drain into the gray water holding tank. Remember there are limited capacities in the water heater and gray water holding tank. Long showers in a recreation vehicle are NOT suggested due to the amount of water that is available. Refer to waste disposal and plumbing sections of this manual for further information on operation and emptying the holding tanks.

Tub or shower faucet requires a vacuum breaker when a shower hose and head is used. There are two purposes for this breaker:

- To prevent siphoning water through the hose from another fixture.
- To prevent water from being contained in the hose.

The shower head also DOES NOT have a complete shut-off valve. Any drainage from either part is normal function and NOT a leak. The complete shut-off is at the faucet.

Toilet

The operation of the toilet in your motorhome is important and needs to be understood to keep it operating correctly. The capacities, function and emptying of your holding tanks are also an important part of proper operation covered in this manual. Make sure that you read, understand and follow all information about the function of your sanitation system.

The care and maintenance of your toilet are important. Make sure that you read the toilet manufacturer supplied information on its operation and care. If you have further questions, consult with your independent, authorized dealer and/or visit the manufacturer's at www.thetford.com.

Faucets

Faucets in your motorhome operate the same as in a home. There may be air in the lines when tanks are filled or when you first hook up to exterior water sources. Make sure you allow the air to escape before turning the faucet off. Close faucets when sufficient water is released. Refer to instructions supplied with your motorhome for operating instructions.

Water Purification System

A water purification is installed on your motorhome. This system is equipped with a long-life cartridge to effectively reduce chlorine, taste, odor, sediment, organic chemicals and inhibit bacteria growth. Whenever the water system has not been used for some time, allow water to flow for several minutes to flush the system. When the system is not in use, store the water filter cartridge in the mounting bracket located near the water system, and when necessary, out of freezing temperatures.

RV antifreeze will damage the water filter cartridge. A clear plastic bypass hose with fittings on either end is supplied with the motorhome to replace the water filter when the motorhome is winterized. The hose should be stored when the filter is in use and kept available to reuse.

The filter should be replaced the sooner of: reduced water flow causing an inconvenience, or one time each year.

TO REPLACE THE FILTER:

1. Drain the water system.
2. Remove the cartridge by disconnecting the fitting at either end of the filter and pull it out of the fittings. It may be helpful to have a container available under the filter to catch any water left in the lines or filter.
3. If winterizing the unit, install the bypass hose and store the filter as is appropriate.
4. If replacing the filter, install the new filter and tighten the fittings at either end.



CAUTION: Never allow the filter to freeze or come in contact with RV antifreeze when the motorhome water system is winterized. Refer to complete instructions supplied by the water purification system manufacturer.

AIR CONDITIONER

An air conditioner has been installed in your motorhome for added comfort as you travel. For specific air conditioner instructions, consult your independent, authorized dealer and the air conditioner manufacturer's manual supplied with your unit. You may also find information at the manufacturer's website, www.rvcomfort.com/rv_products.htm.

Some models have Central Air Conditioning available. All cooled air is moved through a duct built into the roof and enters the motorhome through a group of round registers.

Keep all registers open to insure full airflow. Closing the register(s) may cause the compressor to freeze, which could shut down the cooling process.

Caution: *When camping at campgrounds providing less than 30 amp service, discontinue air conditioning use when using the microwave.*

GENERATOR

The function of a generator is to supply 120-volt AC power on a limited basis when extended power is not available.

The power to start the generator comes from the auxiliary battery. A start/stop switch is located on a mounting plate with the generator. A remote generator start switch is located near the monitor panel inside the motorhome.

- If the auxiliary battery has been drained of power, start the chassis engine to supply 12-volt DC power to the auxiliary battery and then start the generator.
- If both the auxiliary battery and the chassis battery are low on power, it is best to obtain assistance from another motorist and use jumper cables.
- If you are in a situation with no assistance available and both the auxiliary and chassis battery have a small amount of voltage, it is possible to start the generator if two people are present. One person will need to hold the auxiliary start button on the dash and the other person will need to press the start button on the generator.

The generator will draw fuel from the chassis fuel tank. When the tank drops to $\frac{1}{4}$ tank, the generator will shut off to preserve fuel for operating the motorhome.

The generator is manufactured by Onan. They have supplied an owner's manual with your motorhome for safety information, operation and maintenance of the generator. Make sure you read and follow all information supplied to you. If you have questions, consult your independent, authorized dealer and/or contact the manufacturer via their website at www.onan.com. In addition, please note that the generator runs on gas and gives off carbon monoxide. Please read, understand and follow the various safety precautions set forth in this manual, and provided by Onan regarding these items.

ENTERTAINMENT

Your motorhome may be equipped with a variety of component parts for your entertainment. Each individual system is supplied with an operation and maintenance manual which is with your unit's information packet. Make sure that you are familiar with each system and how it operates. Any questions should be directed to the component part manufacturer and/or your independent, authorized dealer. A Manufacturer's Customer Support Directory appears toward the end of this manual. It provides some websites and phone numbers for component part manufacturers.

MONITOR PANEL

The monitor panel will provide useful information on the capacities of the water tanks and the battery condition. Your motorhome has a wall mounted panel. Follow instructions below regarding operation. If you have further questions on the operation, refer to information supplied with your motorhome by the monitor panel manufacturer, consult with your independent, authorized dealer and/or the monitor panel manufacturer.

The panel operates on 12-volt DC power supplied by the converter or battery. Sensors are installed into the tanks and a resistor assembly relaying a message through wires to the display board on the panel. No power is drawn from the battery unless a switch is pushed or turned on.

OPERATION

Spring loaded push button switches are located on the monitor panel. Press only one button at a time, as one set of lights serve all functions. As you push any button, one or more lights will come on, indicating the tank contents level.

When pushing the battery button, the highest light coming on indicates battery condition.

C=charging at 12.7 volts; G=good at 11.9 volts; F=fair at 11.2 volts; and L=low at 6.0 volts.

When the water pump switch is in the “ON” position, the pump runs until 45 pounds of pressure has been achieved. The red light will stay on. Turn the switch off when the pump is not in use.

The heater switch is for the direct spark ignition (D.S.I.) water heater operation.

Fuses for the monitor panel operation are in the 12-volt distribution center fuse block.

BBQ GRILL (OPTION)



WARNING: The maximum weight limit for the bracket on the side of your motorhome is 50 lbs. This limit includes the weight placed on the BBQ grill. Exceeding this weight limit could cause damage to the unit and personal injury from hot equipment.

An option for your motorhome is a BBQ Grill. This grill is for use outside of the motorhome and comes with a bracket to attach to the side of the unit. The following list will supply basic operations for the grill. Be sure to read all instructions included with the grill.

1. Install the grill bracket on the side of the motorhome mounting bracket. Make sure that it is securely in place.
2. Place the BBQ grill into the bracket. (Fig. 14)



Fig. 14

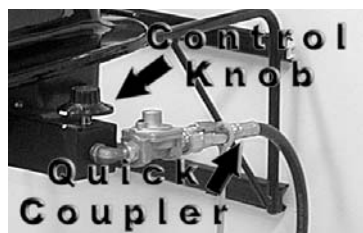


Fig. 15

3. Attach the fuel hose to the grill and the LP gas connection located under the motorhome by using the “Quick-Coupler” instruction as follows (Fig. 15):



WARNING: Make sure that you read, understand and follow all information supplied with your RV about LP gas before operating the BBQ grill. The fuel hose must be correctly connected before lighting the grill. Failure to follow instructions supplied by the grill manufacturer with your RV or to use any other components than those originally supplied with the grill could lead to death or serious injury from fire or explosion.

- Place the handle in the “OFF” position and push back the sleeve. Valve handle must be in the “OFF” position to make the connection. (Fig. 16)
- Insert the plug and release the sleeve. (Fig. 16)
- Push plug until the sleeve snaps forward, locking the plug into the socket. (Fig. 17)
- Turn handle to “ON” position to turn gas on. (Fig. 18)

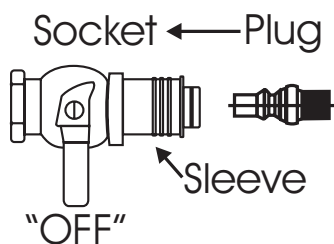


Fig. 16

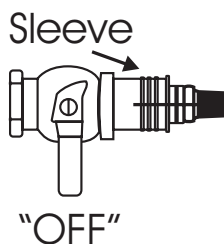


Fig. 17

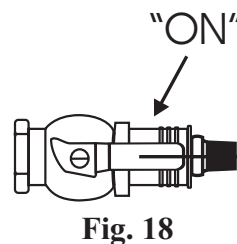


Fig. 18

4. Open the lid to the BBQ Grill.
5. Using an electric match, light the grill using the following procedures:
 - Light the electric match.
 - Insert it into the middle slot on the bottom of the BBQ Grill.
 - On the grill control knob (Fig. 15), depress and turn the knob to the desired temperature.
 - The grill should light at this point.
6. If the grill does not light, turn the gas off, wait five minutes and repeat the above steps.
7. Use the temperature control knob to adjust the grill to the desired temperature.


The BBQ Grill grate is coated with standard grill enamel and can be cleaned as you would a grill at home. Underneath the grate, there is a heat diffuser. This is formed and ventilated to distribute the heat from the burner. Do not use lava rocks in this grill.

To disconnect the BBQ grill, turn the temperature control to the “OFF” position. Reverse the above fuel hose hookup procedures. Wait until the grill is completely cooled, and then store it in the supplied carrying case. This carrying case will ONLY accommodate a cool grill. The grill carrying case has a pocket for accessories such as the fuel hose in the lid. The bracket will not fit inside the carrying case and will need to be stored in a separate location.



CAUTION: The BBQ grill must be COMPLETELY cooled before storing to avoid damaging the carrying case and causing injury from handling the grill when it is hot.

UTILITIES & SYSTEMS

 **NOTE:** Make sure you have read and understand all safety information found in this manual and manufacturer supplied information.

PLUMBING SYSTEM

For set up instructions of your plumbing system, refer to the “Setting Up Camp...” chapter. If you have further questions on setting up the system, consult with your independent, authorized dealer.

Utility Center (Manifold) Operation



WARNING: Failure to sanitize the potable water system could result in death or serious illness.

SANITIZING UNITS WITH UTILITY CENTER

Potable water systems require periodic maintenance to deliver a consistent flow of fresh water. Depending on use and the environment the system is subject to, sanitizing is recommended prior to storing and before using the water system after a period of storage.

Systems with new components, or ones that have been subjected to contamination, should also be disinfected as follows:

1. Drain the water tank and water heater completely by opening all faucets and low point drains until tank and heater are empty.
2. In a large bucket prepare a chlorine solution using 3/4 cup of household bleach and three (3) gallons (12 liters) of water.
3. Attach the intake hose to the “City Fill Connection” located inside or under the utility center panel. (Fig. 13) Place the free end in the bucket of chlorine solution.
4. Position the “Control Valves” on the “Utility Panel” to the “Sanitize Tank” configuration. (Fig. 12) The low point drains located directly below the utility center must be closed for the chlorine solution to siphon through the lines.
5. Turn the “Water Pump Switch (Fig. 13) to the “ON” position and pump all of the chlorine solution into the tank.
6. After pumping all the chlorine solution into the tank, position the “Control Valves” to the “City Fill” configuration. (Fig. 12)
7. Attach a garden hose to the “City Fill Connection” (Fig. 13) and finish filling the tank.
8. Open kitchen and bathroom faucets to allow air to escape the water lines and the water heater.
9. Turn the “Water Pump Switch” to the “ON” position and allow several seconds for the pump to prime. (Fig. 13)
10. After the water heater and water lines fill, the air will stop bubbling out of the faucets. At this point, turn all faucets off. Please note, the water heater will hold approximately six gallons of water. Allow the water to run long enough to ensure that the tank is full.

11. Allow to stand for three hours.
12. Drain the water tank and water heater completely by turning on all faucets until the tank and water heater are empty.
13. With the garden hose connected to the “City Fill Connection” (Fig. 13), refill the tank with fresh water as in steps 6 and 7.
14. Open kitchen and bathroom faucets to allow air to escape the water lines and the water heater.
15. Turn the “Water Pump Switch” (Fig. 13) to the “ON” position and allow several seconds for the pump to prime.
16. After the water heater and water lines fill, the air will stop bubbling out of the faucets. At this point, turn all faucets off. Please note, the water heater will hold approximately six gallons of water. Allow the water to run long enough to ensure that the tank is full.
17. Allow to stand for at least three hours.
18. Drain the water tank and water heater completely by opening all faucets and low point drains until tank and heater are empty.

To Remove Excess Chlorine Odor and Taste:

1. In a large bucket, prepare a solution of 1/2 cup baking soda to one gallon (4 liters) of water for every 15 gallons (60 liters) of tank capacity.
 - Repeat steps 3-10 from above.
2. Allow the baking soda solution to sit in the tank for a few days, if possible. If you can have the soda in the tank while traveling, it will work better to clean and refresh the tank from the agitating motion.
 - Repeat steps 12-18 from above.

Drainage

To drain the permanent fresh water tank, open the tank low point drain valves in the utility center. (Fig. 19)

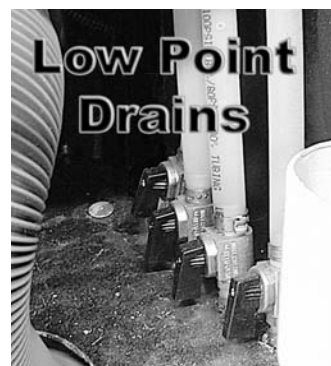


Fig. 19

SANITATION SYSTEM

Your motorhome is equipped with a complete sanitation system. The components of this system are the toilet, waste water and sewage holding tanks and drains for both tanks. Familiarize yourself with all functions of the system. Read, understand and follow the information found here as well as information in the “Set Up Camp...” chapter. If you have questions, consult with your independent, authorized dealer for clarification.

Using Toilet and Tank System

NOTE: For added convenience and better sanitation system performance, it is advisable to always have four to six inches (10-15 cm) of water in the toilet.

Prior to using the sanitation system, it is strongly recommended to flush the toilet several times to release sufficient water into the holding tank. If there is not a sufficient amount of water used during flushing, the waste materials may not evacuate properly from the drain line to the tank. Clogged tanks and pipes could eventually occur.

The toilet system will perform better when water is run for ten to fifteen seconds after flushing to ensure that the waste will proceed to the bottom of the tank. Unlike a toilet in a home, which uses four to seven gallons (18-32 liters) of water per flush, the average recreation vehicle system uses one to three quarts (1-3 liters).

Vents

Another important part of the sanitation system are the vents which release air from the tanks. Each tank has a vent pipe built into the motorhome through the cabinet, wall and roof. A vent cap is attached to the roof and must be clear of obstructions to perform as intended. On some models, the vent pipe may be part of the drainage system referred to as a “wet vent.” This means water flows downward as air flows upward in the same pipe.

Holding Tanks

The final part of your system are the holding tanks. They hold waste and are located below the floor of your motorhome. The bath tub and sinks drain into the waste water tank, also referred to as the “gray” water holding tank. The toilet drains into the sewage holding tank, also referred to as the “black” waste holding tank. Certain floor plans may also have the lavatory draining into the waste (black) tank.

WASTE (BLACK) TANK PREPARATION

1. Release one to two quarts (1 or 2 liters) of water into the toilet bowl.
2. Follow the directions on your toilet chemical bottle, by placing the recommended quantity of holding tank chemical into the bowl.
3. Flush the toilet and allow at least two gallons (8 liters) of water to flow into the tank.

Caution: *It is important to add enough water to prevent solid waste build up. Follow these directions each time after emptying your holding tank, except when winterizing.*

GRAY WATER HOLDING TANK


No special preparation is required, however, placing a small quantity of chemicals into this tank, such as baking soda or an approved RV chemical, will reduce odors from food particles in the system.

Heated Holding Tanks

With the heated tank option, a pad will be glued to the exterior bottom side of the holding tank. Heat is supplied by 12-volt DC power through the heating element built into the pad. Approximately 6-amps of energy per pad is consumed and fused through the 12-volt power supply board. Switches to turn heat pads on or off are located on an interior wall in or near the bathroom.

Power to heating pads should be turned off until:

1. Water is in the holding tank.
2. Temperature drops to 32° (0° C).
3. Motorhome is parked, setup and all attachments performed.

 **NOTE:** Turn heat pads off when dumping and draining tanks.

An internal thermostat is built into components of the heat pad to assist in energy conservation.

LP GAS SYSTEM



DANGER: LP gas can be extremely dangerous. Improper use of the LP gas system will present an immediate hazard situation where death or serious injury will result. It is possible that mechanical or property damage will also occur. Make sure you read, understand and follow all information supplied with your unit in this manual and all component part manufacturer's literature.

It is because of the LP gas system that your RV has the convenience of a refrigerator, stove, water-heater, and furnace. The components of the LP gas system are:

- LP gas tank
- A two stage regulator
- Pipes, hoses and tubing to deliver the gas to appliances

When correctly used, the LP gas system is a safe and effective way to operate the appliances in your RV. This system is also potentially very dangerous and should be used with care. Carefully read, understand and follow all information supplied with your for the LP gas system and its components and consult with your dealer about the proper operation of the LP gas system.

A warning label has been placed in your RV to warn against asphyxiation (inability to breathe). The label has been located in the cooking area to remind you to provide an adequate amount of fresh air for combustion. Please read, understand and follow the information in this label.



WARNING: IT IS NOT SAFE TO USE THE COOKING APPLIANCE FOR COMFORT HEATING.

- 1. Cooking appliances need fresh air for safe operation. Before operation:**
 - a. Open overhead vent or turn on exhaust fan.**
 - b. Open window.**
- 2. Unlike homes, the amount of oxygen supply is limited due to the size of the recreation vehicle, and proper ventilation when using the cooking appliance(s) will avoid dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating, as the danger of asphyxiation is greater when the appliance is used for long periods of time.**

FAILURE TO COMPLY COULD RESULT IN EXPLOSION RESULTING IN DEATH OR SERIOUS INJURY.

The following label has been placed in the motorhome near the range area. Please read, understand and follow the information in this label.



**DANGER
IF YOU SMELL GAS**

- 1. Extinguish any open flames, pilot lights, and all smoking materials.**
- 2. Do not touch electrical switches.**
- 3. Shut off the gas supply at the tank valve(s) or gas supply connection.**
- 4. Open doors and other ventilating openings.**
- 5. Leave area until odor clears.**
- 6. Have the gas system checked and leakage source corrected before using again.**

FAILURE TO COMPLY COULD RESULT IN EXPLOSION RESULTING IN DEATH OR SERIOUS INJURY.

As noted above, the presence of any gas smell is dangerous. Make sure that everyone, including pets, are out of the RV. Do not return to the RV until the source of the LP gas odor has been determined and corrected by an LP gas professional.

The components of the permanently mounted LP gas tank are (Fig. 20):

Fig. 20



- 1 = Gas Fill Valve
- 2 = Relief Valve
- 3 = LP Gauge
- 4 = Outage Valve
- 5 = POL Adapter
- 6 = Regulator

This unit's LP gas tank is an A.S.M.E. tank mounted under the floor of the motorhome. Because the tank is not removable, the motorhome will need to be driven to an LP gas fill station.

! DANGER: All pilot lights, appliances and their ignitors (see operating instructions) shall be turned off before refueling of motor fuel tanks and/or LP gas tank. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

The following warning label is located near the LP gas tank on the motorhome. Make sure you read, understand and follow all information on this label. Failure to do so could result in death or serious injury.



WARNING:

THIS GAS PIPING SYSTEM IS DESIGNED FOR USE OF LIQUEFIED PETROLEUM GAS ONLY. DO NOT CONNECT NATURAL GAS TO THIS SYSTEM. DO NOT FILL CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY. FAILURE TO COMPLY COULD RESULT IN A FIRE OR PERSONAL INJURY. Securely cap inlet(s) when not connected for use. After turning on gas, except after normal container replacement, test gas piping and connections to appliances for leakage with soapy water or bubble solution. Do not use products that contain ammonia or chlorine. AS-34

SERVICING AND FILLING LP GAS TANK

Your LP gas tank should only be serviced and filled by a qualified person who knows the proper inspection and safety procedures. If an LP gas tank is new, make sure the service person is aware of it so they can be purged prior to being filled. LP gas tank must never be filled beyond 80% of capacity to allow for expansion with increases in temperature. The following warning label is located near the LP gas tank. Make sure that you read, understand and follow these warning labels.



WARNING: DO NOT FILL CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY.

- **Overfilling the LP gas container can result in uncontrolled gas flow, which can cause fire or explosion.**
- **A properly filled container will contain approximately 80 percent of its volume as liquid LP gas.**



WARNING: LP gas cylinders shall not be placed or stored inside the vehicle. LP gas cylinders are equipped with safety devices that relieve excessive pressure by discharging gas to the atmosphere. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.



WARNING: Do not bring or store LP gas cylinders, gasoline, or other flammable liquids inside the vehicle because a fire or explosion can result.



WARNING: Portable fuel-burning equipment, including wood and charcoal grills and stoves, shall not be used inside the recreation vehicle. The use of this equipment inside the recreation vehicle may cause fires or asphyxiation.

When an LP gas tank gets low, sometimes there is a concentration of garlic-like odor, which may be mistaken for a gas leak. After refueling the tank, the odor usually will disappear. If not, turn off the LP gas tank and have the system checked by a qualified technician.



WARNING: DO NOT use tools or heavy equipment to open or close valves on the LP gas tank. HAND TIGHTEN only. The use of tools to tighten the tank valve creates the potential to overtighten the valve. This could cause damage to the interior seals on the tank valve seat. If damage occurs, you will not be able to close the tank properly, creating a false sense of security that the LP gas tank is shut off. Consult with your independent, authorized dealer or a qualified LP gas dealer if you have further questions.



DANGER: Never smoke during the filling of LP gas tanks. Failure to follow this safety rule could lead to death or serious injury from fire or explosion.

Fuel Distribution Components



CAUTION: Remember - POL adapters and fittings have left hand threads.

POL ADAPTER AND LOW PRESSURE

LP gas leaves the tank through a POL adapter with an excess flow valve built into the adapter, which is attached to the regulator. No sealant is required on a brass to brass connection. The excess flow valve provides a large volume of LP gas to escape from the bottle if there is a breakage between the LP gas tank and the regulator.

REGULATOR

The regulator is an integral part of the LP gas system. It is required to reduce the pressure of the LP gas before it is sent to the system to operate your appliances. It is critical to your safety that you read, understand and follow all literature supplied with your unit on the operation and maintenance of the regulator.




WARNING: LP gas regulators must always be installed with the diaphragm vent facing downward. Regulators that are not in a compartment have been equipped with a protective cover. Make sure that the regulator vent faces downward and that the cover is kept in place to minimize vent blockage, which could result in excessive gas pressure causing fire, explosion, death or serious injury.

MAIN SUPPLY HOSE – LOW PRESSURE

The main supply hose (Fig. 21) is attached from the regulator to the brass manifold fitting in the frame of the motorhome. The swivel brass nut on the main hose is the final attachment.

 Fig. 21



3/8" MPT x 1/2" Female
Flare Swivel

LP GAS CONSUMPTION

Most gas appliances are operated intermittently. Unless there is heavy use of hot water, the water heater consumption is minimal. During freezing weather and high wind conditions, furnace consumption can be extremely high.

LP gas consumption depends upon the length of time appliances are operated. Each gallon (3.86 liters) of LP gas produces about 91,500 BTUs (46,514 kilojoules) of heat energy. Following is a list of typical RV appliance consumption when turned on fully for one hour of operation:

Appliance	Average BTU Consumption Per Hour	Kilojoules/Hour
Water Heater	8,800	9,280
Refrigerator	1,200 – 1500	1,270 – 1,580
Furnace	20,000 – 30,000	21,100 – 31,650
Range Oven	7,100	7,490
Range, Rear Burner	6,500	6,860
Range, Front Burner	9,000	9,490
Outside Grill	10,000	10,550

N NOTE: This chart is an example of a typical system and may not represent the exact system in your particular vehicle.

LP Detector

All recreation vehicles with an LP gas system require a LP gas leak detection device (Fig. 22) for safety protection. A converter or auxiliary battery is required to supply 12-volt DC energy to operate the leak detector. Carefully read, understand and follow the information supplied by the LP detector manufacturer which is supplied with your motorhome. Consult with your independent, authorized dealer and/or visit the manufacturer's website at www.safe-t-alert.com if you have any questions on the operation or maintenance of this detector.



Fig. 22



WARNING: For your safety, make sure that the LP gas detector is properly maintained and functioning. The detector requires 12-volt DC energy through the converter or from an auxiliary battery to operate. Without a proper energy source the detector will not work and you will not be warned of leaking gas.

ELECTRICAL SYSTEM

General

The electrical system in your motorhome consists of 120-volt AC (alternating current) and 12-volt DC (direct current) circuits and components. All installations are made in compliance with safety requirements of ANSI standard A.1192, National Electric Code, and Canadian Standards Association.

Wiring code for 120-volt AC system:

Black = Hot or Positive

White = Neutral or Negative

Green/Bare = Ground

Caution: Power surges experienced while plugged in at a campground could potentially damage electronic component parts in your recreation vehicle. Damage from power surges are not covered by your Jayco warranty. Consult the component part manufacturer's owner's manual or your independent, authorized dealer for recommendations on power surge protection.

Fig. 23



120-Volt AC System

POWER CORD

Your motorhome is equipped with a 30-amp rated power cord pre-wired into the breaker box. By opening the cable hatch or utility center door you can pull the power cord out from the compartment and attach it to the campground power source. Power will enter the coach through a main circuit breaker. It is distributed through additional circuit breakers to wall receptacles and any appliances wired direct, such as an air conditioner. The cord extends approximately 25'–35' (7 to 10 meters) from the motorhome depending on floor plan. Your RV power cord must be fully extended and not left coiled in the compartment or on the ground. If the cord is left coiled, it creates potential for heat to melt the cord's casing together.

To prevent accidental electrical shock, insure that the ground pin on the attachment plug cap is intact to the earth ground through the RV park receptacle. Any accidental short of a live circuit conductor will trip the circuit breaker indicating a shorted circuit. Make sure that the polarity of the external power is not reversed, in order to avoid harm to appliances and personal electrical shock. Polarity indicators may be purchased in most electrical and hardware stores.

It is strongly recommended to avoid the use of extension cords. Using an improper extension cord will cause overheating of the cord and equipment, and it voids the warranty. It may also cause premature failure of the AC equipment. If you choose to use an extension cord, it **MUST** be the same amperage rating as the RV power cord and be identified for heavy-duty outdoor use. However, the use of an extension cord can still cause all the problems discussed here and will void the warranty.



WARNING: Do not use an adapter, cheater or extension cord that will break the continuity of the grounding circuit connected to the third pin. NEVER remove the grounding pin to connect a non-grounded, two-prong receptacle. Any deviation from this will potentially cause a fire from overheating.

POWER CENTER

Your motorhome is equipped with a power center that includes 120-volt breakers, 12-volt fuses and battery charging capability. Your motorhome is equipped with a transfer switch that automatically switches between generator power and external power when the optional generator is ordered.

AC DISTRIBUTION CENTER

When 120-volt AC is connected to the power center through an external power source or generator, the 120-volt AC circuits are activated. These circuits are protected by circuit breakers contained in the AC load center. 120-volt AC circuits may be turned off by flipping the circuit breaker to indicate “OFF”. The circuits may be turned on or reset by flipping the breaker to indicate “ON”.

GFCI



WARNING: Make sure you read, understand and follow all instructions supplied by the GFCI receptacle manufacturer with your RV. Failure to follow these instructions could lead to death or serious injury from shock or electrocution.

Each motorhome has a GFCI receptacle installed. These initials mean “Ground Fault Current Interrupter.” This special receptacle has been designed to reduce the possible injury caused by electrical shock.

An example of ground fault current is the current which would flow through a person who is using or touching an appliance with faulty insulation and, at the same time, is in contact with an electrical ground such as a plumbing fixture, wet floor, or earth.

When this GFCI receptacle is tripped, it has interrupted ground fault current caused by such things as faulty insulation or wet wiring inside some appliance or equipment connected to the circuit. The faulty equipment should be repaired before is it used again.

This GFCI receptacle will not protect against short circuits or overloads. The circuit breaker or fuse in the electrical panel which supplies power to the circuit provides this protection.

This GFCI receptacle should be tested monthly while the motorhome is being used.

Testing Instructions

1. Plug a lamp or radio into the receptacle on the face of the GFCI.
2. Push and release the RESET button.
3. The lamp should light at this time.
4. Press the TEST button.
5. The RESET button should pop out indicating it has been “tripped” and the lamp should go out. (If the GFCI is manufactured with an indicator light, the light should glow when the device has tripped.)
6. If the GFCI did not trip, do not use the outlet. Call a qualified electrician to service or replace the receptacle. The ground fault protection is no longer working properly.
7. To restore power after “tripping”, press in the RESET button. It must remain in. (If an indicator light is furnished, it will be off.)


30-AMP SERVICE

⚠ WARNING: Do not replace breakers or fuses with any that are rated at a higher amperage. Over fusing may cause a fire by over heating the wire.

Below is a generic drawing (Fig. 24) with circuit breaker alignment. Your motorhome may not be exactly the same as shown depending on model, floor plan, and options.

Fig. 24

120-volt AC Layout					
A	Main	30 amp	D	Kitchen, Bath, Outside	15 amp
B	Converter/Utility	15 amp	E	Microwave	15 amp
C	Air Conditioner	20 amp	F	Water Heater	15 amp

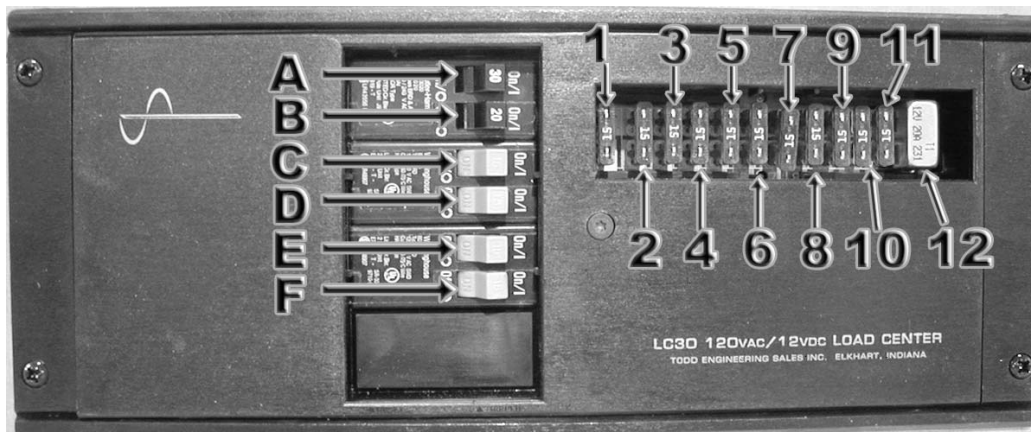

12-volt DC Layout					
1	Bedroom Slideout Motor	12.5 amp reset	7	Living Area/Porch Lights	15 amp
2	Bath Area	15 amp	8	Bunk Lights/Trunk Lights/ Optional Ceiling Lights	15 amp
3	Monitor Panel/Range Hood/Sink Light	15 amp	9	Main Slideout Lights	15 amp
4	Rear Fan/Refrigerator	15 amp	10	Holding Tank Heaters	30 amp
5	Bed Area	15 amp	11	Furnace	20 amp
6	12-volt Outlets/Radio/ LP Detector	15 amp	12	Main Slideout Motor	20 amp reset

CONSUMPTION OF 120-VOLT AC POWER

As more appliances are purchased, you must remember a motorhome has only 30-amps of incoming power available. Conserving and choosing which appliance has priority in consumption may be required.

In addition, loose items such as toasters, skillets, coffee pots, etc. are often included in traveling cargo. Include these in your amp consumption and safety planning.

12-Volt DC (Direct Current) System

NOTE: The motorhome master battery switch **MUST** be turned on before 12-volt devices will operate.

Included with your power center is a power converter which transforms 120-volt AC energy into 12-volt DC energy to supply your motorhome. When 120-volt AC power is supplied to the power center through the main circuit breaker in the "ON" position, the converter will supply 12-volt DC power to the motorhome as long as the auxiliary battery is properly connected.

Electrical component parts are sensitive to heat and power converter will produce heat. Ventilation is required for proper operation. A fan is built into the power converter to assist air movement and provide temperature control. If normal ventilation is obstructed and the fan is unable to control the temperature, a protective "Thermal Breaker" will trip the 120-volt AC power to the power converter. After the converter cools down, the breaker will reset automatically and 12-volt DC power will be restored.

Replaceable fuses are used to protect the 12-volt DC component parts. If a fuse blows, it is an indication that a circuit is overloaded or there is a "short circuit." Contact your independent, authorized dealer for assistance.

A separate 12-volt fuse panel supplies power to your chassis. Consult the chassis owner's manual for assistance.

When 120-volt AC power is supplied to the power converter through a direct connection at the campsite, the converter will supply 12-volt DC power to the auxiliary battery automatically.

The auxiliary battery will also receive a charge from the alternator when the engine is running.

Batteries, Chassis and Auxiliary

Each chassis is built with a battery to provide energy to start the engine and supply energy for other component parts in the chassis. This battery is located under the hood. The original equipment manufacturer (OEM) chassis battery is furnished and warranted by your Ford or GM dealership (as applicable).

An auxiliary battery is included in each motorhome for storage power when 120-volt energy is not available. When drawing energy from the battery, remember that there is a limited amount of power available before the battery needs to be recharged. This auxiliary battery is located in the "house portion" of your motorhome. All auxiliary batteries require an "in-line" fuse, or a 12-volt circuit breaker, placed within 18" of battery for your protection.

To Recharge the Auxiliary Battery:

1. When the motorhome engine is running, the alternator will automatically supply a charge to replenish the auxiliary battery.
2. When parked at a campsite, plug into shore line power. With minimal or no load on the electrical system, the converter will automatically charge the auxiliary battery. This may take several hours and depends upon battery condition and the number of 12-volt components being operated during the charging period.

ISOLATORS

When an auxiliary or "house" battery is installed in a recreation vehicle, it's the nature of parallel circuitry to draw energy from both batteries (auxiliary and chassis). A device called an "isolator" must be installed for two purposes. First it receives current from the alternator and controls distribution of energy to house and chassis batteries. Secondly, it serves as a check valve to prevent energy from being drawn from the chassis battery. Energy in the chassis battery is preserved and available to start the engine.

The motorhome has a solenoid located on the chassis cowl under the hood.

MASTER BATTERY SWITCH

Located near the entrance door there is a master battery switch. This master battery switch controls most 12-volt power supplied to the "house portion" of the motorhome. This switch must be "ON" before electrical current will be supplied to the appliances, outlets, and lights. During storage of your motorhome, it is important to have this switch in the "OFF" position.

(N) NOTE: Make sure the master battery switch is in the "OFF" position during storage of the motorhome to avoid draining current from the battery. If your motorhome has a detachable in-dash radio face plate, it must be removed during storage to prevent current draw from the auxiliary battery.

AUXILIARY START SYSTEM

Your motorhome can momentarily connect the auxiliary and chassis batteries if the chassis battery becomes discharged for any reason.

To Start the Unit When the Chassis Battery Has Been Discharged:

3. Press the button on the dash, located on the left side of the steering column, and hold.
4. Use the ignition switch to start the engine.
5. Release the button after the engine has started.

Inverter (Option)

Your motorhome may be equipped with an inverter that converts 12-volt DC current to 120-volt AC current to operate items such as TVs, VCRs, laptops, camcorders and other small AC devices. It is important that you familiarize yourself with the inverter function and operation. Refer to the inverter manufacturer's owner's manual for complete operating instructions and/or consult with your independent, authorized dealer.

Generator (Option)

This generator will produce 120-volt power when camping in an area where shore power is unavailable. An automatic transfer switch is located within the load center and will not require any manual operation.

The generator must have 12-volt DC power to start, will start from the auxiliary battery and will draw fuel from the chassis supplied fuel tank.

- When the fuel tank drops to 1/4 tank, the generator will shut off to avoid running the vehicle completely out of fuel.
- If the auxiliary battery has been drained of power, start the chassis engine to supply 12-volt DC power to the auxiliary battery and then start the generator.
- If both the auxiliary battery and the chassis battery are low on power, it is best to obtain assistance from another motorist and use jumper cables.

- If you are in a situation with no assistance available and both the auxiliary and chassis battery have a small amount of voltage, it is possible to start the generator if two people are present. One person will need to hold the auxiliary start button on the dash and the other person will need to press the start button on the generator.

See the generator manufacturer's owner's manual for additional information on generator operation and/or consult with your independent, authorized dealer.

Lights

DOME

These lights are wired directly to the chassis wiring. Operation for these lights is through the headlight switch or the pin switches located on the driver and passenger doors posts.

EXTERIOR

Stop, turn signal, backup, clearance and tail lights are attached to the wire harness supplied by the chassis manufacturer. All exterior lights operate through the chassis fuse panel. Fuse sizes are listed in your chassis owner's manual.

LIGHT BULBS

	BULB #
Tail Light	1157
Turn Signal	1157
Backup	1156
Porch Light, Power Hood Light	912
Interior Light	921
Clearance Light	194
Refrigerator (900 series only)	168

Fuse Chart

All exterior light fuses are located in the chassis fuse block, located under the dash near the emergency brake pedal.

The fuse chart below is for interior items built into the house portion of the vehicle by the recreation vehicle manufacturer. Some items are optional as listed.



CAUTION: DO NOT install any replacement fuse with a higher rating than specified below.

ITEM	AMP SIZE	TYPE	APPLICATION	LOCATION
Remote Mirrors	1	Glass	Option	In line under dash
Heated Holding Tanks	30	Blade	Option	In coach battery box

Changes, Modifications and Additions

Any changes or additions made after delivery of your motorhome to you may cause a hazardous condition. Consult your independent, authorized dealer prior to making any changes, modifications or additions. Only qualified electrical technicians should attempt to make changes or additions to the electrical system, using only approved materials, components, and employing approved methods of installation, which meet safety and code requirements.

N NOTE: Any electrical installation not properly performed, or that does not meet the criteria of the manufacturer's specification may damage the electrical system, including electrical appliances and **VOIDS THE WARRANTY** on the electrical system.

PREPARING TO TRAVEL HOME...



WARNING: For traveling safety, it is important to make sure that tie down straps are secured on all appliances such as the television, coffee maker, etc. Vibration caused during travel will move the appliances creating the potential for them to fall out of their cabinets possibly causing injury.

Caution: IMPORTANT! *Never store the slideout without the travel bars installed. This helps seal the slideout in the closed position.*

When the time arrives to return home, it is again critical that you complete the necessary procedures to ensure a safe trip. As you develop a routine, it is possible that a checklist will be helpful. This is a general list, which you may want to customize as you determine your own needs. In addition, make sure you follow the hitching procedures listed in the “Before You Travel...” section of this manual.

DEPARTING CAMP CHECKLIST

Safety

- ☐ Make sure you follow all safety precautions noted in this manual and in any information from component part manufacturers when preparing to travel home.

Interior

- ☐ Counter items put away or tied down
- ☐ Latch drawers, cabinets & doors
- ☐ Refrigerator door locked
- ☐ Set refrigerator to 12-volt (if applicable)
- ☐ Close windows & latch blinds
- ☐ Close roof vents
- ☐ Lower antenna & satellite dish
- ☐ Furnace turned off
- ☐ Water heater turned off
- ☐ Water pump turned off
- ☐ Lights turned off

Exterior

- ☐ Retract awning and secure in place
- ☐ Retract slideout (if applicable)
- ☐ Retract step
- ☐ Pack equipment into compartments and secure it
- ☐ LP gas turned off
- ☐ Water hose & electric cord unhooked and stored
- ☐ Visually look under RV for items missed
- ☐ Lock all exterior compartments
- ☐ Empty black holding tank
- ☐ Rinse black holding tank, if necessary
- ☐ Empty gray holding tank

Motorhome Operation

- ☐ Check fluids
 - oil
 - coolant
 - transmission fluid
 - washer fluid
 - power steering fluid
 - brake fluid
 - battery terminal
- ☐ Check belts
- ☐ Check wheel lugs
- ☐ Check tire pressure (include inner wheel and spare, if applicable)
- ☐ Check tire wear (uneven wear pattern)
- ☐ Check lights
 - headlights
 - brake lights
 - clearance lights
 - turn signals
- ☐ Retract stabilizer jacks
- ☐ Test brakes for proper operation

DRAINING THE HOLDING TANKS

(N) NOTE: Make sure you review the information in the “Before You Travel...” chapter for specific information related to the weight of holding tank contents.

In the utility panel of the motorhome are labels (Fig. 25 & Fig. 26) that indicate the location of the gray and black holding tank drain. A typical set up of the tank drain and termination valves is indicated in Fig. 27. Look for the labels to locate the drain and follow the instructions below to empty the tanks.



Fig. 25



Fig. 26



Fig. 27

When hooking up to the sewer drain line in a campground, keep the termination valve on the waste tank **CLOSED** until the tank is at least 3/4 full. This will provide sufficient water to assist in complete draining of tank. At this time, open the termination valve to empty the tank (see directions for draining below) and close the valve when the tank is empty. Repeat this process as needed, but **NEVER** leave the termination valve open when hooked up to the park's sewer system.

To empty holding tank:

1. Make sure the unit is as level as possible to aid with drainage.
2. Attach the adapter to the flexible sewer hose and secure it with a clamp.
3. Remove the dust cap and attach the adapter onto the drain pipe.
4. Turn the adapter 10° to lock it onto the pegs on the drain pipe.
5. Place the other end of the hose into an approved sewer system.
6. Open the black tank termination valve to empty the black tank.
7. Open the gray tank termination valve to empty the gray tank, utilizing the water to wash and rinse the flexible hose.

All drain pipes have a “P-trap” installed into each line. Water in these traps prevent odors from escaping into the motorhome. During travel, water from the P-traps may spill and permit odors into the motorhome. These odors come from food particles decomposing in the tank. By adding water and using a RV approved deodorizing agent the contents will dissolve faster and will keep the drain lines and tanks clean and free flowing. Chemicals are available at an RV supply store.

Most states and parks have strict laws and regulations to prohibit dumping of wastes of any kind into anything other than proper disposal facilities or sewer systems. Almost all privately owned parks have either a central pump facility or offer a campsite hookup of sewage. You can find lists of many dump facilities throughout the United States in Woodall's, Rand McNally Camp Guide, Good Sam Camp Guide, KOA Kampgrounds Camp Guide, and various other publications. Some fuel stations also have dump stations.

NOTES


[illegible]

MAINTAINING YOUR INVESTMENT...

MAINTENANCE

Your motorhome is designed to be as maintenance free as possible. However, maintenance is important to retain its condition as near new as possible and preserve the warranty. The information in the following pages is supplied to provide guidance for your maintenance routine. Many of the component part manufacturers supply information for their equipment. Refer to all instructions supplied with your motorhome when performing maintenance. Proper maintenance will give you many trouble free miles.

 **NOTE:** Some areas in this chapter may not be applicable to your motorhome.

 **NOTE:** Failure to properly maintain your motorhome can cause numerous problems and it voids Jayco's warranty as well as the warranties of many of the component part manufacturers.

Caution: We recommend that you do not take your recreation vehicle through automatic car washes. Extreme caution should be used if utilizing any type of pressure sprayer around all attachments, doors, windows, appliance vents, etc. Avoid forcing water inside the unit, which could possibly damage component parts.

EXTERIOR

Fiberglass Sidewalls

Fiberglass walls are very durable and easy to maintain. To keep them looking nice, wax and buff them once a year. Standard automotive cleaning soaps and waxes work well for general cleaning and maintenance. In addition, do not dry wipe surface. Special cleaners and waxes are available at automotive and RV stores.

Scratches, chips and other cosmetic cracks can be easily fixed by an experienced fiberglass repair shop. Any major damage should be repaired as soon as possible to keep cracks from spreading.

Rubber Roof

CAUTION: All roofs require routine maintenance. At least once per year, inspect and reseal all seams: front and rear, around all vents, and along all moldings. Failure to properly maintain the unit's seals may cause leaks and it voids the warranty.

The rubber roof on your motorhome is manufactured by Alpha Systems. They have supplied instructions with your motorhome to take care of your roof. Make sure you read and follow these instructions when working on your roof. If you have questions, consult with your independent, authorized dealer and/or visit the manufacturer's website at www.alphasystemsinc.com.

Roof Ladder

Your motorhome may be equipped with a roof ladder. For units that are purchased with this option, the roof is built with additional decking for support. If your unit did not come with this option, do not walk on the roof.



WARNING: If your unit is equipped with a roof ladder, do not leave items attached to it while traveling. The ladder has a weight limit of 350# when using it to access the top of the unit. Do not exceed this limit.

Sealing

All corners or flat trim have putty tape sealer between the trim and aluminum skin. This sealant can be damaged by U.V. exposure, air pollution, freezing temperatures and other exposure to weather elements. At least two times each year, inspect all seams. Refer to Fig. 28 for points to inspect. Check the sealant for voids, lifting, peeling or cracking. Reseal as necessary and at least one time each year as preventative maintenance. If you notice any deterioration in the seal, scrape off cracked or loose sealant and then reseal the area. Consult with your independent, authorized dealer for the best type of sealant to use. **FAILURE TO CAULK MAY RESULT IN SERIOUS WATER DAMAGE TO THE ROOF AND OTHER PARTS OF YOUR VEHICLE AND IT VOIDS THE WARRANTY.**

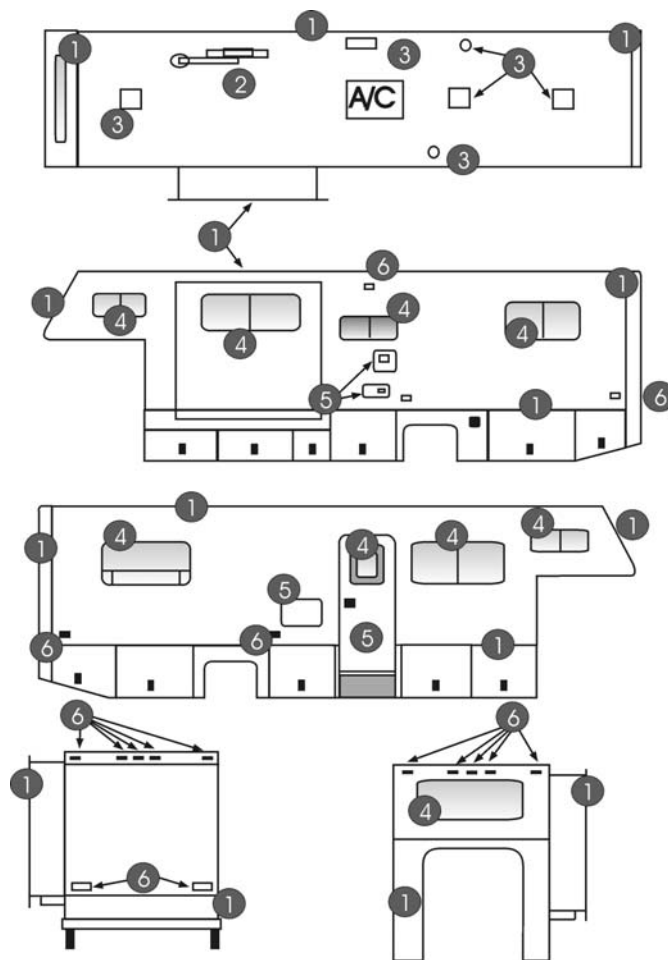


Fig. 28

CHASSIS

Instructions and safety precautions you need to follow for the drive train and automotive chassis are included in the manual supplied by the chassis manufacturer.

A frame extension may have been added to your motorhome chassis. You may wish to have an undercoating material applied to the frame extension to protect your investment from the effects of road grime, salts, and other corrosive materials. Contact your chassis manufacturer before applying undercoating to the chassis frame. Frames will rust much sooner in salt exposed areas than in dry air. Also, frames will receive heavy abuse from roads, such as sand, pebbles, objects on the highway, all of which will cause chipping and a blasting effect on the painted surface. For these reasons it is necessary to inspect, clean and repaint the steel members to prevent excessive rust and insure a longer life of the frame on a routine basis.

Spare Tire Carrier

The following procedures should be used for securing the spare tire in the travel position:

1. Put the steel hoist lift support located on the end of the cable through the rim of the tire.
 - a. The clips need to seat inside of the hole.
 - b. The tire valve stem **MUST** be pointed in the down position (away from the bottom of the motorhome). The hoist will not seat tire correctly if the valve stem is toward the motorhome.

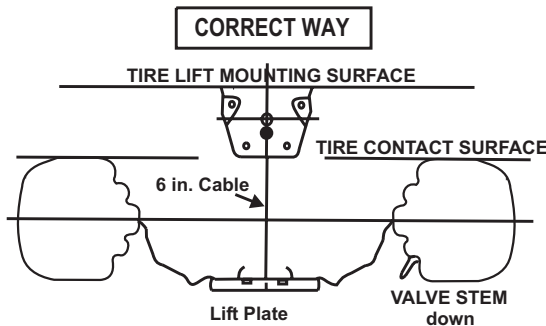


Fig. 29

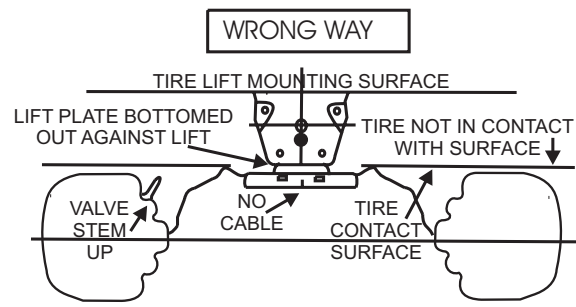


Fig. 30

2. Use the crank handle to lift the tire into the travel position. Two crisp breaks must be heard and felt to insure proper seating of the tire for travel.

The tire must be in contact with the tire contact surface to be in the travel position.



WARNING: DO NOT exceed the maximum load capacities of 100 lbs. for the hoist. DO NOT use air driven guns or impact wrenches to lift the tire into the travel position.

FRONT AXLE ALIGNMENT

The term alignment refers to both the adjustment angles on the steering axle and suspension and tracking of the rear axle. Many factors are considered when establishing proper alignment. Steering components, suspension, wheel bearings and even proper loading will affect your motorhome alignment. To ensure accuracy, your motorhome alignment was verified at our manufacturing facility before shipment to your independent, authorized dealer.

Jayco recommends that you have the front suspension and steering alignment checked and adjusted after you have fully loaded the vehicle. In addition, you should read, understand and follow any instructions from the chassis manufacturer, including anything discussed in documents provided by the chassis manufacturer. As part of normal maintenance, it is your responsibility to have the alignment inspected periodically to maintain vehicle steering performance and prevent uneven tire wear. **Always have the alignment checked and adjusted by a qualified shop with the proper equipment to handle heavy vehicles.**

NOTE: A road test by the independent, authorized dealer should be included as part of the pre-delivery inspection. The independent, authorized dealer can then arrange to have any steering problems corrected before you take delivery of the motorhome. After this road test has been completed, front-end alignment and/or vibrations will not be covered as part of the new vehicle limited warranty.

WHEEL LINERS

Your motorhome may be equipped with Versa-Liner® Wheel Liners. Information on the function of these liners is supplied with your unit by the wheel liner manufacturer. If you have further questions, consult with your independent, authorized dealer and/or visit the manufacturer's website at www.dicor.com.

CLEARANCE LIGHTS

Inspect all exterior lights to make sure they do not have moisture trapped inside. The “weep” holes at the bottom of the lights must be kept open to allow moisture to escape from the light fixture.

DOORS, EXTRUSIONS, WINDOWS & VENTS

These components have putty tape between the component and the wall surface. Portions of these items may have a cap seal added as a secondary seal. Inspect these seals at least once per year. Both putty tape and cap seals can become damaged by U.V. exposure, air pollution, freezing temperatures and exposure to the elements. Therefore, they need to be resealed from time to time.

Locks on entrance and baggage doors need biannual lubrication. Silicone lubricant is recommended. Conditions such as rain, salt, dust and pollution may increase the maintenance needs.

Inspect and seal the door frame threshold corners one time each year. Refer to Fig. 31 which indicates the referenced location.



Fig. 31

Entrance Door

The entrance door installed in your vehicle is the result of years of design and testing to provide you, the homeowner, with the most carefree and functional product available.

To keep your door operating in the manner, in which it was designed and delivered to you, there is some routine maintenance items that should be handled on a regular basis.


- **Strike Plate Adjustment** - The door in your motorhome was installed and adjusted in a factory setting and the setting of the striker plate may change over the course of time and road conditions. Therefore, the setting may need to be changed or adjusted to insure that your door operates as smoothly and efficiently as it should. To adjust the strike plate, loosen the two screws holding the strike plate to the jamb system. Move the plate in or out as needed to obtain a proper seal and closing force and retighten the screws. To adjust the strike bolt in the rotary lock, loosen the bolt with a 5/8” socket or box end wrench, move the bolt in the direction needed and retighten the bolt to 35 foot pounds of torque. The door in your motorhome operates much like an automobile door and must be closed firmly. The door will not be fully closed until the secondary lock is engaged.

Caution: *If you loosen the screws too far the backer plate will release and drop down into the doorjamb. Should this happen, replace the short screws with a screw that is long enough to go through the jamb system and into the framework of the sidewall.*

- **Locks** - The key cylinder in your locks need to be lubricated on an annual basis and as needed. Always use powdered graphite never a petroleum product. The petroleum product will gum up the cylinder and cause it to not operate smoothly.

Apply a light coating of white lithium grease to the face of the lock bolt to obtain a smooth closing.

- **Hinges** - The hinges on your door should be lubricated annually and as needed with a high quality spray lubricant.
- **Fiberglass Skin** - To maintain good appearance and long service life, Philips door skin panels should be washed and cleaned periodically. Cleaning removes the accumulation of dust and dirt that can combine with sunlight and wind to attack exposed surfaces both chemically and abrasively.
- **Cleaning:**
 - › *General Cleaning* - A 10% solution of trisodium phosphate in warm water (not to exceed 120°F), may be applied in a scrubbing motion, using sponge, brush, or cloth. Rinse thoroughly after cleaning.
 - › *Removing Oil Residues or Difficult Substances* - Mineral spirits, applied with a clean cloth, will aid in removing most oily residues or substances.
 - › *Removing Hard Water Deposits* - A 10% solution of acetic acid in cold water may be used in the manner described in General Cleaning above. Rinse thoroughly after cleaning.
 - › Waxing, though not mandatory, will help maintain the appearance and service life of the door. If waxing, use a high quality, non-abrasive automotive or recreation vehicle wax.

 **NOTE:** Use only non-corrosive cleaning compounds. Avoid the use of compounds containing ammonia or chlorine since they may cause the panels to yellow. Do not use rubbing compounds, as they will etch and damage the panel surface.

LP GAS SYSTEM

Your LP gas system is designed to function properly with regular maintenance and inspection. Make sure that you regularly check for any gas leaks as outlined in the safety information in this manual, as well as any appliance manufacturer's supplied information. It is recommended that you have your system inspected at least annually by a qualified independent, authorized dealer or LP gas supplier.



DANGER: DO NOT smoke while changing bottles or working on your LP gas system. See the use, danger and warning instructions throughout this manual for the LP gas system.

FURNACE MAINTENANCE

Preventive maintenance and safety checks should be performed by a qualified technician at least once a year, or more, depending on the use of the furnace. Failure to properly maintain the furnace may void the furnace warranty and can result in unsafe furnace operation. Preventive maintenance is NOT covered under the warranty. Power should be disconnected before servicing. Refer to the manufacturer's supplied instructions for information regarding the furnace and its maintenance.

 **NOTE:** To increase motor life, the furnace should be wired directly to the battery.

AIR CONDITIONER

Consult the manufacturer's information supplied with your and/or your independent, authorized dealer for maintenance information on the air conditioning unit. Information is also available at www.rvcomfort.com/rv_products.htm.

A special foam gasket is placed between the roof material and the subframe of the air conditioner to guard against water leakage.

An air conditioner is subjected to wind pressures along with motor vibration during normal operation. Inspect the mounting bolts for tightness to ensure there is no leakage or looseness at least annually. Tighten bolts when they are loose. DO NOT overtighten these bolts as it may damage the gasket.

To gain access to the bolts, remove the filtered panel cover on central air systems or the entire air box on non-central air conditioners.

BATTERY

Maintenance is required on all batteries for maximum performance. Failure to properly maintain the batteries voids Jayco's limited, express warranty and the warranty of many component part manufacturers.

1. Keep all terminals clean and tight.
2. Keep the battery filled with water. Cells low on water cannot hold a full charge. A battery used in daily operation will consume water.
3. The charging system must be in good operating condition to maintain your battery.
4. Keep the battery mounted securely. Vibration may cause pre-mature battery failure.
5. Check the outside condition of the battery. Look for cracks in the case or the vent plugs. Replace a leaking battery as soon as possible.

CARBON MONOXIDE DETECTOR

Maintenance and testing information for your carbon monoxide (CO) detector are supplied by the manufacturer. Make sure you read, understand and follow all instructions and safety requirements to maintain the unit's proper operation. If you have questions, consult with your independent, authorized dealer or contact the manufacturer.



WARNING: If the CO detector is not maintained and functioning properly according to the CO detector manufacturer's supplied instructions, you will not be warned if CO is present in the air. Death or serious illness could result from asphyxiation (inability to breathe) if CO is present.

TV ANTENNA

Maintenance information for your TV antenna is supplied with your from the manufacturer. Refer to this information for complete instructions, and/or consult with your independent, authorized dealer. Information can also be found at the manufacturer's website at www.wingard.com.

ABS PLASTICS

ABS plastic components such as shower wall and the tub will retain their original beauty with reasonable care.

For Cleaning:

1. Dust and wipe clean with soft, damp cloth or chamois, wiping gently.
2. Wax or polish with Simoniz,[®] Aero-Wax,[®] or Glo-Coat[®] using flannel or jersey cloth. After polishing, wipe gently with damp cloth to ground electrostatic charges which may attract dust particles.

Do NOT use gritty or abrasive particle soaps or scouring compound to clean ABS plastic.

Caution: *Avoid using “Citrus” or biodegradable cleaners which contain “D-Limonene.” They will damage plastic materials.*

BATHROOM TUB, LAVATORY SINK

The bath tub in your motorhome is made of ABS plastic material. DO NOT use abrasive type cleaners, as they may scratch surfaces. Use a mild detergent soap and warm water to clean the tub surface. These cleaning instructions are similar to those recommended for fiberglass tubs and walls. For any type of repair work, see your independent, authorized dealer.

HARDWARE AND SINK OR SHOWER FIXTURES

Use mild dish soap and water to clean these fixtures. Never use harsh chemicals or sprays. A mild solution of vinegar and water works well to remove hard water spots and stains from the sink or shower fixtures.

TOILET

The care and maintenance of your toilet should be performed according to the instructions supplied by the toilet manufacturer. If you have further questions, consult with your independent, authorized dealer and/or visit the manufacturer's website at www.thetford.com.

FURNITURE

Cloth Furniture

Vacuum occasionally to remove dirt, dust and pet hair. Have steam cleaned when necessary. Test fabric in an inconspicuous location before using any spot cleaners.

Synthetic Leather

Wipe with a soft damp cloth for most dirt and spills, air dry. If needed, use a small amount of a mild liquid detergent. For oil or grease stains, spray immediately with an all-purpose spray cleaner or Tannery Car Care Cleaner. Take care not to smear beyond the original stain. Rinse with clean water, air dry.

To Operate Sofa/Recliner Footrest:

1. Make sure cushion is clear of the footrest opening.
2. Place heels over the edge of the footrest and pull towards you to release the safety lock.
3. Push down – do not force.

CUSHIONS

Caution: *Do not dry clean vinyl components. Do not remove covers for dry cleaning.*

If the cushions are dry cleaned, the vinyl on the reverse side of the cushion will shrink, become hard and crack. Vacuum the fabric and wipe the vinyl surfaces. The fabric can be gently steam cleaned on the cushions or mats if necessary.

All dinette and bed mat covers are treated with stain protector. Vacuum the cover with a brush attachment periodically to remove dirt.

BEDSPREAD

Dry clean only.

WINDOW TREATMENTS

The window treatments of your recreation vehicle may include mini blinds, pleated shades, and/or drapes. Refer to the following guidelines for cleaning.

Window Treatment	Light Cleaning	Extensive Cleaning
Mini Blinds	Dust or Vacuum	May be removed and washed with a mild detergent and warm water.
Pleated Shades and/or Day/Night Shades	Vacuum	A professional dry cleaning service is recommended.
Privacy or Cab Area Draperies	Vacuum	Dry Clean



CAUTION: To prevent scorching of the window shades, do not use the swivel arm lamps located adjacent to the slideout if one of the lampshades is broken or missing. Remove the light bulb and contact a qualified service center for repairs or replacement.

PANELING

The wall paneling in your motorhome is a vinyl covered wood panel. If deep scratches occur, putty sticks can be used to cover them. These can be obtained from hardware stores and lumber yards. For decor paneling, replacement vinyl covering can be purchased for repairs if needed. Your independent, authorized dealer's parts department can assist you with this.

To clean, use a mild solution of soap and lukewarm water with a soft sponge or cloth. DO NOT use abrasive cleaners. It could cause the vinyl to scratch and turn dull. Grease spots and stubborn dirt can be cleaned off with an all-purpose spray cleaner. Harsh cleaners and organic solvents can attack the printed vinyl and, therefore, are not recommended.

VINYL FLOOR

To care for the vinyl floor covering, use a damp mop with water and a mild cleaner. DO NOT SOAK FLOORING. Use care to avoid wetting carpet edges.

Caution: *To avoid problems of "yellowing" linoleum, the manufacturer recommends to avoid using cleaners that contain oil based solvents (i.e. cleaners containing lemon oil, Murphy's Oil Soap, etc.).*

CARPETING

Because of the additional dirt typically associated with camping, we recommend that you vacuum the carpet frequently. Professional steam cleaning for tough and deep stains is recommended. Use spot removers for minor spills. Always test carpet for color fastness in an inconspicuous area before using any product.

(N) NOTE: Avoid chemical cleaners. Do not permit cleaners to touch carpet or fabrics.

COUNTERTOPS

High Pressure Laminate

Glass rings, food spills, water spots and smudges usually wipe off with a damp sponge. Stubborn stains can be removed with a general purpose spray cleaner. Some stains can be removed by squeezing fresh lemon juice over the stain and allowing the juice to soak for approximately forty-five minutes. After forty-five minutes, sprinkle baking soda over the lemon juice and rub with a soft cloth.

SLIDEOUT

Your slideout system has been designed to require very little maintenance. To ensure a long life of your slideout system, read and follow these simple instructions.



CAUTION: Do not work on your system unless the battery is disconnected.

- When the slideout is extended, visually inspect the inner slide rail assemblies. Check for excess build-up of dirt or other foreign material; remove any debris that may be present.
- If the system squeaks or makes any noise, apply a coat of lightweight oil to the drive shaft and roller areas. Remove excess oil so dirt does not build-up.
- On motorhomes with a flush floor slideout, a light coat of silicone spray is recommended one time per year. To apply the spray, lift the carpet flap. Using a light coat of spray, make one pass all along the glide bar. It is recommended that this be done prior to each camping season.

Caution: Use only a silicone spray to lubricate the glide bar. Other lubricants may attract dirt and oils which will stain the carpet.

- If you have any problems or questions consult your independent, authorized dealer or call Power Gear at 1-800-334-4712.

Troubleshooting Electric Slideout

If the slideout does not move when the slideout switch is depressed, follow these steps.

- Check the battery for a full charge and good wire connections.
- Check for loose connections at the slideout motor.

If the slideout still will not operate, follow these steps.

- If the slideout is extended, see the section on overriding the electric slideout system.

- If the slideout is retracted, leave it in that position. Install the “travel bars” and “tie down strap” (if applicable)
- Take the motorhome to a independent, authorized dealer or service center.

If the slideout extends crooked, or only one side moves, follow these steps.

- Follow steps on overriding the slideout system to disconnect the motor according to directions which apply to your motorhome.
- You may need to push the side that is not sliding to get it to retract all the way.
- Once the slideout is fully retracted, install the “travel bars” and “tie down strap” (if applicable).
- Take your motorhome to a independent, authorized dealer or service center.

Overriding the Electric Slideout System

If the system will not move when the switch is pressed, check the following:

- Is the battery connected and does it have a full charge?
- Are the travel bars and tie down strap (if applicable) removed question

After checking the above, follow these steps to move the slideout manually:

1. Rotate the lever on the back side of the motor counter-clockwise about 1/8 turn (Fig. 32). This will release the brake that locks the slideout in place.
2. Access the manual override. For some models it is located in front of the slideout rail assembly and for other models, it will be found behind the drivers seat.
 - › For models with the override in front of the slideout rail assembly, using a 3/4" or 1/2" drive ratchet with a 3/4" socket, crank the slideout until it is fully retracted (or extended).
 - › For models with the override behind the drivers seat, using a 3/4" drive ratchet with a 1-1/8" socket, crank the slideout until it is fully retracted (or extended).
3. When the slideout is fully retracted (or extended), apply pressure to the ratchet handle and return the brake release lever on the motor to its normal downward position (Fig. 32). This will ensure that the slideout is locked in a sealed position.
4. Install the travel bars and tie down strap (if applicable) and take the unit to a independent, authorized dealer for service.

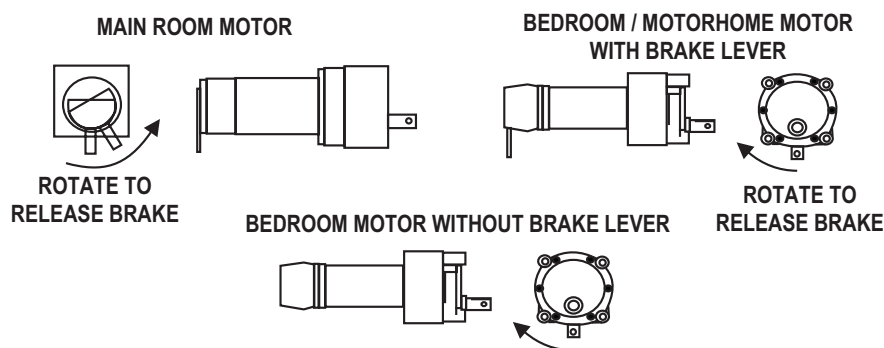


Fig. 32



WARNING: When the slideout motor brake is released the slideout will not lock into place, and therefore it will not be sealed from the outdoors! When the slideout has been retracted, be sure to install the travel bars and the tie down strap (if applicable) and return the brake release lever to its downward position in order to seal and lock the slideout.



WARNING: For models with a slideout front facing dinette seat, always confirm that the tie down strap is installed correctly prior to travel.

ELECTRICAL WIRING INFORMATION

This diagram (Fig. 33) provides the electric layout of the slideout system switch. Refer to this drawing when troubleshooting the electric slideout system. Repairs to the electric slideout should only be performed by a qualified electrician or your independent, authorized dealer.

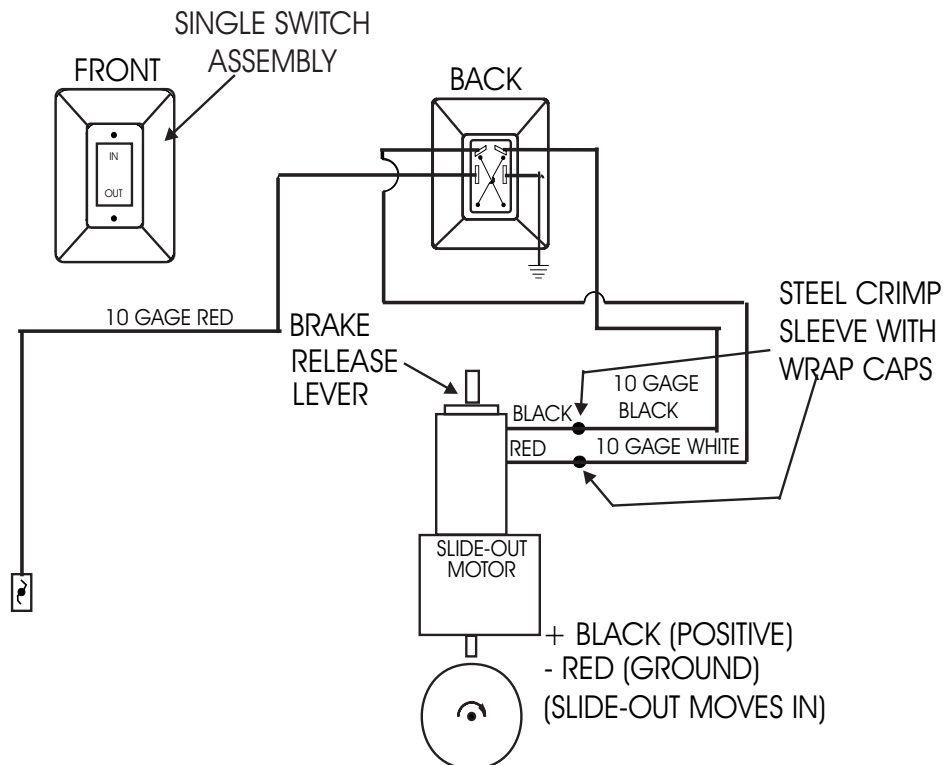


Fig. 33

MAINTENANCE CHECKLIST

To perform maintenance items as suggested here, refer to specific information found in this manual and literature supplied with your unit from component part manufacturers.



WARNING: It is important that you carefully read your chassis manufacturer's owner's manual maintenance items. The following list is only a supplement to that list. Failure to follow both lists could be detrimental to the proper operation of your recreation vehicle or cause failures which can cause property damage and personal injury.

Prior to First Trip

- ☐ Check LP gas lines for leaks
- ☐ Test LP gas, smoke and carbon monoxide detector.
- ☐ Sanitize fresh water system.
- ☐ Check wheel nuts at specified intervals to listed torque values. Re-torque as needed. Refer to the chassis manufacturer's manual.
- ☐ Open all windows and the door and start the furnace. Leave the windows and door open and the furnace on until the odor from the initial use of the furnace is fully dissipated.

First Two-Hundred Miles

- ☐ Check wheel nuts at specified intervals to listed torque values. Re-torque as needed. Refer to the chassis manufacturer's manual.
- ☐ Have brakes adjusted by a qualified service technician.

Each Trip

- ☐ Check LP gas lines for leaks
- ☐ Test LP gas, smoke and carbon monoxide detector.
- ☐ Check battery water level. (If equipped with battery.)
- ☐ Check tire pressure and wear. Make sure the tires are cold when checking the tire pressure.
- ☐ Check running lights.
- ☐ Test brakes.
- ☐ Flush out water heater tank.

After Every Tire Change

- ☐ Tighten wheel nuts to specified torque values at 10, 25 and 50 miles (16, 40, and 80 kilometers) to assure that they are correctly "seated" after the tire change. Refer to instructions supplied in the chassis manual.

Daily

- ☐ Recharge battery after each use.
- ☐ Ensure LP gas detector operation light is green in color.

Weekly

- ☐ Check LP gas lines for leaks
- ☐ Test LP gas, smoke and carbon monoxide detector.
- ☐ Check tire pressure and wear. Make sure tires are cold when checking the tire pressure.

Monthly

- ☐ Check fire extinguisher pressure. Refer to the fire extinguisher label for specific instructions.
- ☐ Test the ground fault circuit interrupter (GFCI)

Every Three Months or 3,000 Miles

- ☐ Compare water heater pilot flame with ideal flame. Refer to the water heater owner's manual for ideal flame. Have cleaned and adjusted as necessary by a qualified technician.
- ☐ Compare refrigerator pilot flame with ideal flame. Refer to the refrigerator owner's manual for ideal flame. Have cleaned and adjusted as necessary by a qualified technician. (RV type refrigerator only)
- ☐ Inspect refrigerator door seals.
- ☐ Inspect refrigerator combustion seals. Have cleaned and adjusted as necessary by a qualified technician. (RV type refrigerator only)
- ☐ Check LP gas lines for leaks.
- ☐ Inspect LP cylinders for rust, pits, gouges, scrapes or sharp dents. Repaint cylinders if rust is present.
- ☐ Drain and sanitize fresh water system.
- ☐ Check, clean, tighten and lubricate battery cables.
- ☐ Check wheel nuts at specified intervals to listed torque values. Re-torque as needed. Refer to the chassis manufacturer's manual.
- ☐ Examine the tires for unusual wear, sidewall defects from possible cuts, bulging and abrasions.
- ☐ Lubricate tongue jack.
- ☐ Lubricate hitch ball.
- ☐ Have brakes adjusted by a qualified service technician.

Every Six Months or 6,000 Miles

- ☐ Clean drains with approved drain cleaners.
- ☐ Check pipe connections for tightness. Tighten if necessary.
- ☐ Lubricate all moving parts on the entrance steps.
- ☐ Lubricate entrance and baggage door locks.
- ☐ Clean and lubricate stabilizer jacks.
- ☐ Inspect wheels for cracks, dents or distortion.
- ☐ Inspect and reseal, as necessary, all sealant and putty tape. Refer to information earlier in this chapter.
- ☐ Have suspension system serviced by a qualified service technician.
- ☐ Lubricate the elevating gear on the television antenna.
- ☐ Lubricate the bearing surface between the rotating gear housing and the base plate on the television antenna.
- ☐ Lubricate the rubber quad ring on the elevating shaft located on the television antenna.
- ☐ Perform routine preventative maintenance on the entire motorhome and all component parts.

Every Year or 12,000 Miles


- ☐ Lubricate moving parts on the awning hardware. (Awning option only.)
- ☐ Manually operate the pressure-temperature control lever on the water heater.
- ☐ Clean city water entry strainer.
- ☐ Check demand tank vent for obstructions.
- ☐ Check water pump connections and mountings for tightness.
- ☐ Rotate Fluorescent tubes in the light fixtures.
- ☐ Replace battery on the carbon monoxide detector. (if applicable)
- ☐ Have LP gas system inspected and serviced by a qualified technician.
- ☐ Inspect and seal corners at the threshold of the entrance door.
- ☐ Have the refrigerator inspected and serviced by a qualified technician.
- ☐ Have brakes inspected and serviced by a qualified technician.
- ☐ Repack wheel bearings.
- ☐ Have furnace inspected and serviced by a qualified technician.
- ☐ Inspect and reseal, as necessary, all sealant and putty tape. Refer to information earlier in this chapter.
- ☐ Perform routine preventative maintenance on the entire motorhome and all component parts.

Every Six Years

- ☐ Replace carbon monoxide detector.

STORING YOUR UNIT...

Depending upon your area and where your unit is stored, your camper may be a target for damage from rodents and insects. To protect your camper, never leave food inside the unit and ensure that all surfaces are clean. You may want to place rodent control products in the unit during periods of storage. Mice and other rodents can do a tremendous amount of damage to drapes, cushions, etc. particularly during the winter months. Storing units in fields make them particularly inviting to rodents. Periodically inspect your unit during storage and seal off any areas which can offer an entry point to rodents or insects. Please remember to remove any screens or tape you have used to seal openings before you use the camper again. Special interest publications, such as articles and books offered through TL Enterprises (Trailer Life, Motorhome, etc.) can offer additional and practical advice on the proper storage of your camper. Damage from rodents or insects is not covered under your Jayco Limited Warranty.

 **CAUTION:** When storing your motorhome, it is recommended that the battery be unhooked to avoid draining the battery.

WINTERIZING

Preparing your recreation vehicle for winter is very important for most states and Canada. Failure to prepare the coach will cause the supply lines and the water heater to freeze causing breakage. Repairs due to freezing are not covered under the terms of your Jayco Limited Warranty.

Please keep in mind that your towable RV was not designed for use during sub-freezing weather.

There is no commodity or product that can be added to the fresh water system to ensure freeze protection while the system is in use, other than RV antifreeze. Do not drink water that contains antifreeze. This includes non-toxic RV antifreeze.



WARNING: Do not use Ethylene Glycol (automotive antifreeze) or Methanol (windshield washer antifreeze) in your fresh water system. They are harmful to the water system and may be fatal if swallowed.

There are two methods of winterizing your motorhome based upon the model of your unit. Please read, understand and follow all instructions before beginning.

Air Pressure (all models)

This method will utilize an air hose to blow excess water from the water lines.

1. Make sure all holding tanks are empty.
2. Run the pump until it is dry, this will take approximately 15-20 seconds.
3. Make sure that the five (5) valves in the utility center are set up in the antifreeze/sanitize configuration.
4. Using an air hose and adapter, blow air through the city water connection.
5. Leave the faucets, drains and toilets open. Any remaining water will blow out in five to ten minutes.
6. Pour one cup of non-toxic RV antifreeze into all drain P-traps.

Utility Center with Antifreeze

1. Drain the water tank and water heater completely by opening all faucets and low point drains until the tank and water heater are empty. Make sure all holding tanks are empty.
2. Position the “Control Valves” on the “Utility Panel” to the “Antifreeze/Sanitize Lines” configuration. The low point drains located directly below the utility center must be closed for the antifreeze to siphon through the lines.
3. Attach the intake hose to the “City Water Connection.”



WARNING: Do not use Ethylene Glycol (automobile antifreeze) or methanol (windshield washer fluid) in your fresh water system. They are harmful and can be fatal if swallowed.

4. Put the free end of the hose into a jug of Non-Toxic RV Antifreeze. You will need more than one gallon of antifreeze.
5. Turn the “Water Pump Switch” to the “ON” position and open each faucet until the antifreeze flows through. Do not forget to run the antifreeze through the toilet.
6. Pour at least one cup of antifreeze into each drain to protect the p-traps.
7. Before using the water system again, open the valves A, B, and C, then thoroughly sanitize and flush the whole system. (See instructions under “Sanitizing – Units with Utility Centers.”)

BATTERY

Preparation of battery(ies) for winter storage must be carefully considered, especially the auxiliary battery. Component parts attached to a battery will discharge it in one to three months. Discharged batteries are subject to freezing, breaking and permanent damage. If you are storing your motorhome for an extended period, it is important to charge the battery(ies) every thirty days to maintain a charged condition at 1.265 specific gravity. Disconnect and/or remove the battery to prevent minor amp draw. If removed, store the battery in a cool, dry place and maintain the charge. The positive cable must be protected from contacting metal surfaces.



WARNING: If you replace or unhook your battery, ensure that the wires are connected properly whenever it is hooked up: Positive-Black; Negative-White.

Prior to Storage

N NOTE: If storing for the winter, be sure all winterizing steps are followed. Refer to winterizing section.

- ☐ Drain and flush all holding tanks; fresh water, gray water, black water and hot water tanks.
- ☐ Drain all water lines.
- ☐ Close the LP gas tank valve(s). If your tanks do not already have a cover, purchase at least a vinyl LP tank cover. Make sure the regulator is covered.
- ☐ Disconnect 120-volt electric power to the RV.
- ☐ Remove all batteries from the RV and store in a place where they won't freeze. Batteries that have been frozen will never hold a proper charge.
- ☐ Check your roof and other surfaces to ensure there is no damage and potential leakage that might otherwise go unnoticed until it is too late.
- ☐ Inspect and reseal, as necessary, all sealant and putty tape. Refer to information earlier in this chapter.
- ☐ Turn off 12-volt/120-volt/LP gas to the refrigerator; defrost and clean. Use crumpled newspaper or open boxes of baking soda in the refrigerator to eliminate odors during storage.
- ☐ Remove all perishable items from the interior. Include in this any items that are susceptible to freezing, if storing during the winter months.
- ☐ Cover all external outlets, such as furnace, exhaust, etc. to prevent "critters" from entering.
- ☐ Thoroughly wash the interior and the exterior of your RV.
- ☐ Close all windows and roof vents.
- ☐ Cover tires that are exposed to sunlight to prevent weather checking and other UV damage.
- ☐ Cover the roof air conditioner.
- ☐ Store your RV indoors, under a roof or consider the purchase of a tarp to cover your RV during storage. Make sure you invest in a good tarp that can "breathe."
- ☐ Turn all cushions on edge to prevent the entrapment of moisture/mildew during long term storage.
- ☐ Do not use hydraulic leveling jacks during storage.

During Storage Period

- ☐ Remove snow loads from the top of your RV to prevent damage to the unit's structure.

NOTES

[illegible]

WARRANTY/SERVICE

The following pages contain warranty information. It is our recommendation that you read through Jayco's warranty and all other warranties. If there is any part which you do not understand, consult with your independent, authorized dealer, appropriate component part manufacturer or Jayco for further explanation. The warranty titles are defined as follows:

- **Warranty Registration & Customer Delivery Form** - This form is to be completed by the independent, authorized dealer when you pick up your unit. Once it is completed and signed, the independent, authorized dealer will forward the information to us so we can register your motorhome.
- **Motorized Transferable Warranty** - Also referred to as the 2+3 Warranty, this comes direct from the manufacturer to the original purchaser. It provides limited coverage for 2 years (24 months) against substantial defects in materials and workmanship, and 3 years (36 months) on structure. Beyond this, it can be transferred one time only within the first 2 years (24 months) for a \$100 processing fee.
- **Limited Warranty Transfer Application** - This is the form required to transfer the warranty as indicated above in the Towable Transferable Warranty. This form must be completed and filed as instructed for the transfer to occur. If you have questions, consult with your independent, authorized dealer.

WARRANTY REGISTRATION AND CUSTOMER DELIVERY FORM

Jayco, Inc.
P.O. Box 460
903 South Main Street
Middlebury, IN 46540
(574) 825-0608

Dealer is to assure that this form is properly completed and returned to Jayco within ten (10) working days after delivery.

OWNER'S NAME			DEALER'S NAME		
ADDRESS			ADDRESS		
CITY	STATE	ZIP CODE	CITY	STATE	ZIP CODE
DELIVERY DATE		PHONE NUMBER (DAYTIME)	ODOMETER READING (MUST BE COMPLETED FOR MOTORHOMES)		
JAYCO SERIAL NUMBER			CHASSIS VIN (VEHICLE I.D. NUMBER) (SEVENTEEN DIGITS REQUIRED)		

ALL ITEMS MUST BE MARKED OFF BY THE DEALER IN THE CUSTOMER'S PRESENCE INDICATING PERFORMANCE OR INSTRUCTION AS REQUIRED. PLEASE MARK EACH ITEM OK OR NA (NOT APPLICABLE).

1. ELECTRICAL SYSTEM

- ☐ 120-Volt System
- ☐ 120-Volt Auxiliary Generator Operation
- ☐ 12-Volt System
- ☐ Ground Fault Circuit Interrupter (GFCI)
- ☐ All Interior Lights/Recepts/Switches
- ☐ All Exterior Lights/Recepts/Switches
- ☐ Battery System
- ☐ Monitor Panel
- ☐ Slideout Operation and Maintenance
- ☐ Phone and Cable TV
- ☐ Audio/Video Entertainment System
- ☐ Converter Operation and Use
- ☐ Solar Panel
- ☐ Interior Fans - All

a. Motorized Only

- ☐ Inverter Operation and Use
- ☐ Driver Dash Controls/Switches
- ☐ Hydraulic Leveling Jacks
- ☐ Power Cord/Reel
- ☐ Backup Camera and Monitor

2. LP GAS SYSTEM

- ☐ Location and Maintenance of LP Lines and Connections
- ☐ Maintenance and Operation of Regulator
- ☐ LP Gas Monometer Test (Check for leaks - repair if needed and retest) Set Gas Pressure at _____ in. Water Column
- ☐ Outside Grill Use and Operation

3. WATER/PLUMBING SYSTEM

- ☐ Water Intake/Drain Lines
- ☐ Demand Pump
- ☐ Faucet(s)/Fixture(s)
- ☐ Winterizing/Bypass
- ☐ Outside Shower
- ☐ Shower

3. WATER/PLUMBING SYSTEM CONT.

- ☐ Black Holding Tank(s)
- ☐ Grey Holding Tank(s)
- ☐ Fresh Water Holding Tanks(s)
- ☐ Toilet

4. APPLIANCES

- ☐ Furnace and Thermostat
- ☐ Range/Oven/Hotplate
- ☐ Water Heater
- ☐ Refrigerator
- ☐ Air Conditioner
- ☐ Microwave
- ☐ Central Vacuum
- ☐ Heat Pump
- ☐ Washer/Dryer

5. INTERIOR

- ☐ Curtain/Drapes/Valances/Blinds
- ☐ Beds/Couches/Tables
- ☐ Fire Extinguisher (Check CHARGE ONLY)
- ☐ Interior Trim and Sealants
- ☐ Windows - Crank Mechanisms/Slides/etc.

6. EXTERIOR

- ☐ Doors and Locks - all keys
- ☐ Screen Door
- ☐ Entrance Step
- ☐ Finish - spot paint, touch up and rub out if necessary
- ☐ TV and/or Satellite Antenna Mechanism
- ☐ Vents - all
- ☐ Compartment Doors
- ☐ Trim and Sealants
- ☐ Awnings
- ☐ Bumper/A-Frame - touch up as needed
- ☐ Window and Roof Sealants

7. CHASSIS - MOTORIZED ONLY

- ☐ Check all Fluid Levels
- ☐ Chassis Prep as Recommended by the Manufacturer
- ☐ Tires - Condition and Pressure
- ☐ Wheel Lugs - as outlined in Chassis manual

8. RUNNING GEAR - TOWABLE ONLY

- ☐ Brake Adjustment and Maintenance
- ☐ Bearing Lubrication and Maintenance
- ☐ Brake Wire Connections
- ☐ Hydraulic Brake Fluid and Maintenance
- ☐ A-Frame/Coupler Operation
- ☐ Operate and Lube Jacks
- ☐ Tires - Condition and Pressure Set
- ☐ Tire Pressure _____ psi
- ☐ Wheel Lugs - (Tighten to specs for ft. lb. torque) Review Maintenance - tighten at 10,25,50 miles

9. FOLDING CAMPING TRAILER ONLY

- ☐ Complete Set Up and Closing Demonstration, Proper Leveling

10. GENERAL

- ☐ Wash Vehicle
- ☐ Be certain that all required literature is in the vehicle
- ☐ Be certain that all accessories including remotes are in the vehicle
- ☐ Be certain that all Owner's Manuals are in the vehicle
- ☐ Be certain that the Warranty Forms are completed

DEALER INSTALLED OPTIONS (Dealer installed options are not covered under Jayco's limited warranties.)

OWNER/DEALER INSPECTION

- | | |
|--|---|
| 1. Exterior and interior finish. | 5. Operate all fresh water and plumbing components including faucets, shower, toilet and drain locations. |
| 2. Operate all appliances, optional equipment and accessories and discuss maintenance. | 6. Review tow vehicle, hitch and sway control set-up - test drive. (towables only) |
| 3. Review operation, maintenance and safety of LP Gas System. | 7. Complete review of owner's manuals and highlight safety issues. |
| 4. Explain weight ratings, limitations and proper load distribution and maintenance. | |

I HAVE COMPLETED THE ABOVE INSPECTION ON THIS FAMILY CAMPING VEHICLE AND HAVE TAKEN A TEST DRIVE AT THE TIME OF PURCHASE. I NOTED:

I RECEIVED A COPY OF THE JAYCO LIMITED WARRANTY BEFORE I PURCHASED THIS VEHICLE AND I UNDERSTAND THAT IT IS DESIGNED TO BE USED ONLY FOR RECREATIONAL CAMPING AND TRAVEL.

I AGREE TO THE TERMS ON THE REVERSE SIDE, AND UNDERSTAND THAT I WILL BE REQUIRED TO ARBITRATE ALL MY CLAIMS CONCERNING MY RECREATIONAL VEHICLE RATHER THAN GOING TO COURT.

THE PURCHASER HAS INSPECTED OR BEEN GIVEN THE OPPORTUNITY TO INSPECT THE VEHICLE AND TAKE THE TEST DRIVE, SUPPLIED THE INFORMATION ABOUT HIS/HER NAME AND ADDRESS, BEEN GIVEN THE OPPORTUNITY TO MAKE NOTATIONS IN THE SPACE PROVIDED AND OBSERVED OR RECEIVED SATISFACTORY EXPLANATIONS ABOUT ALL ITEMS LISTED ABOVE.

DATE

PURCHASER'S SIGNATURE

DEALER'S SIGNATURE

INFORMAL DISPUTE RESOLUTION

Jayco and most individuals who purchase RVs manufactured by Jayco agree to resolve any disputes they may have with one another through binding arbitration, rather than court proceedings. Each individual who purchases an RV manufactured by Jayco has the option of signing a document at or near the time of sale that contains the language set forth below. The consumer's signature binds Jayco and the consumer to resolve any potential disputes by binding arbitration. If you have questions regarding this, please contact Jayco or American Arbitration Association at the numbers below.

INFORMAL DISPUTE RESOLUTION AGREEMENT

I am entitled to receive a copy of this Agreement, and I may review it with my attorney before signing. I and anyone making claims on my behalf, or through me, shall submit any and all claims I may have in connection with my recreational vehicle (RV) against any retail dealer, manufacturer, or supplier of component parts, to binding arbitration under the federal Arbitration Act, 9 U.S.C. § 1-14, to the extent permissible under federal law. I agree that if I have a claim relating to my RV, I will allow the dealer and Jayco to inspect it and make necessary repairs. If my claim is not then satisfied, I will notify Jayco and binding arbitration proceedings will be held after I have paid an initial fee of \$125 to the American Arbitration Association and I cannot pursue my claim in court or in any administrative proceeding. Arbitration will be administered by the American Arbitration Association (AAA), pursuant to its Commercial Arbitration Rules, unless and until Jayco designates a different administrator, in which event a notice will be mailed to your last known address. If my claim is less than \$10,000, Jayco will pay the initiation fee and arbitrator's fees in excess of \$125, and the arbitrator shall not award damages in excess of \$10,000. If my claim exceeds that amount or is not specified, I will pay one-half of the fees and costs in excess of \$125. I, the dealer, and Jayco will each pay their own costs and expenses in connection with the arbitration hearing. The claim will be heard by a single arbitrator, and will be held thirty (30) days after the claim is filed, unless all parties agree to a later date. The arbitrator shall be selected from a panel named by the AAA, pursuant to its rules. The arbitrator shall be permitted only to award actual damages for financial loss, and shall not award damages for personal injury (or mental anguish, or other intangible claims), or punitive damages. Statutes of limitation, which would apply to a court proceeding for my claim, will apply to commencement of arbitration proceedings. If I default on any obligation to a lender in connection with my RV, my lender may exercise all of its rights without regard to this agreement. If I file a claim in court without having first complied with this agreement, I will be required to pay all fees, costs, and expenses, including attorneys' fees, for dismissal or referral to arbitration. This agreement will apply to me, my heirs and assigns, and anyone who purchases or leases my RV from me or operates or occupies it with my permission or without objection by me. Nothing in this agreement enlarges my rights or gives me any rights or claims I would not otherwise have. **FOR INFORMATION ABOUT HOW TO FILE A CLAIM OR ABOUT THE ARBITRATION PROGRAM, CALL JAYCO CONSUMER AFFAIRS AT 574-825-0608, OR THE AMERICAN ARBITRATION ASSOCIATION AT 800-778-7879.**

MOTORIZED TRANSFERABLE LIMITED WARRANTY

Two year limited warranty (on Jayco manufactured parts)

Three year structural (on structure manufactured by Jayco)

SUMMARY OF WARRANTY:

Jayco, Inc. (Jayco) warrants every towable recreation vehicle to the first retail consumer and transferee, for a period of two (2) years from the date of purchase under normal use and service, when used for its intended purpose of recreational travel and camping, that all parts manufactured by Jayco, and for three (3) years on the its structural integrity, are free from substantial defects in material and workmanship. This warranty begins on the date the vehicle is sold to the first retail consumer purchaser or, if the dealer places the vehicle in service prior to retail sale, on the date the vehicle is first placed in such service.

This warranty may be transferred only once during the warranty period, with a proper application and a \$100 processing fee. Contact your dealer or Jayco for details.

STRUCTURAL WARRANTY:

Jayco warrants the structural integrity of the interior and exterior sidewalls, floor, roof, and frame against substantial material and manufacturing defects.

EXCLUSIONS:

- (1) This warranty does not apply to any vehicle manufactured more than two (2) years prior to the first retail sale, unless Jayco has issued an eligibility certificate for this specific vehicle VIN #. This may require reinspection by a Jayco representative.
- (2) Items added or changed after the vehicle left the possession of Jayco.
- (3) Any vehicle used for commercial purposes.
- (4) Normal wear and usage, such as fading or discoloration of soft goods (upholstery, drapes, carpet, vinyl, screens, cushions, mattresses), fading or discoloration of exterior plastic or fiberglass components, tears, punctures, soiling, mildew, effects of moisture condensation inside the vehicle, or mishandling, neglect, abuse, misuse, lightning or other acts of nature, or corrosive atmospheres which can result in rusting, oxidation or pitting.
- (5) Minor imperfections, which do not affect the suitability of the vehicle for its intended use.
- (6) Normal and routine maintenance such as inspections, lubricating, adjustments, tightening of screws, tightening of lug nuts, sealing, cleaning, or damages arising from the failure to have maintenance performed as outlined in the owners manual and/or the component manuals.
- (7) Wheel alignment or adjustments to axles when caused by improper maintenance, loading or damage from road hazards, including off road travel, wheel damage or balancing, or damage resulting from tire failures.
- (8) Costs incurred for on site service, transportation of the vehicle to a dealer or costs incurred as the result of the consumer's request to have repairs performed at a location other than an authorized dealership.
- (9) Tires, Batteries, Microwave, Television, VCR and DVD players that are supported by other established dealer network and warranty repair locations. The written warranty that is provided by component manufacturers is a direct responsibility of that manufacturer.

JAYCO'S RESPONSIBILITY

Any part of the vehicle subject to warranty, which is found to be defective in material or workmanship, will be repaired or replaced at Jayco's option without charge to the customer for parts or labor. While any Jayco dealer can perform the warranty service, we recommend the purchaser return to the selling dealer. If the customer has moved or is touring the United States or Canada, please contact the nearest Jayco dealer for service or for purchasing parts.

HOW TO OBTAIN WARRANTY SERVICE:

In the event that a substantial defect in materials or workmanship is found to exist in parts warranted by Jayco, Jayco will bear the cost of the repair or replacement of such defective materials or workmanship, provided that the owner:

- (A) Notifies an authorized Jayco dealer or Jayco of the defect (If you are traveling or have recently moved, locate the nearest Jayco authorized dealer on the Internet at www.jayco.com.) no later than 10 days after the expiration of the warranty.
- (B) Schedules an appointment and promptly takes the vehicle to the Jayco service center for necessary repairs.
- (C) Pays any freight or transportation costs, or import duties or fees involved.

No action to enforce this warranty shall be commenced later than three (3) months after expiration of the warranty period.

NOTE: Jayco does not control the scheduling of service work at dealerships. You may encounter some delay in scheduling or completion of work.

If the above steps have been taken and the repairs still have not been made, the customer should contact Jayco, at P.O. Box 460, Middlebury, Indiana 46540, Attn: After Market Services.

PURCHASER'S OBLIGATIONS:

Purchaser shall notify Jayco and deliver this vehicle for warranty service within a reasonable time after discovery of the defect and in no event later than ten (10) days after expiration of the warranty period. All incidental and consequential expenses incurred by Purchaser in obtaining warranty service shall be borne by Purchaser. No action to enforce this warranty shall be commenced later than three (3) months after expiration of the warranty period.

CARE AND MAINTENANCE

It is the Purchaser's responsibility to perform the care, maintenance and assure correct load distribution as outlined in the Jayco owner's manual. Other, separate manuals outline additional component care and maintenance. Please review all manuals supplied with your unit, and contact your dealer or the supplier if you have questions. Any damage to the vehicle as a result of the Purchaser's failure to perform such care, is not covered by the Jayco warranty.

INSTALLATIONS NOT COVERED

Jayco cannot and does not accept any responsibility in connection with any of its towable products, for additional equipment or accessories installed at any dealership or other place of business, or by any other party other than Jayco, Inc. Installation of equipment or accessories installed by any other party other than Jayco, Inc. will not be covered under the terms of Jayco's limited warranty.

PARTS AND DESIGN CHANGES:

Jayco may make parts and design changes from time to time without notice and repair and replacements may be made with new or different parts. Jayco reserves the right to make changes in the design or material or its products without incurring any obligation to incorporate such changes in any product previously manufactured.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:

You and any other user of Jayco products shall not be entitled to any consequential or incidental damages, including without limitation, loss of use of the unit, inconvenience, lodging, damage to personal property, alternate transportation, phone calls, meals, lost income or earnings. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

DISCLAIMER AND LIMITATIONS OF IMPLIED WARRANTIES:

Jayco does not authorize any person to create for it any other obligation or liability in connection with the vehicle. Any implied warranty of merchantability or fitness for a particular purpose applicable to this vehicle is limited in duration to the duration of this written warranty. The performance of repairs is the exclusive remedy under this written warranty or any implied warranty. Jayco shall not be liable for incidental or consequential damages resulting from breach of this written warranty or any implied warranty. Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

WARRANTY REGISTRATION:

Your warranty registration records should be completed and delivered to the manufacturers of component parts. Your Jayco Dealer will assist you in filling out the Jayco product warranty registration form, which must be returned to Jayco within ten (10) days of your taking delivery of your Jayco product. Your Jayco warranty will not be registered unless the warranty registration is completed and mailed to Jayco. Failure to file this warranty registration can cause you delays in obtaining the benefits of your Jayco Limited Warranty.

All inquiries regarding this Warranty should be sent to:

JAYCO, INC.

903 South Main * P.O. Box 460 * Middlebury, IN 46540

LIMITED WARRANTY TRANSFER

The warranty on your unit is transferrable one time only during the first two (2) years of ownership. This form as shown here and on the next page must be completed and sent with the \$100.00 to Jayco, Attention: After Market Services. If you have questions, consult with your dealer for assistance.

**LIMITED WARRANTY TRANSFER APPLICATION**

Mail original copy of Jayco, Inc. Limited Warranty Transfer Application, along with a transfer fee of \$100.00 payable to:

Jayco, Inc.
Warranty Dept.
P.O. Box 460
Middlebury, IN 46540

REQUIRED FIELD

Vehicle Identification Number _____

Transfer Coverage To:**A**NEW
OWNER
INFORMATION

Last Name _____

First Name _____

Owner Address 1 _____

Owner Address 2 _____

Owner Address 3 _____

City _____

State _____

Zip _____

Phone Number _____

____/____/____
Date of Transfer____/____/____
Odometer Reading at Transfer**MUST BE COMPLETED ON ALL MOTORIZED VEHICLES****Transfer Coverage From:****B**PRIOR
OWNER
INFORMATION

Last Name _____

First Name _____

CSELLING
DEALER
INFORMATION
(IF APPLICABLE)

Dealership Name _____

Dealer Address 1 _____

Dealer Address 2 _____

Dealer Address 3 _____

City _____

State _____

Zip _____

Phone Number _____

PLEASE READ TERMS AND REPRESENTATIONS PRIOR TO SIGNING.**D**ALL TITLED
OWNER
SIGNATURES

I HAVE READ AND AGREE TO THE TERMS AND CONDITIONS ON THE BACK OF THIS FORM, AND UNDERSTAND THAT I WILL BE REQUIRED TO ARBITRATE ALL MY CLAIMS CONCERNING MY VEHICLE.

New Owner's Signature _____

New Owner's Signature _____

New Owner's Signature _____

Selling Dealer's Signature _____

THE BASIC 2 + 3 JAYCO, INC. LIMITED WARRANTIES MAY BE TRANSFERRED ONE (1) TIME DURING THE WARRANTY PERIOD WITH THIS APPLICATION AND A \$100.00 PROCESSING FEE. THE TRANSFER MUST BE DONE WITHIN THE FIRST TWO YEARS OF OWNERSHIP.

TERMS AND REPRESENTATIONS

By my signature(s) on the face side of this form, and in order to induce Jayco, Inc. to transfer its Limited Warranty, I represent the following:

1. That I have received and read a copy of the Jayco Limited Warranty and Owner's Manual.
2. I understand that the unit is to be used only for recreational camping and travel.
3. That all information provided by me on the face side of this form is true and correct.
4. I understand that I am purchasing a pre-owned recreational vehicle and Jayco, Inc. does not make any representation as to its present condition.
5. I understand and agree that all my claims against Jayco must be arbitrated and that a court will enforce the arbitration award. The terms of arbitration are set forth below:

INFORMAL DISPUTE RESOLUTION AGREEMENT

I am entitled to receive a copy of this Agreement, and I may review it with my attorney before signing. I and anyone making claims on my behalf, or through me, shall submit any and all claims I may have in connection with my recreational vehicle (RV) against any retail dealer, manufacturer, or supplier of component parts, to binding arbitration under the federal Arbitration Act, 9 U.S.C. § 1-14, to the extent permissible under federal law. I agree that if I have a claim relating to my RV, I will allow the dealer and Jayco to inspect it and make necessary repairs. If my claim is not then satisfied, I will notify Jayco and binding arbitration proceedings will be held after I have paid an initial fee of \$125 to the American Arbitration Association and I cannot pursue my claim in court or in any administrative proceeding. Arbitration will be administered by the American Arbitration Association (AAA), pursuant to its Commercial Arbitration Rules, unless and until Jayco designates a different administrator, in which event a notice will be mailed to your last known address. If my claim is less than \$10,000, Jayco will pay the initiation fee and arbitrator's fees in excess of \$125, and the arbitrator shall not award damages in excess of \$10,000. If my claim exceeds that amount or is not specified, I will pay one-half of the fees and costs in excess of \$125. I, the dealer, and Jayco will each pay their own costs and expenses in connection with the arbitration hearing. The claim will be heard by a single arbitrator, and will be held thirty (30) days after the claim is filed, unless all parties agree to a later date. The arbitrator shall be selected from a panel named by the AAA, pursuant to its rules. The arbitrator shall be permitted only to award actual damages for financial loss, and shall not award damages for personal injury (or mental anguish, or other intangible claims), or punitive damages. Statutes of limitation, which would apply to a court proceeding for my claim, will apply to commencement of arbitration proceedings. If I default on any obligation to a lender in connection with my RV, my lender may exercise all of its rights without regard to this agreement. If I file a claim in court without having first complied with this agreement, I will be required to pay all fees, costs, and expenses, including attorneys' fees, for dismissal or referral to arbitration. This agreement will apply to me, my heirs and assigns, and anyone who purchases or leases my RV from me or operates or occupies it with my permission or without objection by me. Nothing in this agreement enlarges my rights or gives me any rights or claims I would not otherwise have. **FOR INFORMATION ABOUT HOW TO FILE A CLAIM OR ABOUT THE ARBITRATION PROGRAM, CALL JAYCO CONSUMER AFFAIRS AT 574-825-0608, OR THE AMERICAN ARBITRATION ASSOCIATION AT 800-778-7879.**

SERVICE PROCEDURES

Basic Service Procedures

We are interested in your satisfaction. Only by having your complete confidence and satisfaction with our product and its service can we assure our continued success as manufacturers of recreation vehicles. We have found that continuing a pleasant and effective relationship through our independent, authorized dealers is equally as important as maintaining the technical excellence of our product. Your independent, authorized dealer will cordially assist you in providing service, maintenance, selection of options and instructions concerning the operation of your vehicle.

If you have a problem with your motorhome that requires service, please follow these instructions in sequence.

1. **Contact your selling independent, authorized dealer's service department for an appointment.** Describe to the best of your knowledge the nature of the problem.
2. Contact the owner or General Manager of the independent, authorized dealership if the initial attempt fails with the service department.
3. If further assistance is needed, contact:

After Market Services

Jayco Incorporated

P.O. Box 460

Middlebury, IN 46540

Email: service@jayco.com

Business Hours: Monday – Friday 8:00 – 5:00 EST

Give all the above information as requested, along with the serial number of the unit in question and we will make every attempt to help you resolve your repair needs. **It is important that you contact your selling independent, authorized dealer before Jayco. In most cases, the independent, authorized dealer can provide the service you require.**

If you are traveling and are unable to locate an independent, authorized Jayco dealer, or an authorized dealer for the component part needing service, contact your selling independent, authorized dealer for assistance.

(N) NOTE: Service at a non-authorized Jayco dealer needs prior authorization. You will be asked to return any mechanical parts replaced before reimbursement consideration is made. Unauthorized or improper repairs may void Jayco's warranty and the warranty on the component part.

Please keep your owner's manual, your copy of the warranty registration form and any other related papers in your RV.

Please bear in mind that most problems arise from misunderstandings concerning warranty coverage and service. In most instances, you will be referred to the independent, authorized dealer level and your repair needs will be resolved at the independent, authorized dealer's facilities.

CALIFORNIA LEMON LAW NOTICE: If you have determined that your vehicle has nonconformities under the California Lemon Law, you must provide written notice of the claimed defects directly to Jayco in Middlebury, Indiana at the address for warranty service, and permit Jayco to perform a final repair attempt.

Independent, Authorized Dealer

When you purchased your Jayco RV, we trust you had a pleasant experience. We consider the network of independent, authorized dealers to be some of the best in the RV business. This group of independent contractors is an integral part of Jayco's continued success.

Throughout this manual, we will refer you to your independent, authorized dealer for assistance with certain component parts or procedures. If you are traveling outside your independent, authorized dealer's area, you are never far from another independent, authorized Jayco dealer, with over 300 dealerships in our network.

Your independent, authorized dealer has inspected and serviced your new Jayco RV. The independent, authorized dealers are available for service and maintenance to your motorhome. All warranty repairs should be performed by an independent, authorized dealer unless Jayco gives prior approval.

Some RV dealers may be a service center for manufacturers of products warranted separately. To reduce delays, contact your independent, authorized dealer for service available through them. If your independent, authorized dealer is not a service center for the product in question, they can assist you in finding service.

Parts

Parts are available at dealerships or your independent, authorized dealer can order parts for you as needed. **All retail parts inquiries should be routed through your independent, authorized dealer.**

Owner's Responsibility

As a new owner of a Jayco recreation vehicle, you are responsible for understanding how your trailer, and its various component parts, work and need to be maintained. You are also responsible for the regular and proper maintenance of your RV. This will help you prevent conditions arising from neglect that are not covered by your Jayco Limited Warranty.

Maintenance service should be performed in accordance with this owner's manual and any other applicable manuals.

As the owner, it is your responsibility and obligation to return the RV to an independent, authorized dealer for repairs and service. Reference your Jayco Limited Warranty for additional information. Because the independent, authorized dealer where you purchased your RV is responsible for its servicing before delivery and has an interest in your continued satisfaction, we recommend that inspection, warranty and maintenance services be performed by that independent, authorized dealership.

Manufacturer's Customer Support Directory

The following chart provides information to contact individual manufacturers of appliances that may be part of your motorhome. If you have questions or concerns on component parts not listed here, contact your independent, authorized dealer for further assistance.

Appliance	Manufacturer	Website	Phone #
Air Conditioner	Coleman	www.rvcomfort.com/rv_products.htm	316-832-4357
Antenna, TV	Winegard	www.winegard.com	800-788-4417
Awning	Carefree of Colorado	www.carefreeofcolorado.com	800-622-3230
Back-up Camera	Audiovox	www.audiovox.com	800-645-4994
Converter	Iota	www.iotaengineering.com	N/A
DVD/CD Player	Panasonic	www.panasonic.com	N/A
Electric Step	Kwikkee	www.kwikkee.com	800-736-9961
Exhaust Fan	Ventline	www.ventline.com	888-255-4107
Exterior Radio	Audiovox	www.audiovox.com	800-645-4994
Furnace	Hydro-Flame/Atwood	www.atwoodmobile.com	815-877-5700
Generator	Onan	www.onan.com	800-888-6626
Inverter	Xantrex	www.xantrex.com	800-670-0707
Microwave	Samsung	www.samsung.com	800-726-7864
Outside Grill	Vitco	www.vitco.com	877-736-2635
Range Hood	Ventline	www.ventline.com	574-848-4491
Range	Atwood	www.atwoodmobile.com	815-877-5700
Refrigerator	Norcold	www.norcold.com/norcold_home.cfm	800-543-1219
Satellite Dish	Winegard	www.winegard.com	800-788-4417
Surround Sound Stereo	Mito	www.mitocorp.com	800-433-6486
Tires	Contact your local tire distributor for assistance		
Toilet	Thetford	www.thetford.com/thetford_home.cfm	800-521-3032
Water Heater	Atwood	www.atwoodmobile.com	815-877-5700
Water Pump	Shur-Flo	www.shurflo.com	800-854-3218
Wheel Liners	Versa-Liner	www.dicor.com	800-837-2059
Fiberglass Exterior	Owens Corning	www.fabricatingsolutions.com	574-522-8473
Slideout System	Power Gear/ Milwaukee Cylinder	www.milwaukeeecylinder.com	800-334-4712

INDEX

A		
ABS Plastics	65	Chlorine Odor 40
Air Conditioner		City Fill Connection. 27,39
maintenance	64	Clearance Lights 62
operation.	35	Cold Weather Use 8
Antenna.	24	Condensation. 9
Appliances		Converter
air conditioner	35	LP gas related 47
furnace.	33	Countertops. 67
microwave.	33	Cushions 66
range.	33	Customer Support
refrigerator	33	component part manufacturer's
water heater	34	directory 86
Auxiliary Battery		D
recharge	51	Danger 3
Auxiliary Start System	52	Dealer. 85
Awning Set Up	27	Demand Pump 30
B		Doors Maintenance. 62
Back Up Camera	18	Draining
Bathroom	34	fresh water. 40
Battery		fresh water tanks 40
auxiliary	36,51	holding tanks 56
LP gas related	47	E
maintenance	64	Electric 48
storage.	74	120-volt AC 48
Battery Isolator	52	12-volt DC system 51
BBQ Grill.	37	30 amp service 50
Bedspread.	66	changes, modifications and additions . 54
Bumper - Rear	14	circuit breaker safety 5
C		consumption - 120-volt 50
Cable	25	extension cord. 48
Campsite		fuse safety 5
selecting	23	GFCI. 49
Canadian Standards Associations	1	hook up 27
Carbon Monoxide Detector	6	power cord. 48
maintenance	64	power cord safety. 5
Cargo Capacity	11	power surges 27,48
Cargo Carrying Capacity	11	safety 5
Carpeting	67	Electric Door Step 18
Caution		Emptying Holding Tanks. 31
personal injury related	3	Entrance Door
property related.	3	maintenance 62
Chassis Maintenance	60	Equipment
Checklist		entertainment 36
departing camp	55	Extended Use 8
maintenance	70	Extension Cords 48
pre-travel	19	F
prior to storage	75	Faucets 34
		Federal Certification Label. 11

Fiberglass Sidewalls	59	safety	4
Filter Replacement		start up.	30
water purification system	35	system maintenance	63
Fire Extinguisher.	5	tank	44
Front Axle Alignment	61	M	
Furnace	33	Maintenance	59
maintenance	63	Master Battery Switch	52
Furniture	65	Microwave	33
Fuse Chart	53	Monitor Panel.	36
G		Motorhome	
Generator	36,52	leveling	24
Gravity Fill	27	Motorhome Weight Information Label.	11
Gross Axle Weight Rating	11	Motorized Transferable Warranty	
Gross Combination Weight Rating.	11	definition	77
Gross Vehicle Weight Rating	11,12,15	form	80
Ground Fault Current Interrupter.	49	N	
H		National Highway Traffic Safety	
Heated Holding Tanks	42	Administration	3
Holding Tank(s)		No-Fuss Flush System	31
weight of full tank(s)	13	Note	3
Holding Tanks	41	O	
draining	56	Owner's Responsibility.	85
I		P	
Insurance.	9	Paneling.	66
Inverter	52	Parts Ordering	85
L		Plumbing	39
Ladder	59	POL Adapter	46
Leveling Motorhome.	24	Potable Water System	
Lights		sanitizing	39
bulbs.	53	Power Cord	48
dome.	53	Power surges	27,48
exterior	53	P-trap	57
Limited Warranty Transfer Application		Q	
definition	77	Quick-Coupler	37
form	82	R	
Loading Cargo	12	Range	33
Low-point Drains.	40	Recreation Vehicle Industry Association	1
LP Detector.	47	Refrigerator.	33
LP Gas	42	Regulator	46
BBQ grill quick coupler.	37	Roof.	59
checking for leaks	4	Roof Ladder	59
connections	30	S	
consumption.	46	Safety	
container		additional considerations	8
servicing and filling	45	considerations.	3
detector	47	defects	3
leak test	4	electrical	5
main supply hose	46	emergency stopping	7
regulator	46		

LP gas	4	V	
smoke detector	7	Vacuum Breaker	34
Safety Alert Symbol	3	Vents	
Sanitation	41	sanitation system	41
Sanitizing		Vinyl Floor	66
utility center	39	W	
Satellite	25	Warning	3
Sealing	60	Warranty	
Service Procedures	84	limited transfer application definition.	77
Sink	65	limited transfer application form	82
Slideout	25,67	motorized transferable definition	77
components	25	motorized transferable form.	80
operation.	26	registration & customer delivery	
overriding	68	definition	77
travel bars	26	registration & customer delivery form	78
troubleshooting	67	Warranty Registration & Customer Delivery	
Smoke Detector	7	definition	77
Spare Tire Carrier	61	form	78
Stabilizer Jacks	24	Waste	
Storing Your Unit	73	disposal	31
T		no-fuss flush system.	31
Tank		Water	
black	41	fresh water tank	29
gray	41	hook up	27
waste.	41	pump.	30
Tanks		utility center label	28
heated	42	utility center operation	29
Television		Water Filter Cartridge	35
antenna	24	Water Heater	34
cable	24	Water Pressure Regulators	30
satellite	24	Water Pump Switch	39
Termination Valves.	56	Water Purification System	35
Tire	16	Water System Control Valves	39
pressure	16	Weighing Instructions	14
safety	8	Weight	
Toilet.	34,41,65	capacity rating.	12
Tub	65	cargo carrying capacity	11
TV Antenna		gross axle weight rating	11
maintenance	64	gross combination weight rating	11
U		gross vehicle weight rating	11,12,15
Unloaded Vehicle Weight	11	holding tank(s)	13
Utilities	39	unloaded vehicle weight.	11
Utility Center		Weight Capacity	11
label definitions	28	Wheel Liners	62
operation	29,39	Wheel Lugs.	17
Utility Hookups.	27	Window Treatments	66
Utility Panel	39	Winterizing	73
		utility center	74
		water purification system	35
		with air pressure.	73

NOTES

[illegible]

SUBSEQUENT OWNER

This card is to be used for the notification
of transfer of ownership only.

If you have submitted the paperwork to transfer warranty,
please do not use this card.

C
H
A
N
G
E

O
F

O
W
N
E
R
S
H
I
P

ATTENTION!

 
Subsequent Owner

WE NEED YOUR HELP! FEDERAL RECORD KEEPING LAWS REQUIRE
THAT WE MAINTAIN A FILE OF OWNERS OF OUR PRODUCT, YOUR
COOPERATION IN FILLING OUT THE CARD WILL BE APPRECIATED.

MODEL INFORMATION: YEAR _____ MODEL _____
LENGTH _____ SERIAL NUMBER _____

NEW OWNER INFORMATION PURCHASE DATE _____
NAME _____
ADDRESS _____
CITY _____ STATE/PROVINCE _____ ZIP _____

PREVIOUS OWNER INFORMATION PURCHASE DATE _____
NAME _____
ADDRESS _____
CITY _____ STATE/PROVINCE _____ ZIP _____




BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 21 MIDDLEBURY IN

POSTAGE WILL BE PAID BY THE ADDRESSEE

 NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



Jayco, Inc.

P.O. Box 460

Middlebury, IN 46540-9904

