

## SLIDE-OUTS

### Purpose

This document provides the steps to correct squeaking in through frame slide-out gear packs.

### Instructions

1. Loosen both gear packs bolts (Fig. 1A and Fig. 1B) until tension is off of the gear pack.
  2. Apply dry silicone onto gear pack drive shaft at lubrication points (Fig. 2A), (Fig. 3A), (Fig. 4A through D).
- NOTE:** Do not lubricate rack or pinion gear teeth, lubricate drive shaft only.
3. Extend and retract slide-out arms several times to work lubricant through gear pack.


Fig. 1



A


B

Fig. 2

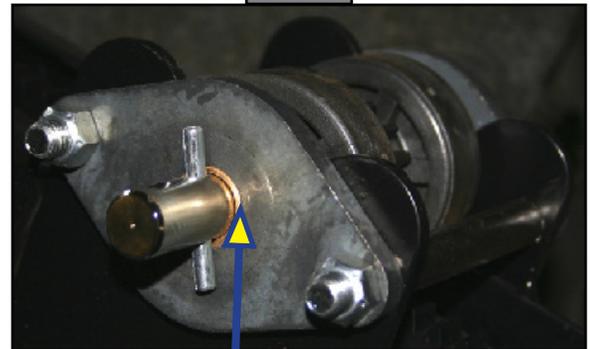


A

Fig. 3

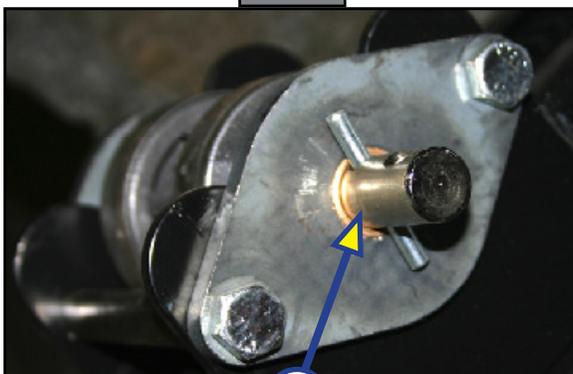

A

Fig. 4

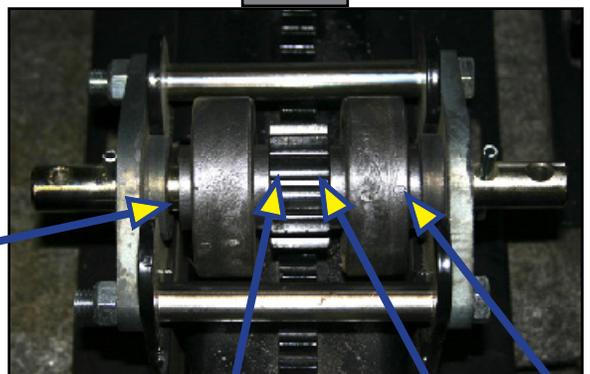

A

B

C

D

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at [customerservice@lci1.com](mailto:customerservice@lci1.com). Self-help tips, technical documents, product videos and a training class schedule are available at [lci1.com](http://lci1.com) or by downloading the MyLCI app.